

FriendlyNet FH100TX5

5-Port Fast Ethernet Hub

User's Manual

Asanté Technologies, Inc.
821 Fox Lane
San Jose, CA 95131

Copyright Notice

Copyright 1997 by Asanté Technologies, Inc.

All rights reserved. No part of this manual, or any associated artwork, software, product design or design concept, may be copied, reproduced or stored, in whole or in part, in any form or by any means mechanical, electronic, optical, photocopying, recording or otherwise, including translation to another language or format, without the express written consent of Asanté Technologies, Inc.

Trademarks

Asanté Technologies and FriendlyNet are trademarks of Asanté Technologies, Inc. Ethernet is a registered trademark of the Xerox Corporation. All brand names and products are trademarks or registered trademarks of their respective holders.

FCC Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Operation of this equipment in a residential area is likely to cause interference, in which case, the user, at his or her own risk and expense, will be required to correct the interference.

Declaration of Conformity

Asanté Technologies, Inc. declares that the FriendlyNet Fast Ethernet Hub conforms with the following standards, in accordance with the provisions of the EC Directive 89/336/EEC: EN 55022:1994, EN50082-1:1992, IEC 801-2, IEC 801-3, IEC801-4:1988.

Asanté Warranty

Asanté Technologies, Inc. warrants that this product will be free from defects in title, materials and manufacturing workmanship. If the product is found to be defective, then, as your sole remedy and as the manufacturer's only obligation, Asanté Technologies, Inc. will repair or replace the product.

This warranty is exclusive and is limited to the FriendlyNet Fast Ethernet Hub. This warranty shall not apply to products that have been subjected to abuse, misuse, abnormal electrical or environmental conditions, or any condition other than what can be considered normal use.

Warranty Disclaimers

Asanté Technologies, Inc. makes no other warranties, express, implied or otherwise, regarding the FriendlyNet Fast Ethernet Hub, and specifically disclaims any warranty for merchantability or fitness for a particular purpose.

The exclusion of implied warranties is not permitted in some states and the exclusions specified herein may not apply to you. This warranty provides you with specific legal rights. There may be other rights that you have which vary from state to state.

Limitation of Liability

The liability of Asanté Technologies, Inc. arising from this warranty and sale shall be limited to a refund of the purchase price. In no event shall Asanté Technologies, Inc. be liable for costs of procurement of substitute products or services, or for any lost profits, or for any consequential, incidental, direct or indirect damages, however caused and on any theory of liability, arising from this warranty and sale. These limitations shall apply notwithstanding any failure of essential purpose of any limited remedy.

Table of Contents

Introduction.....	1-1
FriendlyNet FH100TX5 Fast Ethernet Hub	1-1
Network Reliability	1-1
Features.....	1-2
Package Contents.....	1-2
Installation.....	2-1
Planning 100Base-TX Networks.....	2-1
Cabling Requirements.....	2-2
Voltage Requirements.....	2-2
Connecting Network Devices.....	2-3
100Base-T Station to Hub Connection	2-3
Hub to Hub Connection (Cascading Hubs)	2-4
Multiple Hub and Station Configuration	2-5
Wall Mounting the FriendlyNet Hub.....	2-6
LED Indicators	3-1
Power LED	3-1
Collision LED	3-2
Link/Activity LEDs	3-2
Partition LEDs	3-2
Troubleshooting	A-1
Specifications.....	B-1
Technical Support.....	C-1

Introduction

FriendlyNet FH100TX5 Fast Ethernet Hub

Thank you for purchasing the Asanté FriendlyNet FH100TX5, a 5-port Fast Ethernet Hub designed to give you the ultimate in flexibility, ease-of-use, and reliability.

The FH100TX5 Fast Ethernet Hub is a 100Base-TX multiport repeater for use with networks using Unshielded Twisted Pair (UTP) Category 5 cable or Shielded Twisted Pair (STP) cable.



Figure 1-1 FH100TX5 Fast Ethernet Hub

The hub is simple to install and features power, collision, link/activity, and partition LEDs for easy monitoring of the hub and its ports.

For network expansion, the hub has an uplink port that makes it easy to connect it to another Fast Ethernet hub.

Network Reliability

To ensure network reliability, the hub monitors each port for signal quality and automatically disconnects stations transmitting excessive noise, reconnecting them when the problem is resolved.

The hub automatically truncates data packets that exceed the maximum length for IEEE 802.3u, preventing a device from blocking the network by transmitting continuous data streams or extra long packets.

Features

- o Plug-and-Play installation
- o Connects up to five 100Base-TX segments per hub; uplink port can be used to connect to another hub or hub stack
- o Performs automatic partitioning of ports
- o Complies with the IEEE 802.3u Fast Ethernet standard
- o Works with Category 5 UTP or STP cable
- o Contains power, collision, link/activity, and partition LEDs to aid network diagnosis and management
- o Compact design; install on desktop or mount on wall

Package Contents

- o 5-port FriendlyNet Fast Ethernet Hub (FH100TX5)
- o External power adapter (12 Vdc)
- o Four self-adhesive rubber feet
- o One wall-mount kit (two screws and two screw anchors)
- o User's Manual (this book)

2

Installation

Installation of the FH100TX5 hub consists of the following steps:

- o Plan your 100Base-TX network.
- o Review cabling and voltage requirements.
- o Connect your hub to network devices.
- o Mount the hub to a wall or countertop.

Planning 100Base-TX Networks

100Base-TX networks need to be planned out slightly different from 10Base-T network because new hubs and new wiring configurations are necessary.

Follow the guidelines below when planning your 100Base-TX network configuration:

- o 100Base-TX supports a maximum cable length (distance from a network station to the hub) of 100 meters.
- o The total network diameter (the maximum cable distance between any two stations on the network) is 205 meters for 100Base-TX.
- o Because 100Base-TX sends signals 10-times faster than 10Base-T, the collision window (the time during which the network can detect a collision between packets) is reduced to one-tenth the duration of the 10Base-T collision window, making the maximum network diameter smaller.
- o Only two hubs can be cascaded together (in a repeater environment, 100Base-TX allows only a single layer of cascaded hubs). See Figure 2-1.

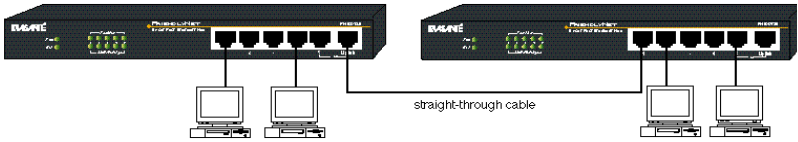


Figure 2-1 Sample 100Base-TX network layout

Cabling Requirements

100Base-TX requires data-grade (Category 5) UTP (Unshielded Twisted Pair) cable.

- s Important: Some installations have Category 5 cabling but do not have wall outlets and/or wiring closet punch-down blocks that meet Category 5 requirements.

100Base-TX requires that all wiring and accessories meet EIA/TIA 568B specifications for proper operation. When wiring a 100Base-TX network, make sure that the entire cable plant meets specifications.

Voltage Requirements

- s Important: Check the AC power line voltage used in your area. The AC power adapter included with your hub must match the power supply voltage used in your area.
 - o AC input power: Equal to the AC power voltage used in your area
 - o DC output power: 12Vdc

Connecting Network Devices

Before you connect the hub to other devices, review the following guidelines:

- o Make sure the network cable length is less than 100 meters.
- o Use a straight-through twisted pair cable.
- o When connecting two hubs together (cascading hubs), make sure that the link between them is not longer than five meters.
- o Network cable segments can be connected to, or disconnected from, the hub while the hub's power is on.

100Base-T Station to Hub Connection

To connect a 100Base-T network station to the hub, follow the instructions and diagram below.

- 1 Connect one end of a straight-through Category 5 network cable to an RJ-45 port on the hub.
- 2 Connect the other end of the cable to the network station's Ethernet adapter.

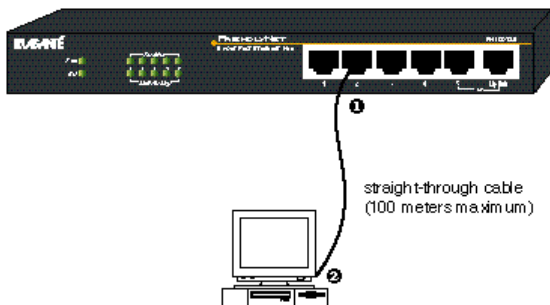


Figure 2-2 Connecting a 100Base-TX station to the hub

Hub to Hub Connection (Cascading Hubs)

To connect two hubs together, follow the instructions and diagram below.

- s Important: When using the uplink port on an FH100TX5 hub, that hub's port #5 cannot be used. The hub's uplink port and port #5 CANNOT be used simultaneously.
 - o Do NOT connect two hubs' uplink ports together.
 - o Do NOT use a crossover cable with the uplink port.
 - o A maximum of two Fast Ethernet hubs can be connected together in a 100Base-TX repeater environment.
 - o When connecting two Fast Ethernet hubs, make sure the link between them is not longer than five meters.
- 1 Connect one end of a straight-through network cable to the UPLINK port on one of the hubs.
 - 2 Connect the other end of the cable to an RJ-45 port (any port labeled from 1 to 5) on the other hub.

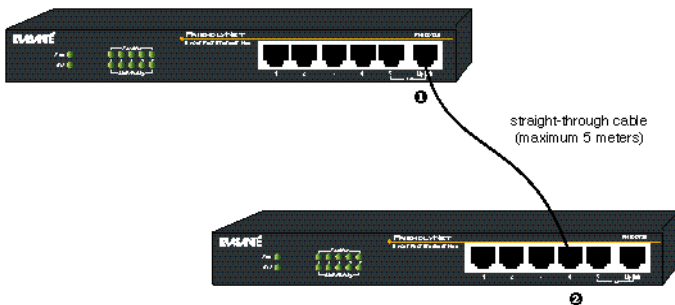


Figure 2-3 Connecting two FriendlyNet Fast Ethernet Hubs

Multiple Hub and Station Configuration

To connect two FriendlyNet Hubs and multiple Fast Ethernet network stations, follow the guidelines and diagram below.

- s Important: Your Fast Ethernet network configuration must comply with the IEEE 802.3u standard.
- o The maximum number of 100Base-TX hubs between any two network stations is TWO.
- o The maximum cable distance between any two stations on the network is 205 meters

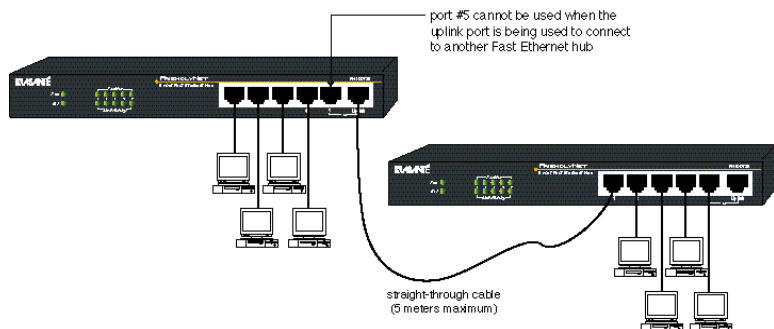


Figure 2-4 Connecting two hubs and multiple network stations

Wall Mounting the FriendlyNet Hub

The FriendlyNet Fast Ethernet Hub can be mounted to a wall or to the surface of a countertop using the screws included with the hub.

To mount the hub to a wall or countertop:

- 1 Screw one of the enclosed 1/2-inch screws into a wall (or countertop), leaving approximately 1/4 inch of the screw's threads exposed.
- 2 Align the other screw with the first screw, leaving approximately 2 inches between the two.
- 3 Screw the second screw into the wall/countertop.
- 4 Line up the keyholes on the bottom of the hub with the mounted screws.
- 5 Hang or place the hub on the screws. See Figure 2-5.

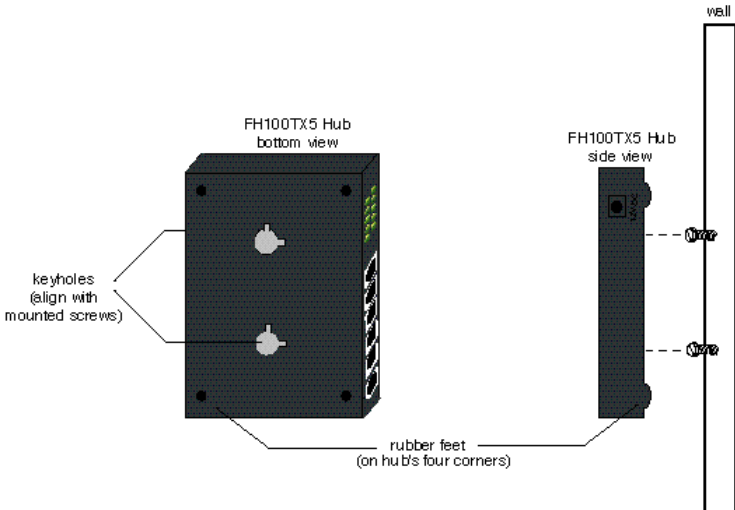


Figure 2-5 Wall-mounting a FriendlyNet Fast Ethernet Hub

3

LED Indicators

LED Indicators

The FriendlyNet FH100TX5 Fast Ethernet hub contains LEDs that represent the following:

- o Power
- o Collision
- o Link/Activity
- o Partition

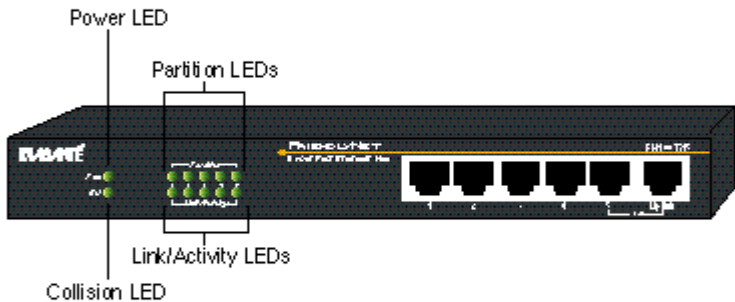


Figure 3-1 FriendlyNet FH100TX5 Fast Ethernet Hub LEDs

Power LED

The green PWR (power) LED on the hub's front panel illuminates when the hub is turned on and receiving power.

LED Indicators

Collision LED

The yellow COL (collision) LED on the hub's front panel illuminates when two or more stations on the network attempt to transmit packets simultaneously.

Note: Collisions are normal in Fast Ethernet networks. Excessive collisions may indicate that your network is congested.

Refer to Appendix A, "Troubleshooting" for help with determining problems on your network by monitoring the Collision LED.

Link/Activity LEDs

The green Link/Activity LEDs, associated with each port, illuminate if there is a device detected on the other end and if there is traffic on the port.

The table below describes the possible status indications of the Link/Activity LEDs.

Table 3-1 Link/Activity LEDs

On	<ul style="list-style-type: none">• Normal data/link pulse reception
Off	<ul style="list-style-type: none">• No twisted-pair cable connected• Link pulse disabled at other end• No power to the hub• Twisted-pair connection faulty• Non-100Base-TX device at other end• Twisted-pair cable exceeds recommended length
Blinking	<ul style="list-style-type: none">• Receiving network traffic

Partition LEDs

The yellow Partition LEDs, associated with each port, illuminate if the port has been partitioned. A port will automatically disconnect a segment if that segment causes too many collisions. The segment will be reconnected when the collisions have subsided.

A

Troubleshooting

Monitoring LEDs

The following table describes how to troubleshoot problems with your network and/or the hub by monitoring the hub's LEDs.

Problem	Action
Power LED is off	<ul style="list-style-type: none">4 Make sure the power adapter is connected to the power outlet and is properly inserted into the power connector on the hub.4 Determine if the outlet is functional by plugging another device into the receptacle.
Collision LED is blinking constantly	<ul style="list-style-type: none">4 Make sure the workstation cables do not exceed the maximum length of 100 meters.4 Make sure the workstation cables meet EIA/TIA 568B specifications for Category 5 wiring.4 Make sure the total network diameter does not exceed the maximum 205 meters.4 Make sure there are no faulty Fast Ethernet adapters or other equipment on the network.4 Note: Collisions are normal in Fast Ethernet networks; however, excessive collisions may indicate that your network is overly congested.

Troubleshooting

Problem	Action
Link LED is off	<ul style="list-style-type: none"><li data-bbox="341 308 927 346">4 Make sure the hub is powered on.<li data-bbox="341 346 927 408">4 Make sure the device on the other end is powered on.<li data-bbox="341 408 927 500">4 Make sure the proper cabling is used between the device and the hub (refer to the cable guidelines specified in Chapter 2).<li data-bbox="341 500 927 562">4 Make sure the correct cable is properly connected to the hub and the network device.<li data-bbox="341 562 927 639">4 Make sure the cable does not exceed recommended length (100 meters).

B

Specifications

FriendlyNet FH100TX5 Fast Ethernet Hub

Standards

- o IEEE 803.3u 100Base-TX Fast Ethernet

Network Media

- o 100Base-TX unshielded twisted-pair cabling (Category 5 UTP)

Maximum Segment Lengths

- o 100 meter hub-to-station connection
- o 5 meter hub-to-hub connection

Connectors

- o 5 RJ-45 connectors
- o 1 cross-over Uplink connector

LED Indicators

- o Power
- o Collision
- o Partition (per port)
- o Link/Activity (per port)

Physical Dimensions

- o 220mm x 110mm x 26mm (L x W x H)

Specifications

Environment

- o Temperature
 - o Operating: 0° C to +40° C
 - o Storage: -20° C to +70° C
- o Humidity
 - o Operating: 10% to 80% RH
 - o Storage: 5% to 90% RH
- o Input Power Requirements
 - o Voltage: AC voltage to 12VDC external power

Standards Compliance

- o FCC Class A
- o CE Mark

C

Technical Support

Contacting Technical Support

To contact Asanté Technical Support:

Telephone	(800) 622-7464
Fax	(408) 432-6018
Fax-Back	(800) 741-8607
Internet Mail	support@asante.com
World Wide Web Site	http://www.asante.com
Bulletin Board Service (BBS)	(408) 432-1416
ARA BBS (guest log-in)	(408) 894-0765
AppleLink Mail/BBS	ASANTE
FTP Archive	ftp.asante.com

Technical Support Hours

6:00 a.m. to 5:00 p.m. Pacific Standard Time USA, Monday - Friday.



ASANTÉ TECHNOLOGIES, INC., 821 FOX LANE, SAN JOSE, CA 95131

PHONE: 408.435.8388, 800.662.9686 • FAX: 408.432.7511 • e-mail address: sales@asante.com •
World Wide Web site: <http://www.asante.com>

©1997 Asanté Technologies Inc., Asanté is a trademark of Asanté Technologies, Inc. All brand names and products are trademarks or registered trademarks of their respective holders.

May 1997

Part Number 06-00348-00 Rev.A