


CMU 100 4 Channels Multimode Fiber Optic to RS232 Converter User Manual

CMU 100 / 2.6.6.6.6.1.1.1.1 - 7
CMU 100 / 8.6.6.6.6.1.1.1.1 - 7

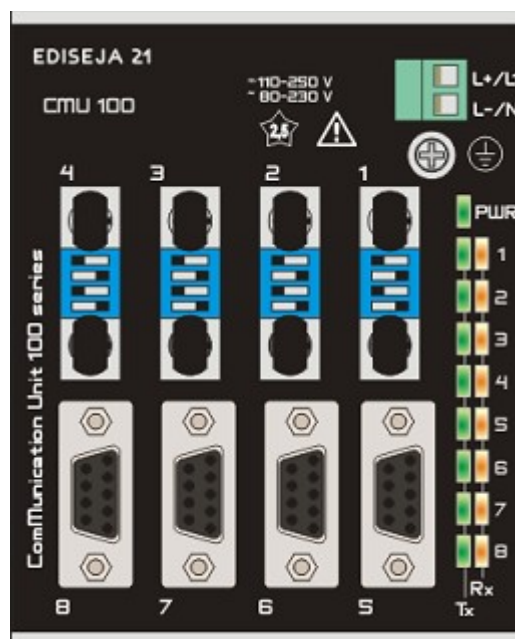

Company:	Device:	Document:	Code:	Version:	Date:
Ediseja 21	CMU 100 / 2.6.6.6.6.1.1.1.1 - 7	User manual	CMUMU261	V1	05.11.2014

Content

1	PREFACE.....	3
2	CMU 100 SYSTEM.....	6
2.1	DESCRIPTION.....	6
2.1.1	SOFTWARE.....	6
2.1.2	HARDWARE.....	6
3	4 CHANNELS MULTIMODE FIBER OPTIC TO RS232 CONVERTER.....	8
3.1	DESCRIPTION.....	8
3.2	TYPICAL APPLICATIONS.....	8
3.3	APPEARANCE.....	9
3.4	HARDWARE DESCRIPTION.....	9
3.4.1	MAIN BOARD.....	9
3.4.2	RS232 INTERFACE BOARD.....	10
3.4.3	MULTIMODE FIBER OPTIC INTERFACE BOARD.....	11
4	SCHEMATIC.....	12
5	INSTALLATION.....	13
5.1	INSTALLATION.....	13
6	COMMISSIONING & MAINTENACE.....	15
6.1	COMMISSIONING.....	15
6.2	MAINTENANCE.....	15
7	TECHNICAL DATA.....	16
8	DIMENSIONS.....	18
9	ORDERING.....	19

1 PREFACE

Liability statement

We have checked the contents of this manual to ensure that the descriptions of both hardware and software are as accurate as possible. However, deviations may occur so that no liability can be accepted for any errors or omissions contained in the information given.

The contents of this manual will be checked in periodical intervals, corrections will be made in the following editions.

We reserve the right to make technical improvements without notice.

Contact

If you have any questions or comments related to this product please contact us on:

Ediseja 21 d.o.o.
Drenov Gric 175
1360 Vrhnika
Slovenia – EU

Tel: ++386 (1) 75 05 275

Email: grega.flander@ediseja21.com

www.ediseja21.com

Copyright

Copyright © Ediseja 21, 2013. All rights reserved.

Explanation of the symbols



Read the instructions!



Device was tested with 2,5 kV AC voltage to check the device insulation.



Device ground terminal.



Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC; the affixed product label indicates that you must not discard this electrical/electronic product in domestic household waste.

Warnings

In this paper the following terms are used:

Danger

indicates that death, severe personal injury or substantial property damage will result if proper precautions are not taken.

Warning

indicates that death, severe personal injury or substantial property damage can result if proper precautions are not taken.

Caution

indicates that minor personal injury or property damage can result if proper precautions are not taken. This particularly applies to damage on or in the device itself.

General information

These paper contain the information that is necessary for the proper and safe operation of the described devices. This paper is intended for technically qualified personnel.

**Warning!**

Hazardous voltage is present inside the device during operation. Disregarding of safety rules can result in severe personal injury or property damage.

Only qualified personnel may work with described devices after being familiar with warnings and safety notices in this paper and other safety regulations.

**Warning!**

Device must operate completely assembled! Device must be used as described. No modifications of the device should be made.

**Warning!**

Do not open device while it is energized! Hazardous voltage is present inside the device. Disconnect all connectors before opening!



Warning!

If device is damaged disconnect it from power supply! Send it to the manufacturer for inspection.



Warning!

Connect to earth before attaching power supply!

2 CMU 100 SYSTEM

2.1 DESCRIPTION

Communication unit (CMU 100) is modular system of communication devices that can be used for various of tasks such as:

- ◆ communication converter (for example RS232 to RS485)
- ◆ star coupler (for example 1 fiber optic to 7 fiber optics)
- ◆ repeater (for example RS485/485)
- ◆ communication isolator (for example for preventing ground loops)
- ◆ communication listener - debugger
- ◆ PC serial com port extender (for example USB to 4 serial com)

CMU 100 device is a couple of software and hardware. For different purposes, different software versions and different hardware configuration have been developed.

2.1.1 SOFTWARE

Software is application dependent and allows different hardware configurations. Software's task is switching between communication ports and allows almost any combination between them.

2.1.2 HARDWARE

Hardware is based on main board with power supply and port switching logic. On that board, interface boards are attached. CMU 100 can handle up to 8 different interface boards. Currently available interface boards:


- ◆ RS232
- ◆ isolated RS485
- ◆ Multimode Fiber Optic ST and SMA connectors
- ◆ USB
- ◆ ethernet (with one virtual com port)

Housing is aluminium and intended for mount on standard DIN 35 rail (acc. to DIN EN 50022). 3 different housings have been made. Depends on how many interfaces device has, appropriate housing is used.

DESCRIPTION

Hardware settings

All settings on the device can be made from outside by a DIL switch. It is not necessary to open the housing.

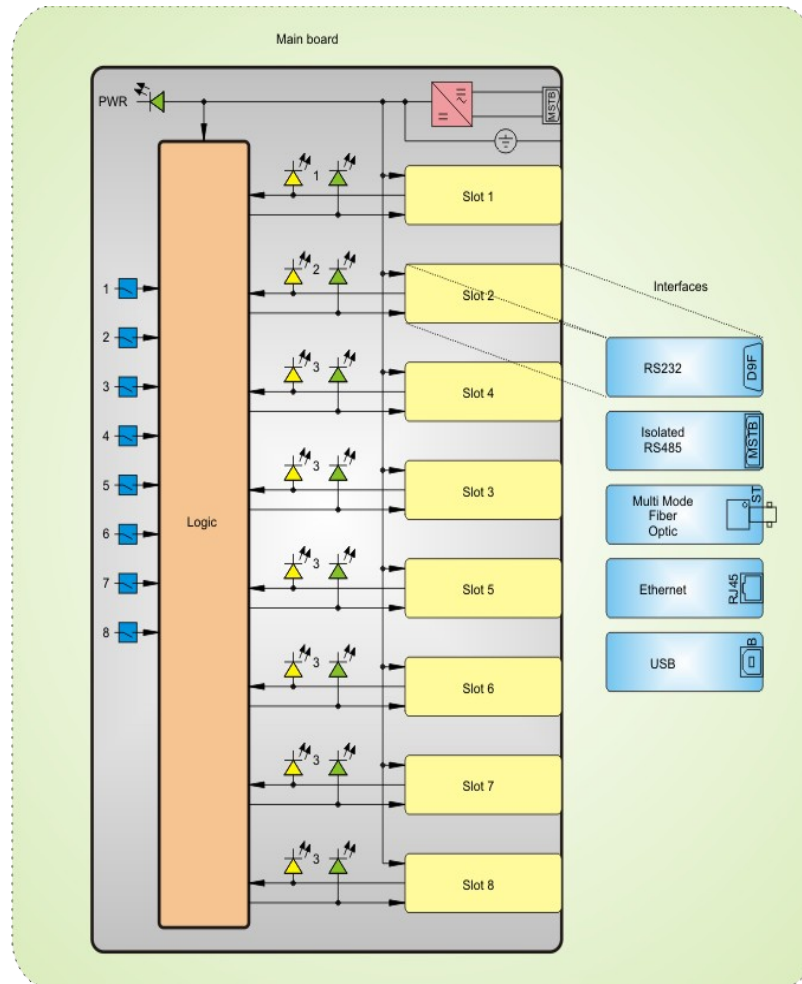

Picture 1: CMU 100 system general diagram

3 4 CHANNELS MULTIMODE FIBER OPTIC TO RS232 CONVERTER

3.1 DESCRIPTION

This device contains four full duplex 820 nm wave length multimode fiber optic and four RS232 interface. Data is send from one fiber optic to one RS232 port and vice versa. Device has four independent channels.

Wide power supply voltage allows connection to all common station batteries. Additionally it can be also connected to standard AC voltages.


This device is intended for use in cubicles and cabinets in all kinds of power production, transmission and distribution stations. It requires no maintenace. All normaly used connectors, switches and light indicators are accessed at the front side of the device. One light indicator indicates power supply voltage, others indicate communication transfer.

Fiber optic communication allows longer distances between devices without electromagnetic disturbances. Fiber optic logic can be set to positive or negative logic for transmitter and receiver separatedly. They can be set by DIP switch at the front side of the communication interface.

3.2 TYPICAL APPLICATIONS

Typical application is allowing four pairs of devices with RS232 port, communicating between one another, without electromagnetic disturbances.

3.3 APPEARANCE

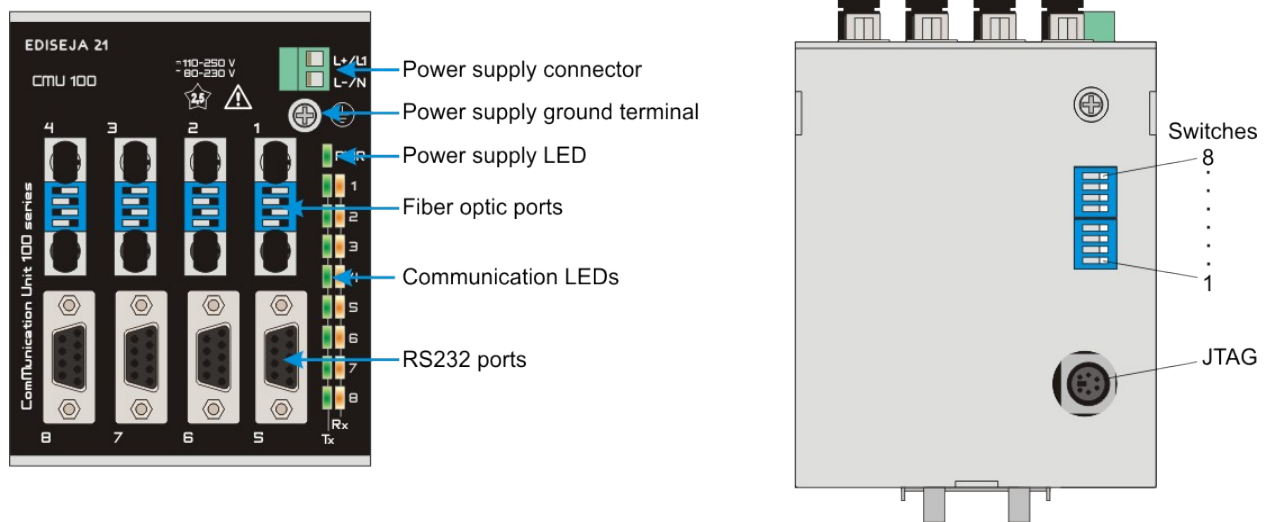

Picture 2: Front view (left) & bottom view (right)

3.4 HARDWARE DESCRIPTION

This configuration of device is made from main board (power supply, switches and logic switch), four fiber optic interface boards and four RS232 interface boards.

3.4.1 MAIN BOARD

Power LED indicates that device is turned on. The right LEDs of one port shows activity on receive (Rx) line and the left one shows activity on transmit (Tx) line.

On the bottom side of device are switches and JTAG connector which is intended for downloading necessary software. Do not connect anything to that connector.

Additional switches allows echo on each port. Echo can be set on or off for each port.

Switches

Switch	1	2	3	4
Description	Echo port 1	Echo port 2	Echo port 3	Echo port 4
Position OFF	Echo off	Echo off	Echo off	Echo off
Position ON	Echo on	Echo on	Echo on	Echo on
Default position	OFF	OFF	OFF	OFF

Switch	5	6	7	8
Description	Echo port 5	Echo port 6	Echo port 7	Echo port 8
Position OFF	Echo off	Echo off	Echo off	Echo off
Position ON	Echo on	Echo on	Echo on	Echo on
Default position	OFF	OFF	OFF	OFF

Ports configuration

Port	1	2	3	4	5	6	7	8
Interface	FO MM	FO MM	FO MM	FO MM	RS232	RS232	RS232	RS232


3.4.2 RS232 INTERFACE BOARD

Description

Single, nonisolated, full duplex, RS232 port with DB9 female connector. Supported Rx, Tx and GND pins.

Connector pin table

DB9 F	2	3	5
Description	RX	TX	GND
Direction	IN	OUT	-

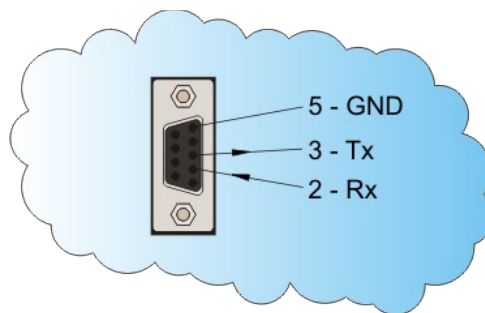

Picture 3: DB9 Female connector

3.4.3 MULTIMODE FIBER OPTIC INTERFACE BOARD

Description


Single, full duplex, multimode, fiber optic port with ST connectors with positive or negative logic.

Hardware settings

For proper functioning of that board, optic logic must be set:


Fiber optic logic settings

Switch SW1	Light in idle state	1	2	3	4
Positive logic	OFF	OFF	ON	OFF	ON
Negative logic	ON	ON	OFF	ON	OFF

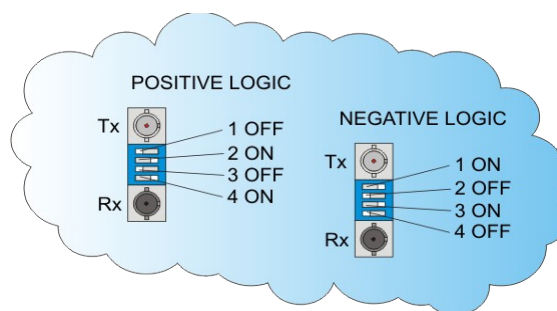

Picture 4: Multimode fiber optic interface board appearance

4 SCHEMATIC

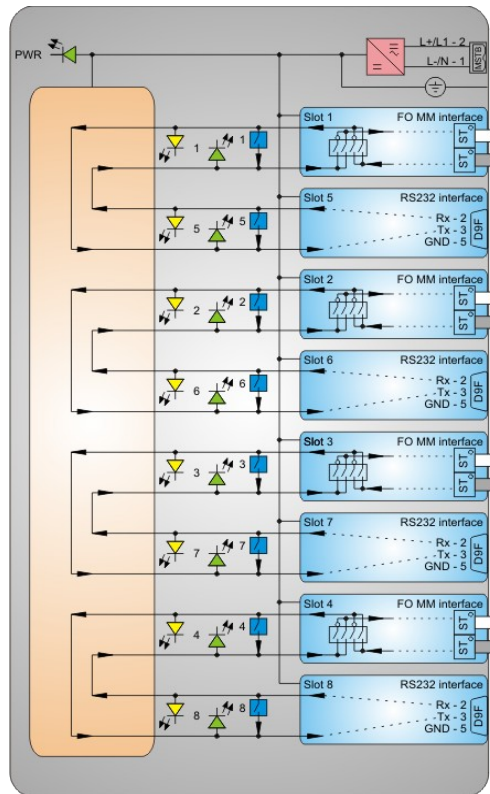

Picture 5: General diagram

5 INSTALLATION

5.1 INSTALLATION




Warning!

Hazardous voltage is present inside the device during operation. Disregarding of safety rules can result in severe personal injury or property damage.

Only qualified personnel may work with described devices after being familiar with warnings and safety notices in this paper and other safety regulations.

Following instruction must be taken into consideration:

- ◆ The device must be accessible to qualified personnel only.
- ◆ The device is permitted to operate in enclosed housing or cabinet only.
- ◆ The device location must be vibration-free.
- ◆ The admissible operating temperature must be observed.
- ◆ Check the device for damage at unpacking. If device is damaged it must not be installed but it should be send to the manufacturer for repair.
- ◆ The device should not be opened.
- ◆ The device should be mounted on a 35 mm rail (acc to EN 50022).
- ◆ Attach ground wire before attaching power supply. Device must be grounded during operation!
- ◆ Single core or stranded wire 0,5 – 2,5 mm² must be used for power supply connection. If stranded wire is used, ferrules must be used to prevent fraying. Recommended stripping lenght is 5 mm.
- ◆ Protective earthing wire must be terminated with tinned copper ear terminal.
- ◆ The prescribed bending radius of the optical fibre cables must be observed.

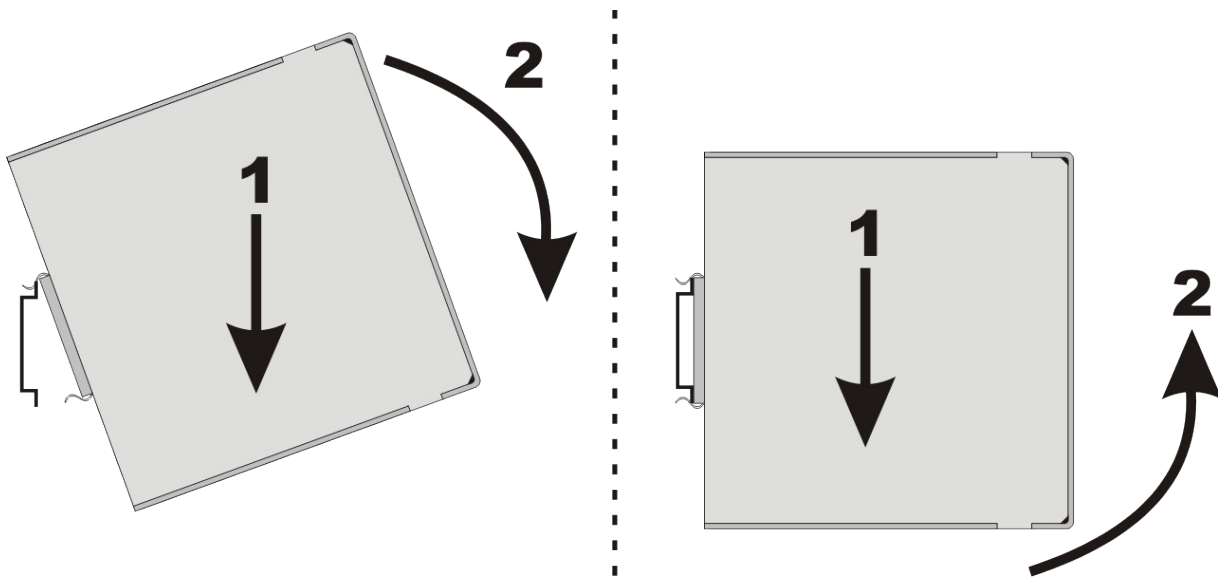

Picture 6: left. installation, right: deinstallation

6 COMMISSIONING & MAINTENANCE

6.1 COMMISSIONING



Warning!

Hazardous voltage is present inside the device during operation. Disregarding of safety rules can result in severe personal injury or property damage.

Only qualified personnel may work with described device after being familiar with warnings and safety notices in this paper and other safety regulations.

Following instruction must be taken into consideration:

- ◆ Device must operate completely assembled! Device must be used as described. No modifications of the device should be made.
- ◆ Attach ground wire before attaching power supply. Device must be grounded during operation!
- ◆ Check if the power supply voltage complies with device operation voltage.
- ◆ Do not open device while it is energized! Hazardous voltage is present inside the device.
- ◆ If single mode fiber optic interface is used, do not look into the laser beam.

6.2 MAINTENANCE

The device is maintenance-free. Disconnect power supply before cleaning it. Use moist cloth. Do not use liquids.

7 TECHNICAL DATA

Power supply			
		Type 2	Type 8
Rated voltage	DC	110 - 250 V	48 - 60 V
	AC	230 V	48 V
Permissible voltage range	DC	88 - 300 V	38 - 72 V
	AC	70 - 264 V	30 - 50 V
Input current	DC	50 - 30 mA	100 - 80 mA
	AC	50 mA	130 mA
Fuse (internal)	2 A T		
Power supply indicator	green LED marked PWR		
Voltage dips	20 ms		
Connector type	screw type „MSTB“ Phoenix 2pin		
Wire crossection	0,5 – 2,5 mm ²		

Communication port RS232 (interface type 1)	
Type	RS232
Direction	full duplex
Speed	up to 230 k BAUD
Number of ports	1
Distance	up to 15 m
Isolation	none; (GND earthed)
Connector type	DB9 female
Lines in	1 (RX)
Lines out	1 (TX)

Communication port Multimode Fiber Optic (interface type 6)	
Type	multimode fiber optic
Wave lenght	820 nm
Fiber size	50/125 μm, 62,5/125 μm, 100/140 μm, 200 μm
Optical output power	-18 dB
Reciver sensitivity	-24 dB
Laser class	I (IEC 60825-1)
Direction	full duplex


TECHNICAL DATA

Communication port Multimode Fiber Optic (interface type 6)	
Speed	up to 230 k BAUD
Input	1 receiver (grey connector)
Output	1 transmitter (white connector)
Logic	light ON or OFF in idle state set by switch (see table)
Number of ports	1
Distance	up to 500 m
Connector type	ST

* slowest interface defines device's maximum speed

Device			
Weight	0,55 kg		
Dimensions (see picture)	(H)	(D)	(W)
	105 mm	111 mm + connectors	85 mm
Temperature range	0 °C to +55 °C		
Humidity operating	up to 95 % (noncondensing)		
Enclosure	Material	Al	
	IP	20	
Mount type	standard DIN 35 rail (acc. to DIN EN 50022)		
Class	I		
Overvoltage category	II		
Communication indicator	Receiving	yellow LED marked Rx	
	Transmitting	green LED marked Tx	

8 DIMENSIONS

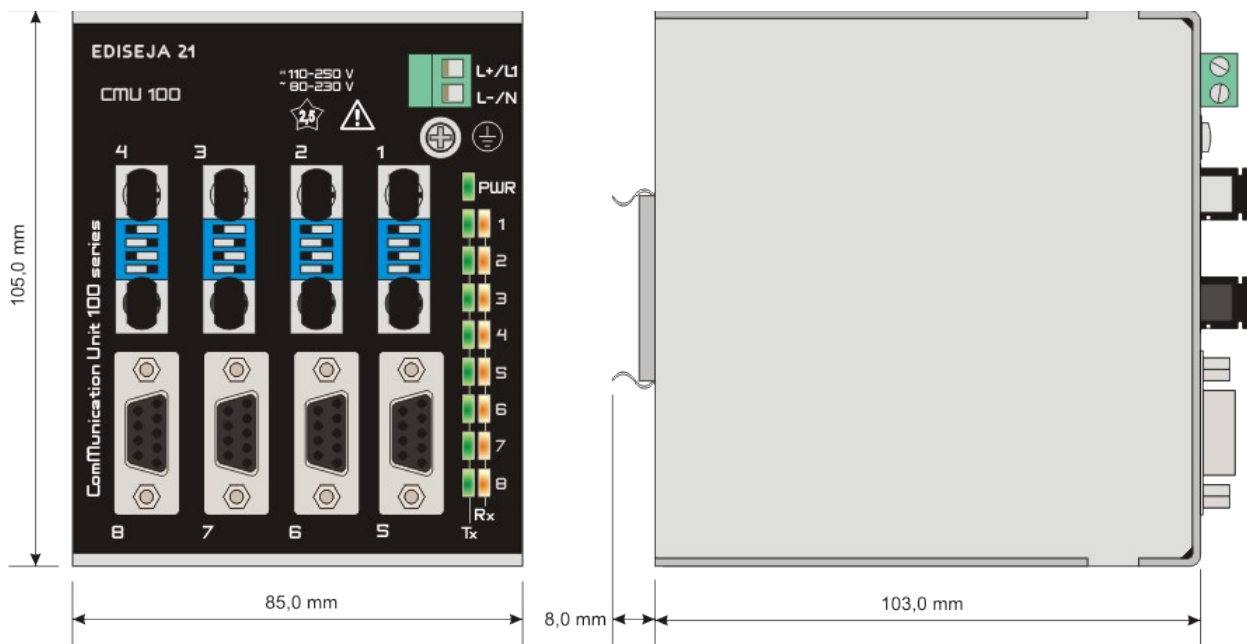

Picture 7: Dimensions

Most common devices:

CMU 100 / 1.6.1 - 0 - 1 ch converter multimode fiber optic to RS232, high voltage power supply

CMU 100 / 1.5.1 - 0 - 1 ch converter RS485 to RS232, 19k2-115k BAUD, high voltage power supply

CMU 100 / 1.5.6 - 0 - 1 ch converter RS485 to multimode fiber optic, high voltage power supply

CMU 100 / 2.1.1.1 - 2 - 3 channel star coupler RS232 to 2 x RS232, high voltage power supply

CMU 100 / 2.1.6.6 - 2 - 3 channel star coupler RS232 to 2 x multimode fiber optic, high voltage power supply

CMU 100 / 2.6.6.6.1.1.1.1 - 7 - 4 channel converter multimode fiber optic to RS232, high voltage power supply

CMU 100 / 2.5.5.5.5.6.6.6.6 - 7 - 4 channel converter RS485 to multimode fiber optic, high voltage power supply

CMU 100 / 2.5.6.6.6.6.6.6.6 - 12 - 8 port star coupler RS485 to 7 x multimode fiber optic, high voltage power supply.

CMU 100 / 2.6.6.6.6.6.6.6.6 - 12 - 8 port star coupler multimode fiber optic to 7 x multimode fiber optic, high voltage power supply

Additional accessories (order if needed):

- power supply cable with „schuko“ plug, 2 m
- RS232 cable to PC (state the length up to 15 m)
- fiber optic cables (state the length)

Contact:

Ediseja 21, razvoj elektronskih naprav, d.o.o.

Drenov Gric 175

1360 Vrhnika

Slovenia – EU

Tel: ++386 (1) 75 05 275

grega.flander@ediseja21.com

www.ediseja21.com

Page:	Company:	Device:	Document:	Code:	Version:	Date:
20	Ediseja 21	CMU 100 / 2.6.6.6.6.1.1.1.1 - 7	User manual	CMUMU261	V1	05.11.2014