

Dell™ 2709W Flat Panel Monitor User's Guide

About Your Monitor

[Product Features](#)
[Identifying Parts and Controls](#)
[Monitor specifications](#)
[Universal Serial Bus \(USB\) Interface](#)
[Card Reader Specifications](#)
[Plug and Play Capability](#)
[Maintenance Guidelines](#)

Setting Up the Monitor

[Connecting the Monitor](#)
[Organizing the Cables](#)
[Attaching the Soundbar \(optional\)](#)

Operating the Monitor

[Using the Front Panel Controls](#)
[Using the On-Screen Display \(OSD\)](#)
[Setting the Optimal Resolution](#)
[Using the Dell Soundbar \(Optional\)](#)
[Using the Tilt, Swivel and Vertical Extension](#)

Solving Problems


[Troubleshooting Your Monitor](#)
[Common Problems](#)
[Video Problems](#)
[Product Specific Problems](#)
[Universal Serial Bus \(USB\) Specific Problems](#)
[Troubleshooting the Dell™ Soundbar \(Optional\)](#)
[Card Reader Troubleshooting](#)


Appendix


[CAUTION: Safety Instruction](#)
[FCC Notice \(U.S. Only\) and Other Regulatory Information](#)
[Contacting Dell](#)

Notes, Notices, and Cautions

Throughout this guide, blocks of text may be accompanied by an icon and printed in bold type or in italic type. These blocks are notes, notices, and cautions, and they are used as follows:

 **NOTE:** A NOTE indicates important information that helps you make better use of your computer.

 **NOTICE:** A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.

 **CAUTION:** A CAUTION indicates the potential for property damage, personal injury, or death.

Some warnings may appear in alternate formats and may be unaccompanied by an icon. In such cases, the specific presentation of the caution is mandated by regulatory authority.

Information in this document is subject to change without notice.
© 2008 Dell™ Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo are trademarks of Dell Inc.; *Microsoft* and *Windows* either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. *ENERGY STAR* is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model 2709Wb

July 2008 Rev. A02

[Back to Contents Page](#)

About Your Monitor

Dell™ 2709W Flat Panel Monitor User's Guide

- [Product Features](#)
- [Identifying Parts and Controls](#)
- [Monitor Specifications](#)
- [Universal Serial Bus \(USB\) Interface](#)
- [Card Reader Specifications](#)
- [Plug and Play Capability](#)
- [Maintenance Guidelines](#)

Product Features

The **2709W** flat panel display has an active matrix, thin-film transistor (TFT), liquid crystal display (LCD). The monitor features include:

- 27-inch (583.7*365.5 mm) viewable area display.
- 1920 x 1200 resolution, plus full-screen support for lower resolutions.
- Wide viewing angle to allow viewing from a sitting or standing position, or moving side-to-side.
- Tilt, swivel and vertical extension capabilities.
- Removable pedestal and Video Electronics Standards Association (VESA) 100 mm mounting holes for flexible mounting solutions.
- Plug and play capability if supported by your system.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Software and documentation CD includes an information file (INF), Image color Matching File (ICM), and product documentation.
- Energy Saver feature for Energy Star compliance.
- Security lock slot.

Identifying Parts and Features

Front View



Front View

Front panel controls

Label	Description
	Shortcut keys
1-3	*The default settings are Preset Modes Select, Brightness/Contrast Select and Input Source Select.
1	Preset Modes Select
2	Brightness/Contrast Select

- 3 Input Source Select
 - 4 OSD menu select
 - 5 EXIT
 - 6 Power button (with power light indicator)
-

Back View




Back view

Back View with monitor stand

Label	Description/Use
1	VESA mounting holes (100mm) (Behind attached VESA Plate) To mount the monitor.
2	Connectors label To indicate the positions and types of connectors.
3	Service Tag label To contact Dell for express service.
4	Security lock slot To help secure your monitor.
5	Dell Soundbar mounting brackets To attach the optional Dell Soundbar.
6	Barcode serial number label To contact Dell for technical support.
7	Regulatory rating label Lists the regulatory approvals.
8	Cable management slot To organize cables by placing them through the slot.

Side View

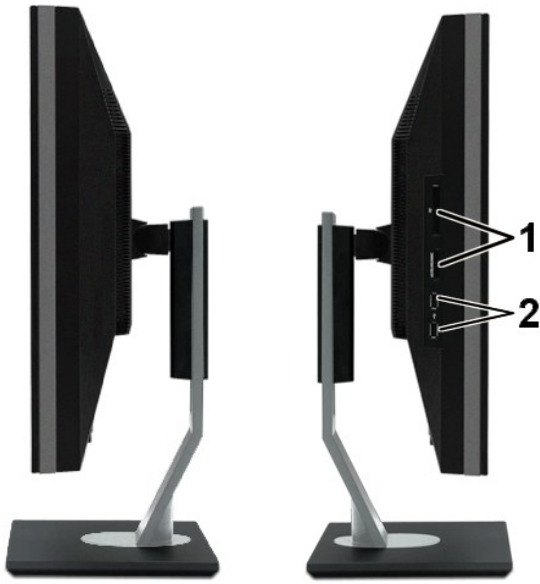


Right side

Left side

Label	Description
1	Card reader. See Card Reader Specifications for more information.
2	USB downstream ports

Bottom View

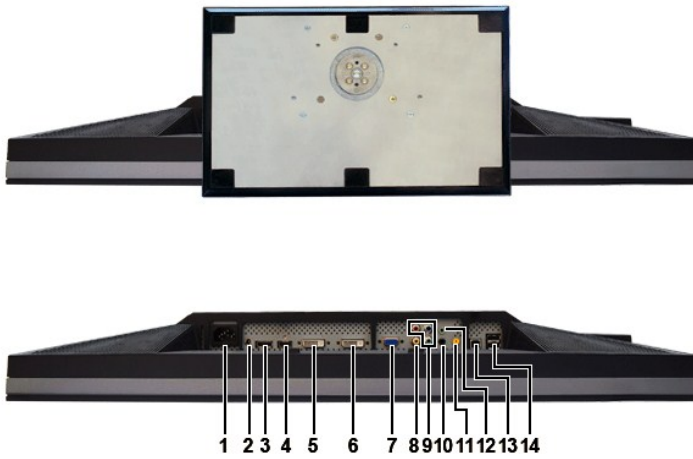

Bottom view

Label	Description
1	AC power cord connector
2	DC power connector for Dell™ Soundbar
3	DisplayPort connector
4	HDMI connector

- 5 DVI connector-1
- 6 DVI connector-2
- 7 VGA connector
- 8 Composite video connector
- 9 Component video connectors
- 10 Audio out (rear)
- 11 Audio out (SUB/CTR)
- 12 Audio out (front)
- 13 USB upstream port
- 14 USB downstream ports

Monitor Specifications

The following sections give you information about the various power management modes and pin assignments for various connectors for your monitor.

Power Management Modes

If you have VESA's DPMS compliance display card or software installed in your computer, the monitor automatically reduces its power consumption when not in use. This is referred to as Power Save Mode. If input from keyboard, mouse or other input devices is detected by the computer, the monitor will automatically "wake up". The following table shows the power consumption and signaling of this automatic power-saving feature:

VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation	Active	Active	Active	Blue	160 W (maximum)* 105 W (normal)**
Active-off mode	Inactive	Inactive	Blanked	Amber	Less than 2 W
Switch off	-	-	-	Off	Less than 1 W

* With Audio and USB

** Without Audio and USB

Activate the computer and wake up the monitor to gain access to the [OSD](#).


NOTE: This monitor is ENERGY STAR®-compliant as well as TCO '03 power management compatible.



NOTE: Zero power consumption in OFF mode can only be achieved by disconnecting the main cable from the monitor.

Pin Assignments


VGA Connector

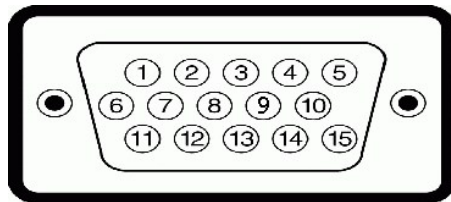

Pin Number	15-pin Side of the Connected Signal Cable
1	Video-Red
2	Video-Green
3	Video-Blue
4	GND
5	Self-test
6	GND-R
7	GND-G

8	GND-B
9	Computer 5V/3.3V
10	GND-sync
11	GND
12	DDC data
13	H-sync
14	V-sync
15	DDC clock

DVI Connector

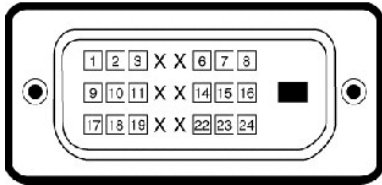

Pin Number	24-pin Side of the Connected Signal Cable
1	TMDS RX2-
2	TMDS RX2+
3	TMDS Ground
4	Floating
5	Floating
6	DDC Clock
7	DDC Data
8	Floating
9	TMDS RX1-
10	TMDS RX1+
11	TMDS Ground
12	Floating
13	Floating
14	+5V/+3.3V power
15	Self test
16	Hot Plug Detect
17	TMDS RX0-
18	TMDS RX0+
19	TMDS Ground
20	Floating
21	Floating
22	TMDS Ground
23	TMDS Clock+
24	TMDS Clock-

Composite Video Connector




Luma composite chroma

Component Video Connector




Pin Number	3-pin Side of the Connected Signal Cable (Cable not included)
1	Y (Luminance signal)
2	Pb (Color differential signal)
3	Pr (Color differential signal)

DisplayPort Connector

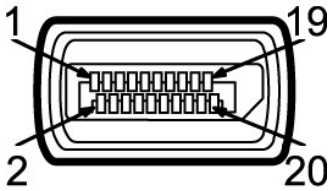

Pin Number	20-pin Side of the Connected Signal Cable
1	ML0(p)
2	GND
3	ML0(n)
4	ML1(p)
5	GND
6	ML1(n)
7	ML2(p)
8	GND
9	ML2(n)
10	ML3(p)
11	GND
12	ML3(n)
13	GND
14	GND
15	AUX(p)
16	GND
17	AUX(n)
18	HPD
19	Re-PWR
20	PWR

HDMI Connector

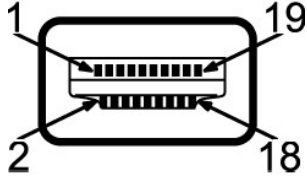

Pin Number	19-pin Side of the Connected Signal Cable
1	TMDS DATA 2+
2	TMDS DATA 2 SHIELD
3	TMDS DATA 2-
4	TMDS DATA 1+
5	TMDS DATA 1 SHIELD
6	TMDS DATA 1-
7	TMDS DATA 0+
8	TMDS DATA 0 SHIELD
9	TMDS DATA 0-
10	TMDS CLOCK
11	TMDS CLOCK SHIELD
12	TMDS CLOCK-
13	Floating
14	Floating
15	DDC CLOCK (SDA)
16	DDC DATA (SDA)
17	GROUND
18	+5V POWER
19	HOT PLUG DETECT

Flat Panel Specifications

Screen type	Active matrix - TFT LCD
Screen dimensions	27 inches (27-inch diagonal viewable image size)
Preset display area:	
Horizontal	581.76 mm (22.9 inches)
Vertical	363.6 mm (14.30 inches)
Pixel pitch	0.303 mm
Viewing angle	178° (Vertical) typical, 178° (Horizontal) typical
Luminance output	400 cd/m ² (typ)
Contrast ratio	1300:1 (typ), 3000:1 (typ, Dynamic Contrast on)
Faceplate coating	Antiglare with hard-coating 3H
Backlight	8 CCFL U-type system
Response Time	6ms panel typical (Grey to Grey)/16ms typical (Black to White)
Color Gamut	110%* typical

* 2709W Color Gamut (Typical) is based on CIE1976 (110%) and CIE1931 (102%) .

Resolution

Horizontal scan range	30 kHz to 81 kHz (automatic)
Vertical scan range	56 Hz to 76 Hz
Optimal preset resolution	1920 x 1200 at 60 Hz
Highest preset resolution	1920 x 1200 at 60 Hz

Video Supported Modes

Video display capabilities (DVI playback)	480p/576p/720p/1080p (Supports HDCP)
Video display capabilities (Composite playback)	NTSC/PAL
Video display capabilities (HDMI playback)	480i/480p/576i/576p/720p/1080i/1080p
Video display capabilities (Component playback)	480i/480p/576i/576p/720p/1080i/1080p

Preset Display Modes

The following table lists the preset modes for which Dell guarantees image size and centering:

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/Vertical)
VGA, 720 x 400	31.5	70.1	28.3	-/+
VGA, 640 x 480	31.5	59.9	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 800 x 600	37.9	60.3	40.0	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1152 x 864	67.5	75.0	108.0	+/+
VESA, 1280 x 1024	64.0	60.0	108.0	+/+
VESA, 1280 x 1024	80.0	75.0	135.0	+/+
VESA, 1600 x 1200	75.0	60.0	162.0	+/+
VESA, 1920 x 1200	74.5	60.0	154.0	+/-


Electrical

The following table lists the electrical specification:

Video input signals	Analog RGB, 0.7 Volts +/-5%, 75 ohm input impedance Digital DVI-D TMDS, 600mV for each differential line, 50 ohm input impedance HDMI, 600mV for each differential line, 100 ohm input impedance per differential pair DisplayPort, 600mV for each differential line, 100 ohm input impedance per differential pair Composite, 1 volt(p-p), 75 ohm input impedance Component: Y, Pb, Pr are all 0.5~1volt(p-p), 75 ohm input impedance
Synchronization input signals	separate horizontal and vertical, 3.3V CMOS or 5V TTL level, positive or negative sync. SOG (Sync on green)
AC input voltage/frequency/current	100 to 240 VAC/50 or 60 Hz \pm 3 Hz/2.0A (Max.)
Inrush current	120V: 40A (Max.) 240V: 80A (Max.)

Physical Characteristics

The following table lists the physical characteristics:

Connector type	<ul style="list-style-type: none"> 1 D-sub: blue connector 1 DVI-D: white connector 1 DisplayPort: black connector 1 Composite 1 Component 1 HDMI
Signal cable type	<ul style="list-style-type: none"> 1 D-sub: Detachable, Analog, 15pin, shipped attached to the monitor 1 DVI-D: Detachable, Digital, 24pin, shipped detached from the monitor 1 DisplayPort: Detachable, Digital, 20pin, shipped detached from the monitor 1 Composite 1 Component 1 HDMI <p> NOTE: The composite, component and HDMI cables are not included with the monitor.</p>
Dimensions (with stand)	
Height (Compressed)	451.9 mm (17.79 inches)
Height (Extended)	541.9 mm (21.33 inches)
Width	632.1 mm (24.89 inches)
Depth	200.0 mm (7.87 inches)
Dimensions (without stand)	
Height	413.9 mm (16.30 inches)
Width	632.1 mm (24.89 inches)
Depth	88.4 mm (3.48 inches)
Stand Dimensions	
Height (Compressed)	306 mm (12.05 inches)
Height (Extended)	396 mm (15.59 inches)
Width	320 mm (12.60 inches)
Depth	200.0 mm (7.87 inches)
Weight	
Weight with packaging	14.3 kg (31.53 lb)
Weight with stand assembly and cables	12.2 kg (26.90 lb)
Weight without stand assembly (For wall mount or VESA mount considerations - no cables)	8.3 kg (18.30 lb)
Weight of stand assembly	2.7 kg (5.95 lb)

Environmental

The following table lists the environmental limitation:

Temperature	
Operating	0° to 40°C (32° to 104°F)
Nonoperating	Storage: -20° to 60°C (-4° to 140°F) Shipping: -20° to 60°C (-4° to 140°F)
Humidity	


Operating	10% to 80% (noncondensing)
Nonoperating	Storage: 5% to 90% (noncondensing) Shipping: 5% to 90%(noncondensing)
Altitude	
Operating	3,657.6 m (12,000 ft) max
Nonoperating	12,192 m (40,000 ft) max
Thermal dissipation	
	375 BTU/hour (maximum) 195 BTU/hour (typical)

Universal Serial Bus (USB) Interface

This monitor supports High-Speed Certified USB 2.0 Interface.


Transfer speed	Data Rate	Power Consumption
High speed	480 Mbps	2.5W (Max., each port)
Full speed	12 Mbps	2.5W (Max., each port)
Low speed	1.5 Mbps	2.5W (Max., each port)

USB Upstream Connector

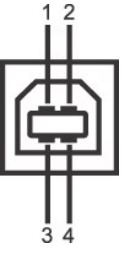

Pin Number	4-pin Side of the connector
1	DMU
2	VCC
3	DPU
4	GND

USB Downstream Connector

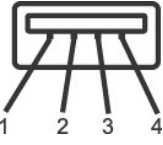

Pin Number	4-Pin Side of the Signal Cable
1	VCC
2	DMD
3	DPD
4	GND

USB Ports

- 1 1 upstream - rear
- 1 4 downstream - 2 on rear; 2 on left side

NOTE: The monitor's 2.0 USB interface functions only if the computer is USB 2.0 compatible.

NOTE: The monitor's USB interface works only when the monitor is on or in power save mode. If you switch the monitor off and then switch it on, the attached peripherals may take a few seconds to resume normal functionality.

Card Reader Specifications



Overview

- 1 The Flash Memory Card Reader is a USB storage device that allows users to read and write information from and into the memory card.
- 1 The Flash Memory Card Reader is automatically recognized by Microsoft® Windows® 2000, Windows® XP and Windows Vista®.
- 1 Once installed and recognized, each separate memory card (slot) appears as a separate drive/drive letter.
- 1 All standard file operations (copy, delete, drag-and-drop, etc.) can be performed with this drive.

Features

The Flash Memory Card Reader has the following features:

- 1 Supports Microsoft® Windows® 2000, Windows® XP and Windows Vista® operating systems
- 1 No Microsoft® Windows® 9X support from Dell
- 1 Mass Storage Class device (No drivers are required under Microsoft® Windows® 2000, Windows® XP and Windows Vista®)
- 1 USB-IF certification
- 1 Supports various memory card media



The following table lists the memory cards supported:


Slot Number	Flash memory cards type
1	Compact Flash type I/II Card (CF I/II)/CF form factor ATA hard drives to USB 2.0 bus
2	xD-Picture Card Memory Stick Card (MS)/High Speed Memory Stick (HSMS)/Memory Stick Pro Card (MS PRO)/Memory Stick Duo (with Adapter) Secure Digital Card (SD)/Mini Secure Digital (with Adapter)/TransFlash Card (with Adapter) MultiMedia Card (MMC)/Reduced Size MultiMedia Card (with Adapter)


Maximum Card Capacity Supported by the 2709W card reader

Card type	Support Specification	Memory Card Spec Version	Support Maximum Capacity by Spec	USB2602-NU-05 (For 2709W)
CF	Compact Flash Specification	2.0	128GB	Supported
MS	Memory Stick Standard Format Specification	1.40-00	128MB	Supported
MSPRO	Memory Stick Pro Standard Format Specifications	1.01-01	32GB	Supported
MSDuo	Memory Stick Duo Standard Format Specifications	1.10-00	128MB/32GB	Supported
SM	SmartMedia™ Electrical Specification	1.40	256MB	Supported
	SmartMedia™ Physical Format Specifications	1.40		

	SmartMedia™ Logical Format Specifications	1.30		
xD	xD Picture Card Specification	1.2	2GB	Supported
SD	SD Memory Card Specifications	2.0	32GB	Supported
MMC	MultiMedia Card System Specification	4.2	32GB	Supported

 NOTE: MSPRO includes MSPRO Duo and MS Micro.

 NOTE: xD includes TypeM and TypeH.

 NOTE: SD includes HS-SD, MiniSD and SD Micro. SD v2.0 spec includes SDHC.

 NOTE: MMC includes MMCPlus, RS-MMC, MMC Mobile and MMC micro.

General

Connection type USB 2.0 High Speed Device (USB Full Speed Device compatible)
Supported OS Microsoft® Windows® 2000, Windows® XP and Windows Vista®

Performance

Transfer Speed Read: 480 Mb/s (max.)
 Write: 480 Mb/s (max.)

Plug and Play Capability

You can install the monitor in any Plug and Play-compatible system. The monitor automatically provides the computer system with its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so the system can configure itself and optimize the monitor settings. If required, the user can select different settings, but in most cases monitor installation is automatic.

Maintenance Guidelines

Caring for Your Monitor



CAUTION: Read and follow the [Safety Instructions](#) before cleaning the monitor.



CAUTION: Before cleaning the monitor, unplug the monitor from the electrical outlet.

For best practices, follow the instructions in the list below while unpacking, cleaning, or handling your monitor:

- 1 To clean your antistatic screen, lightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the antistatic coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed air.
- 1 Use a **lightly-dampened, warm cloth to clean the plastics. Avoid using detergent of any kind as some detergents leave a milky film on the plastics.**
- 1 If you notice a white powder when you unpack your monitor, wipe it off with a cloth.
- 1 **Handle your monitor with care as dark-colored monitors may scratch and show white scuff marks more than lighter-colored monitors.**

[Back to Contents Page](#)


[Back to Contents Page](#)

Appendix

Dell™ 2709W Flat Panel Monitor User's Guide

- [Safety Instructions](#)
 - [FCC Notice \(U.S. Only\) and Other Regulatory Information](#)
 - [Contacting Dell](#)
-

CAUTION: Safety Instructions

 **CAUTION:** Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the *Safety Information*.


FCC Notice (U.S. Only) and Other Regulatory Information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com/regulatory_compliance.

Contacting Dell

To contact Dell electronically, you can access the following websites and by phone:

- 1 For support through the web, go to support.dell.com.
- 1 For customers in the United States, call 800-WWW-DELL (800-999-3355).

 **NOTE:** If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

1. Visit support.dell.com.
 2. Verify your country or region in the **Choose A Country/Region** drop-down menu at the bottom of the page.
 3. Click **Contact Us** on the left side of the page.
 4. Select the appropriate service or support link based on your need.
 5. Choose the method of contacting Dell that is convenient for you.
-

[Back to Contents Page](#)


[Back to Contents Page](#)

Setting Up Your Monitor

Dell™ 2709W Flat Panel Monitor

If you have a Dell™ desktop or a Dell™ portable computer with internet access

1. Go to <http://support.dell.com>, enter your service tag, and download the latest driver for your graphics card.
2. After installing the drivers for your Graphics Adapter, attempt to set the resolution to **1920x1200** again.

 **NOTE:** If you are unable to set the resolution to 1920x1200, please contact Dell™ to inquire about a Graphics Adapter that supports these resolutions.

[Back to Contents Page](#)


[Back to Contents Page](#)

Setting Up Your Monitor

Dell™ 2709W Flat Panel Monitor

If you have non Dell™ desktop, portable computer, or graphic card

1. Right-click on the desktop and click **Properties**.
2. Select the **Settings** tab.
3. Select **Advanced**.
4. Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, ATI, Intel etc.).
5. Please refer to the graphic card provider website for updated driver (for example, <http://www.ATI.com> OR <http://www.NVIDIA.com>).
6. After installing the drivers for your Graphics Adapter, attempt to set the resolution to **1920x1200** again.

 **NOTE:** If you are unable to set the resolution to 1920x1200, please contact the manufacturer of your computer or consider purchasing a graphics adapter that will support the video resolution of 1920x1200.

[Back to Contents Page](#)


Operating the Monitor







Dell™ 2709W Flat Panel Monitor User's Guide

- [Using the Front Panel Controls](#)
- [Using the On-Screen Display \(OSD\) Menu](#)
- [Setting the Optimal Resolution](#)
- [Using the Dell Soundbar \(Optional\)](#)
- [Using the Tilt, Swivel and Vertical Extension](#)

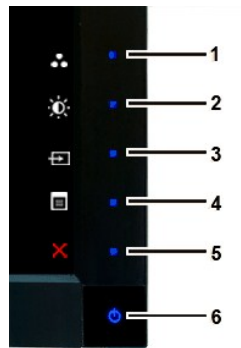Using the Front Panel


Use the buttons on the front of the monitor to adjust the image settings.




1-3	Shortcut keys	Use this key for direct access to the control menu that you define in the personalize menu. *The default settings are Preset Modes Select, Brightness/Contrast Select and Input Source Select.
1	 Preset Modes Select	Use this button for different displays on your monitor.
2	 Brightness/Contrast	Use this button for direct access to the "Brightness/Contrast" control menu.
3	 Input Source Select	Use Input Source Select button to select between different video signals that may be connected to your monitor. <ul style="list-style-type: none"> VGA input DVI-D 1 input DVI-D 2 input DisplayPort input HDMI input Component video input Composite video input Displays the source selection bar. Press  and  buttons to move between the setting options and press  to select the ir you want.



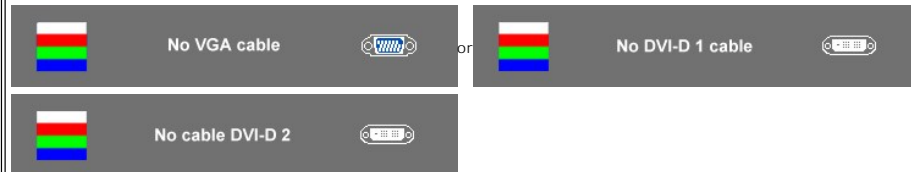


If either VGA or DVI-D input is selected and both VGA and DVI-D cables are not connected, a floating dialog box as shown below



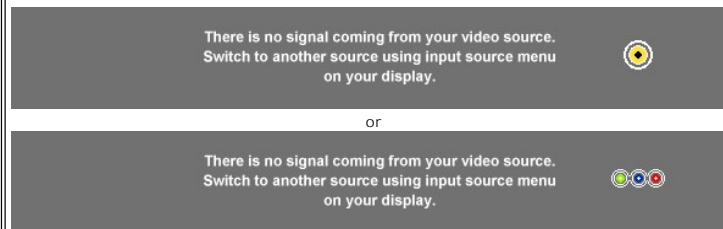

If either Composite, or Component input is selected and the cables are not connected or the video source is turned off, the screen will not have an image. If any button is pressed (except power button), the monitor displays the following message:




4	 OSD Menu	Use this key to open the on-screen display (OSD). See Using the OSD Menu .
5	 Exit	Use this key to exit the OSD menu.
6	 Power button (with power light indicator)	Use the power button to turn the monitor on and off. The blue light indicates the monitor is on and fully functional. An amber light indicates power save mode.

Using the OSD Menu

 **NOTE:** If you change the settings and then either proceed to another menu, or exit the OSD menu, the monitor automatically saves the changes. The changes are also saved if you change the settings and then wait for the OSD menu to disappear.

1. Press  to launch the OSD menu and display the main menu.

Main Menu for Analog (VGA) Input

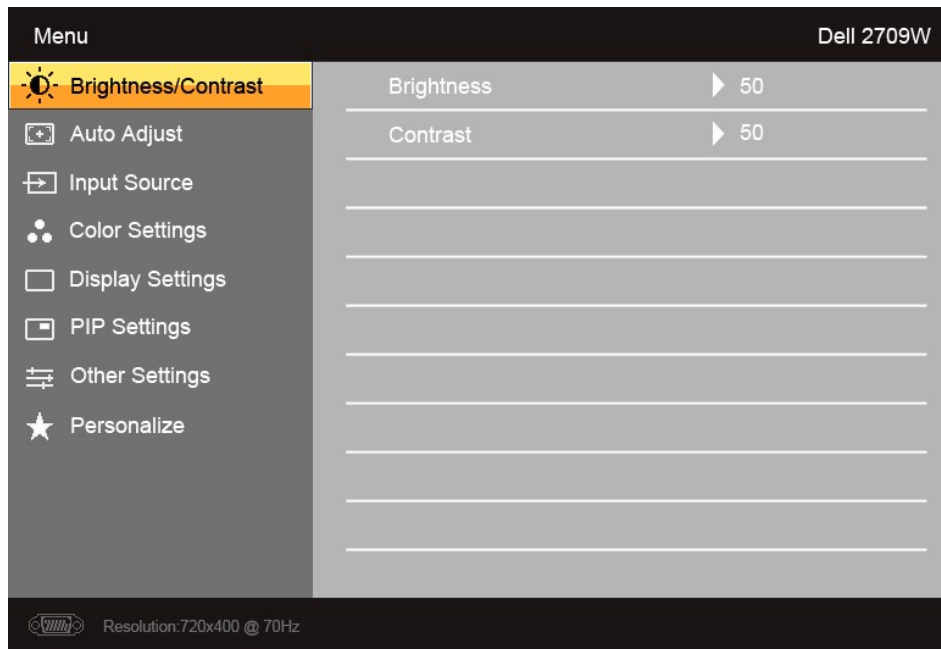











Or











Main Menu for non Analog (non VGA) Input




NOTE: Auto Adjust is only available when you are using the analog (VGA) connector.


2. Press the  and  buttons to move between the setting options. As you move from one icon to another, the option name is highlighted. See the table for a complete list of all the options available for the monitor.
3. Press the  button once to activate the highlighted option.
4. Press  and  button to select the desired parameter.
5. Press  to enter the slide bar and then use the  and  buttons, according to the indicators on the menu, to make your changes.


6. Press  return to the main menu or  to exit the OSD menu.

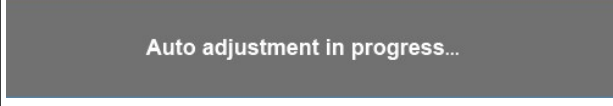Icon	Menu and Submenus	Description
	Brightness/Contrast	<p>Allows you to adjust the brightness and contrast.</p>  <p>Brightness Brightness adjusts the luminance of the backlight. Press the  button to increase brightness and Press the  button to decrease brightness (min 0 ~ max 100).</p> <p>Contrast Adjust Brightness first, and then adjust Contrast only if further adjustment is necessary. Press the  button to increase contrast and Press the  button to decrease contrast (min 0 ~ max 100). The Contrast function adjusts the degree of difference between the darkest and lightest areas on the monitor screen.</p> <p>Back Press  to go back to the main menu.</p>
	Auto Adjust	<p>Even though your computer recognizes your monitor on startup, the Auto Adjustment function optimizes the display setting</p>  <p>NOTE: In most cases, Auto Adjust produces the best image for your configuration. This option is only available when you a connector.</p>
	Input Source	The Input Source menu is to select between different video signals that may be connected to your monitor.

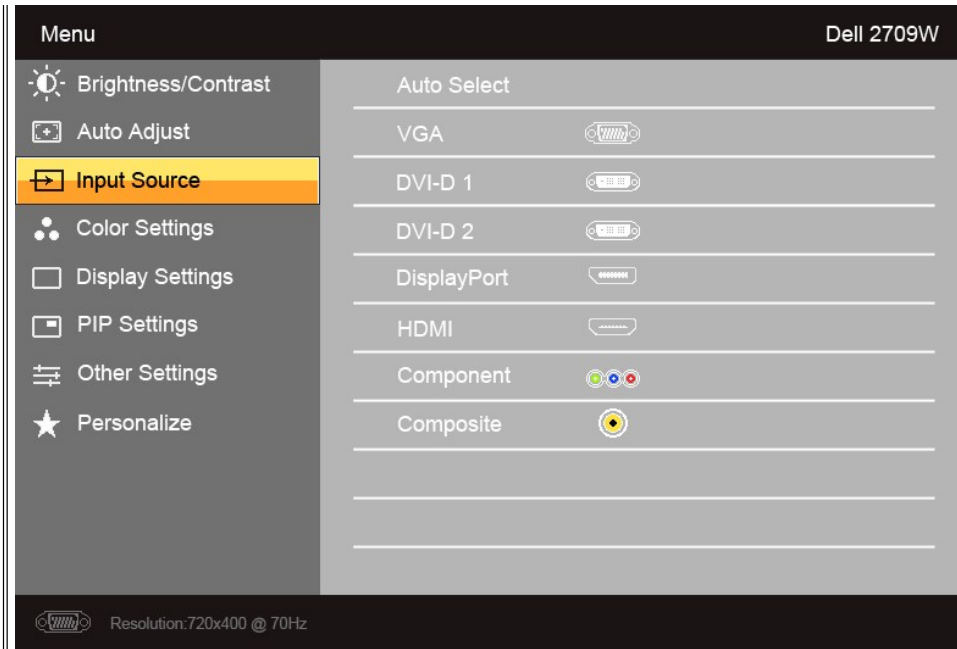

Auto Select	Scan for Sources. Press ✓ to scan for available input signals.
VGA	Select VGA input when you are using the analog (VGA) connector. Press ✓ to select the VGA input source.
DVI-D 1 & 2	Select DVI-D input when you are using the Digital (DVI) connector. Press ✓ to select the DVI input source.
DisplayPort	Select DisplayPort input when you are using DisplayPort connector. Press ✓ to select the DisplayPort input source.
HDMI	Select HDMI input when you are using HDMI connector. Press ✓ to select the HDMI input source.
Component	Select Component input when you are using component video connector. Press ✓ to select the component input source.
Composite	Select Composite input when you are using composite video connector. Press ✓ to select the composite input source.
Back	Press ↶ to go back to the main menu.


	Color Settings	Allows you to set the image mode and color format. Image mode submenu for VGA/DVI-D input
---	-----------------------	--

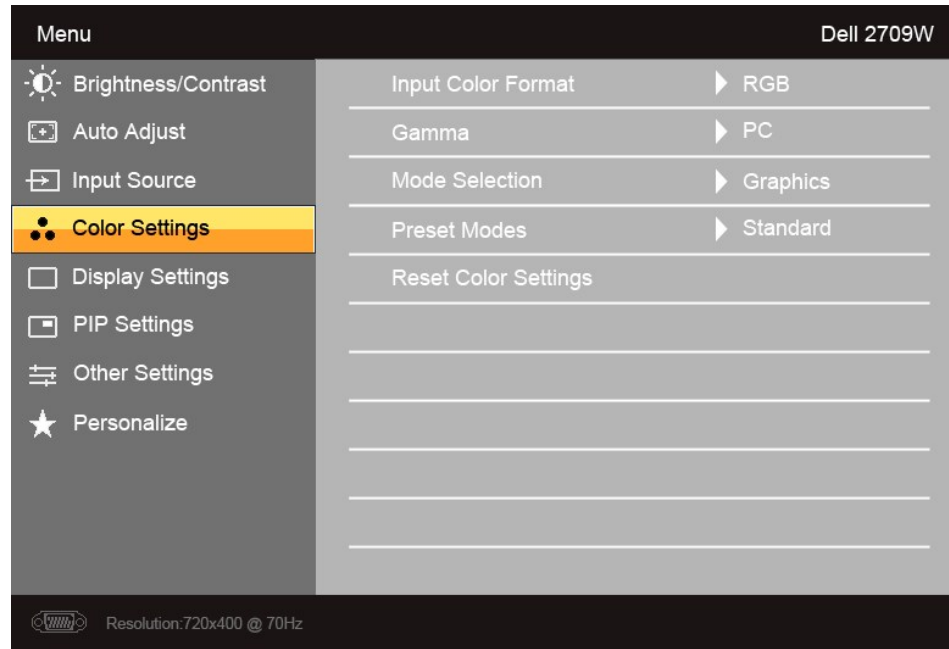

NOTE: Image modes are different between the VGA/DVI-D and Video inputs



Input Color Format	Allows you to set the color format to: PC RGB-Suitable for normal PC graphics display over DVI HD YPbPr-Suitable for HD video playback over DVI.
Gamma	Allows you to set the color mode to PC or Mac.
Mode Select	Allows you to set the display mode to Graphics or Video. If your computer is connected to your monitor, choose Graphics. If
Preset modes	
VGA/DVI-D input	
Standard	Mode suitable for desktop applications.
Multimedia	Mode for multimedia applications, eg video playback.
Game	Mode suitable for gaming applications.
Warm	Select warm mode to obtain a red tint. This color setting is typically used for color-intensive applications (photograph image
Cool	Select cool mode to obtain a bluish tint. This color setting is typically used for text based applications (spreadsheets, progr
Adobe RGB	This mode is compatible with Adobe RGB (1998).
sRGB	Emulates 72% NTSC color.

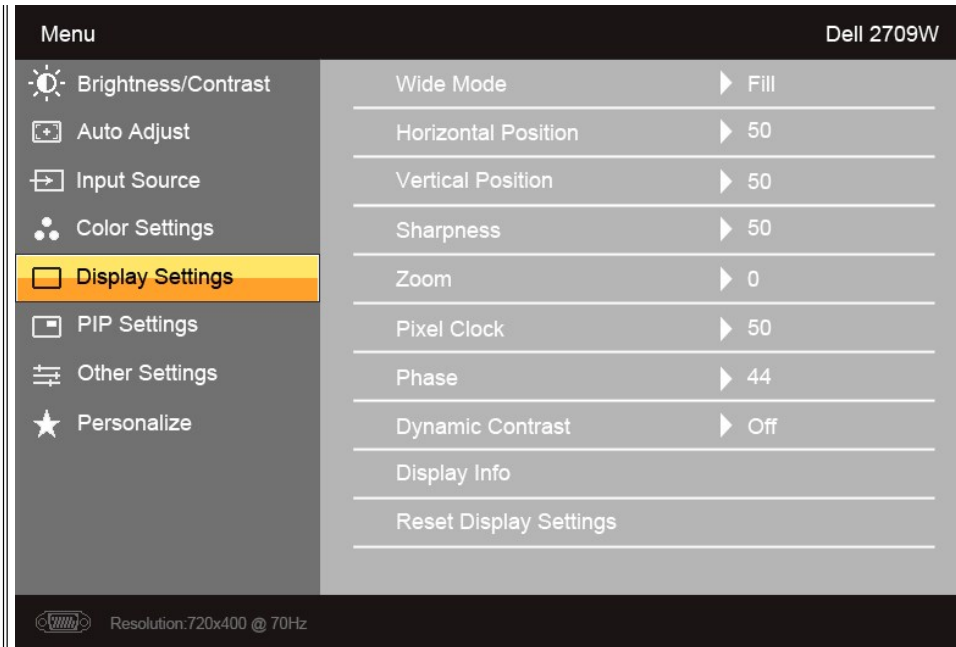
	<p>Custom (RGB)</p> <p>Custom (RGBCMY)</p> <p>Video input</p> <p>Movie</p> <p>Game</p> <p>Sports</p> <p>Nature</p> <p>Hue</p> <p>Saturation</p> <p>Reset Color Settings</p> <p>Back</p>	<p>Use the ▼ or ▲ button to increase or decrease each of the three colors (R, G, B) independently, in single-digit increments</p> <p>Use the ▼ or ▲ button to increase or decrease each of the six colors (R, G, B, C, M, Y) independently, in single-digit increments</p> <p>Mode suitable for movie playback.</p> <p>Mode suitable for game applications.</p> <p>Mode suitable for sports scenes.</p> <p>Mode suitable for nature scenes.</p> <p>This feature can make the video image color shift from green to purple. Use this feature to adjust the skin tone. Use ▼ or ▲ increases the green hue in the image ▲ increases the purple hue in the image</p> <p>NOTE: Hue adjustment is only available for video input.</p> <p>Allows you to adjust the color saturation of the video image. Use ▼ or ▲ button to adjust the saturation from '0' to '100' ▼ makes video image looks monochrome ▲ makes video image looks colorful</p> <p>NOTE: Saturation adjustment is only available for video input.</p> <p>Returns your monitor color settings to those that were set at the time of manufacture.</p> <p>Press ↶ to go back to the main menu.</p>
<input type="checkbox"/>	<p>Display Settings</p>	







Wide Mode Adjusts the image ratio as 1:1, Aspect or full screen.



NOTE: Wide Mode adjustment is not required at optimal preset resolution 1920 x 1200.

Horizontal Position Use the  and  buttons to adjust image left and right. Minimum is '0' (-). Maximum is '100' (+).

Vertical Position Use the  and  buttons to adjust image up and down. Minimum is '0' (-). Maximum is '100' (+).

Sharpness This feature can make the image look sharper or softer. Use  or  to adjust the sharpness from '0' to '100'.

Zoom Use the Zoom function to zoom in to specific area of interest.
Using the  and  keys to zoom in and out.


Pixel Clock The Phase and Pixel Clock adjustments allow you to adjust your monitor to your preference. These settings are accessed through 'Image Settings'.
Use the  and  buttons to adjust for best image quality.

Phase If satisfactory results are not obtained using the Phase adjustment, use the Pixel Clock (coarse) adjustment and then use
NOTE: Pixel Clock and Phase Adjustments are only available for "VGA" input.

Dynamic Contrast Allows you to increase the level of contrast to provide sharper and more detailed image quality.

Display Info Displays the monitor's current settings.

Reset Display Settings Resets the display settings to the original factory settings.


Back Press  to go back to the main menu.




PIP Settings

This function brings up a window displaying image from another input source.

PIP/PBP submenu when PIP/PBP OFF (main source is VGA/DVI-D input)

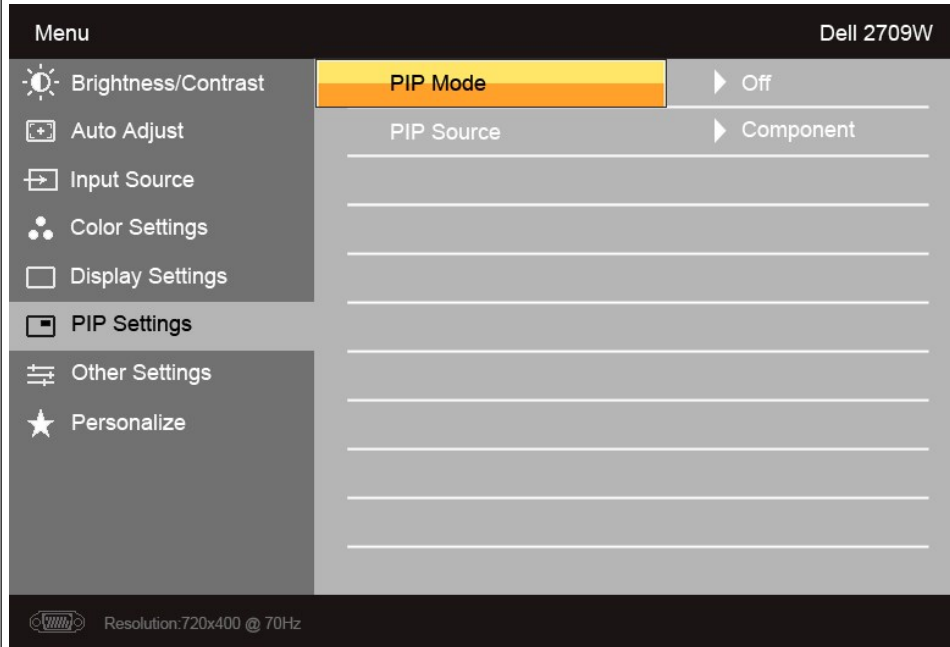

PIP/PBP submenu when PIP/PBP ON (main source is VGA/DVI-D input)

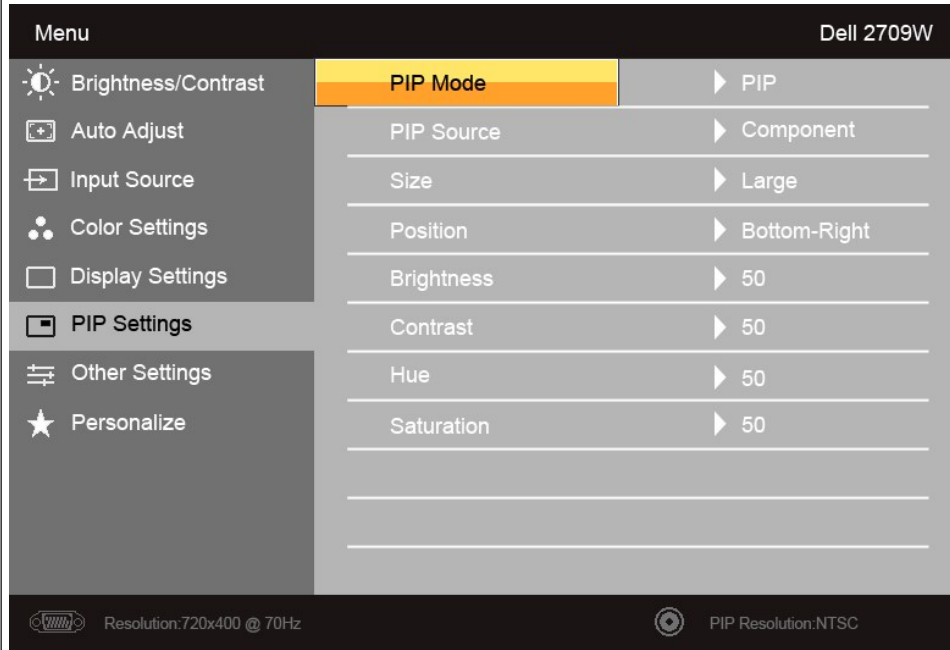

NOTE: When using DVI source, the contrast adjustment is not available.

PIP Mode


There are two modes: Picture in Picture (PIP) and Picture by Picture (PBP). Use **▼** and **▲** to browse and **✓** to select "Off", "PIP" or "PBP".



When PIP/PBP activated


When PIP/PBP is activated, select "Swap" to exchange the input source for the main screen and PIP/PBP window.


PIP Source

Select an input signal for PIP/PBP. (VGA/DVI-D 1/DVI-D 2/DP (DisplayPort)/HDMI/Composite/Component)

	Use ▼ and ▲ to browse and ✓ to select.
Size	Select PIP window size. Use ▼ and ▲ to browse and ✓ to select.
Position	Select PIP window position. Use ▼ and ▲ to browse and ✓ to select.
Brightness	Adjust the brightness level of the picture in PIP/PBP Mode. ▼ reduces the brightness ▲ increases the brightness
Contrast	Adjust the contrast level of the picture in PIP/PBP Mode. ▼ reduces the contrast ▲ increases the contrast
Hue	This function shifts the color of PIP/PBP image to green or purple. This is used to adjust for desired flesh tone color. ▼ shifts image color towards green ▲ shifts image color towards purple
Saturation	Adjust the color saturation of PIP/PBP image. ▼ makes the image look more monochrome ▲ makes the image look more colorful
Back	Press  to go back to the main menu.

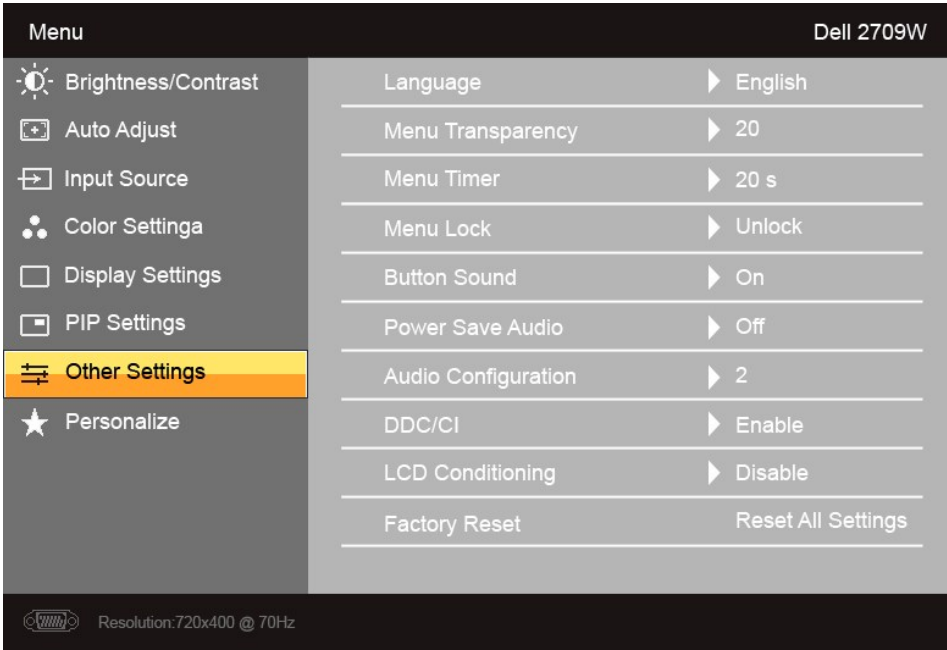	Other Settings	
	Language	Language option to set the OSD display to one of five languages (English, Espanol, Francais, Deutsch, Japanese).
	Menu Transparency	Allows you to adjust the OSD background from opaque to transparent.
	Menu Timer	OSD Hold Time: Sets the length of time the OSD will remain active after the last time you pressed a button. Use the ▼ and ▲ buttons to adjust the slider in 5 second increments, from 5 to 60 seconds.

	<p>Menu Lock</p> <p>Button Sound</p> <p>Power Save Audio</p> <p>Audio Configuration</p> <p>DDC/CI</p> <p>LCD Conditioning</p> <p>Factory Reset</p> <p>Back</p>	<p>Controls user access to adjustments. When selected, no user adjustments are allowed. All buttons are locked except the r</p> <p>NOTE: When the OSD is locked, pressing the menu button for 15 seconds will unlock and allow user access to all applicab pressing the menu button for 15 seconds will activate the Menu Lock function.</p> <p>The monitor beeps everytime a new option is selected in the menu. This button enables or disables the sound.</p> <p>Turns the Audio Power on or off during power save mode.</p> <p>Switches between 2.0 and 5.1 audio output.</p> <p>DDC/CI (Display Data Channel/Command Interface) allows your monitor parameters (brightness, color balance etc) to be a can disable this feature by selecting "Disable". Enable this feature for best user experience and optimum performance of your monitor.</p> <div data-bbox="492 663 1336 991" data-label="Image"> </div> <div data-bbox="492 1018 1101 1119" data-label="Image"> </div> <p>If an image appears to be stuck on the monitor, select LCD Conditioning to help eliminate any image retention. Using the l several hours. Severe cases of image retention are known as burn-in, the LCD Conditioning feature does not remove burn-</p> <div data-bbox="492 1184 1336 1509" data-label="Image"> </div> <p>Reset all OSD settings to the factory preset values.</p> <p>Press  to go back to the main menu.</p>
★	Personalize	There are three shortcut keys on the front panel. Select one control menu for each shortcut key to allow direct access.

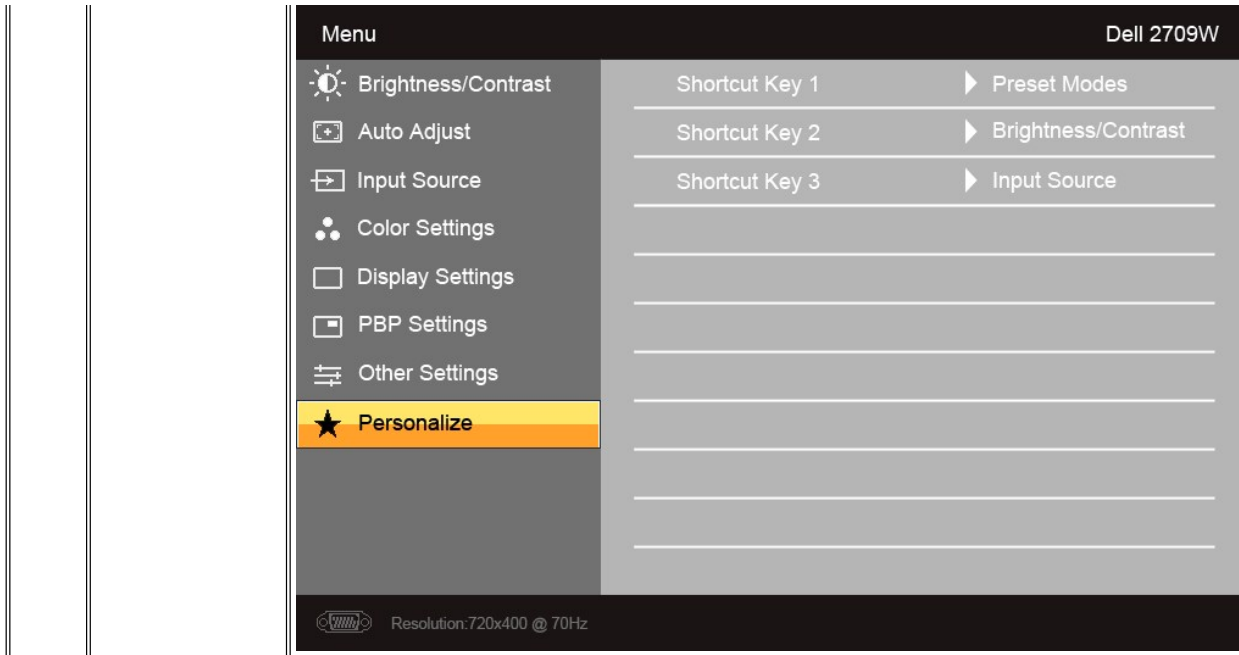


OSD Warning Messages

When the monitor does not support a particular resolution mode you will see the following message :



This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See [Monitor Specifications](#) for the Horizontal and Vertical fr ranges addressable by this monitor. Recommended mode is 1920 X 1200.

When monitor enters Power Save mode, the following message appears :

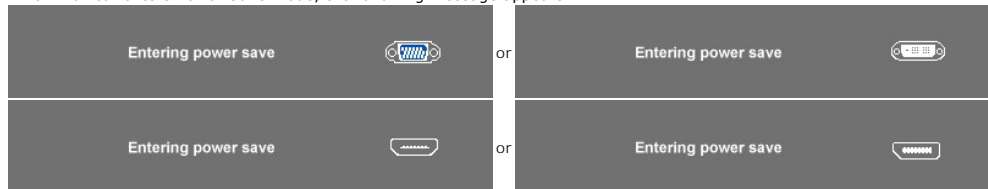


Activate the computer and wake up the monitor to gain access to the [OSD](#)


If you press any button other than the power button one of the following messages will appear depending on the selected input:

VGA/DVI -D/HDMI/DisplayPort input




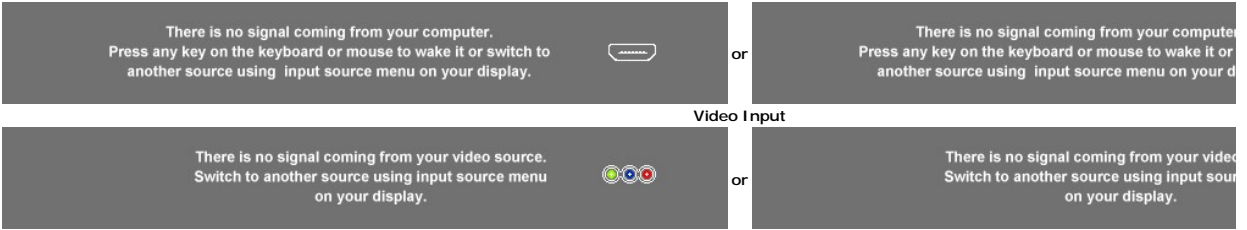

In PIP mode, when the monitor does not sense the selected second signal input, one of the following messages will appear depending upon the selected input as long as the OSD screen is closed.

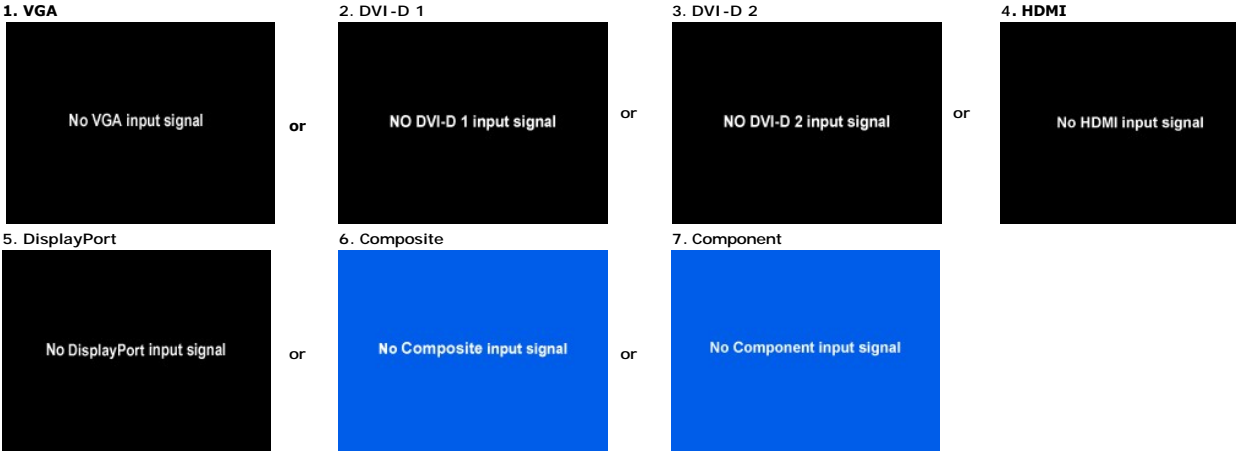

If either VGA, DVI-D, HDMI or DisplayPort input is selected and all VGA, DVI-D, HDMI and DisplayPort cables are not connected, a floating dialog box as shown below

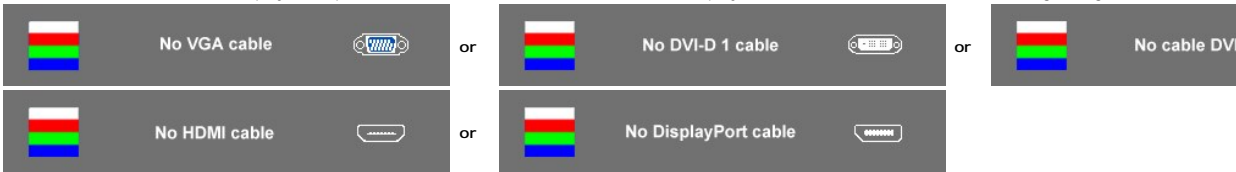

- NOTE: When the cable is connected back to the input of the monitor, any active PIP/PBP window will disappear. Please enter PIP/PBP submenu to bring back the window.
- NOTE: The PIP/PBP functions can bring up a picture from a second image source. Thus you can watch images from 1 PC source (D-Sub, DVI, HDMI or Display Source (Composite or Component)). The functions will not allow for 2 PC sources or 2 Video sources to perform PIP/PBP.

See [Solving Problems](#) for more information.

Setting the Optimal Resolution

1. Right-click on the desktop and select **Properties**.
2. Select the **Settings** tab.
3. Set the screen resolution to 1920 x 1200.
4. Click **OK**.

If you do not see 1920 x 1200 as an option, you may need to update your graphics driver. Depending on your computer, complete one of the following procedures.

If you have a Dell desktop or portable computer:


- o Go to support.dell.com, enter your service tag, and download the latest driver for your graphics card.

If you are using a non-Dell computer (portable or desktop):

- o Go to the support site for your computer and download the latest graphic drivers.
- o Go to your graphics card website and download the latest graphic drivers.

Using the Dell Soundbar (Optional)

The Dell Soundbar is a stereo two channel system adaptable to mount on Dell flat panel displays. The Soundbar has a rotary volume and on/off control to adjust the overall system level, a blue LED for power indication, and two audio headset jacks.

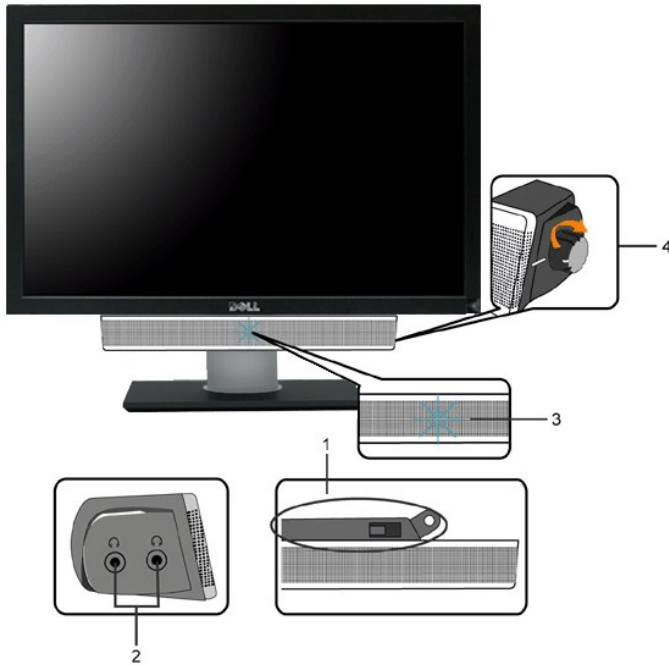



1. Attach mechanism
 2. Headphone connectors
 3. Power indicator
 4. Power/Volume control
-

Using the Tilt, Swivel and Vertical Extension

Tilt/Swivel

With the built-in pedestal, you can tilt and/or swivel the monitor for the most comfortable viewing angle.

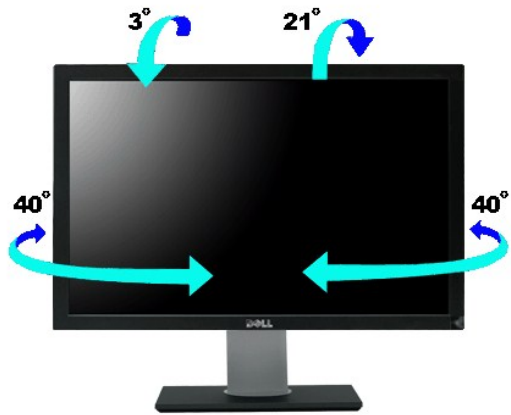

 **NOTE:** Stand is attached when the monitor is shipped from the factory.

Vertical Extension

Stand extends vertically up to 90 ± 5 mm.



[Back to Contents Page](#)

[Back to Contents Page](#)

Setting Up Your Monitor

Dell™ 2709W Flat Panel Monitor

Important instructions to set the display resolution to 1920x1200 (Optimal)

For optimal display performance while using the Microsoft® Windows® operating systems, set the display resolution to 1920 x 1200 pixels by performing the following steps:

1. Right-click on the desktop and click **Properties**.
2. Select the **Settings** tab.
3. Move the slider-bar to the right by pressing and holding left-mouse button and adjust the screen resolution to **1920x1200**.
4. Click **OK**.

If you do not see **1920x1200** as an option, you may need to update your graphics driver. Please choose the scenario below that best describes the computer system you are using, and follow the provided directions:

1: [If you have a Dell™ desktop or a Dell™ portable computer with internet access.](#)

2: [If you have non Dell™ desktop, portable computer, or graphic card.](#)

[Back to Contents Page](#)

Dell™ 2709W Flat Panel Monitor

- [User Guide](#)
- [Important instructions to set the display resolution to 1920x1200\(Optimal\)](#)

Information in this document is subject to change without notice.
© 2008 Dell Inc. All rights reserved.

Reproduction in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell*, the *DELL* logo, are trademarks of Dell Inc; *Microsoft* and *Windows* either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. *Adobe* is a trademark of Adobe Systems Incorporated, which may be registered in certain jurisdictions. *ENERGY STAR* is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model 2709Wb

July 2008 Rev. A02

Setting Up the Monitor

Dell™ 2709W Flat Panel Monitor User's Guide

- [Connecting the Monitor](#)
- [Organizing Your Cables](#)
- [Attaching the Soundbar \(optional\)](#)


Connecting Your Monitor

⚠ CAUTION: Before you begin any of the procedures in this section, follow the [safety instructions](#).

To connect your monitor to the computer perform the following steps/instructions:


- 1 Turn off your computer and disconnect the power cable.
- 1 Connect either the white (digital DVI-D) display connector cable, the blue (analog VGA) display connector cable, or the black DisplayPort cable to the corresponding video port on the back of your computer. Do not use all the cables on the same computer. Use all the cables only when they are connected to different computers with appropriate video systems.

Connecting the White DVI Cable

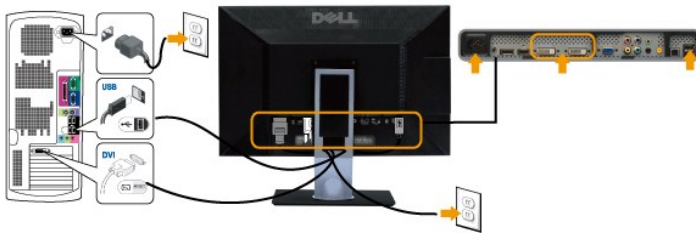


NOTE: Your monitor supports two DVI ports. You can either choose DVI-D 1 or DVI-D 2 via source select button.

Connecting the Blue VGA Cable

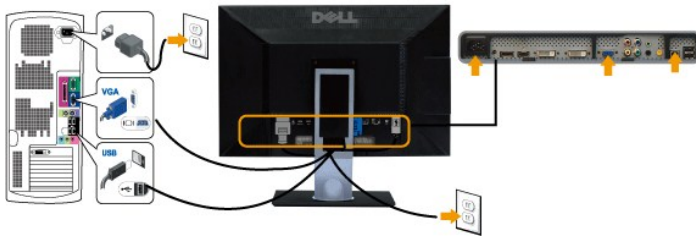

Connecting the Black DisplayPort Cable

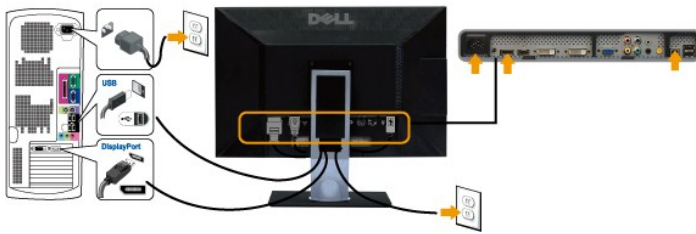

NOTE: The graphics are used for the purpose of illustration only. Appearance of the the computer may vary.

After you have completed connecting the DVI/VGA/DisplayPort cable, follow the procedure below to complete setting up your monitor:

- 1 Plug the power cables for your computer and monitor into a nearby outlet.


- 1 Turn on the monitor and the computer.
If your monitor displays an image, installation is complete. If it does not display an image, see [Solving Problems](#).
- 1 Use the cable management slot on the monitor stand to organize the cables.

Organizing Your Cables





After attaching all necessary cables to your monitor and computer, (See [Connecting Your Monitor](#) for cable attachment,) use the cable management slot to neatly organize all cables as shown above.

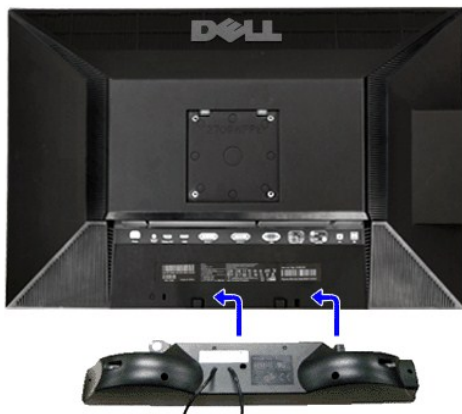Attaching the Soundbar



1. Working from the rear of the monitor, attach Soundbar by aligning the two slots with the two tabs along the bottom rear of the monitor.
2. Slide the Soundbar to the left until it snaps into place.
3. Connect the Soundbar with the DC power connector.
4. Insert the mini stereo plug from the rear of the Soundbar into the computer's audio output jack.

 **NOTICE:** Do not use with any device other than Dell Soundbar

 **NOTE:** Soundbar Power Connector +12V DC output is for optional Soundbar only.

[Back to Contents Page](#)

Solving Problems

Dell™ 2709W Flat Panel Monitor User's Guide

- [Monitor Specific Troubleshooting](#)
- [Common Problems](#)
- [Video Problems](#)
- [Product Specific Problems](#)
- [Universal Serial Bus \(USB\) Specific Problems](#)
- [Troubleshooting the Dell™ Soundbar \(Optional\)](#)
- [Card Reader Troubleshooting](#)

CAUTION: Before you begin any of the procedures in this section, follow the [Safety Instructions](#).


Troubleshooting Your Monitor

Self-Test Feature Check (STFC)

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

1. Turn off both your computer and the monitor.
2. Unplug the video cable from the back of the computer. To ensure proper Self-Test operation, remove both Digital (white connector) and the Analog (blue connector) cables from the back of computer.
3. Turn on the monitor.

The floating dialog box should appear on-screen (against a black background) if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains blue. Also, depending upon the selected input, one of the dialogs shown below will continuously scroll through the screen.

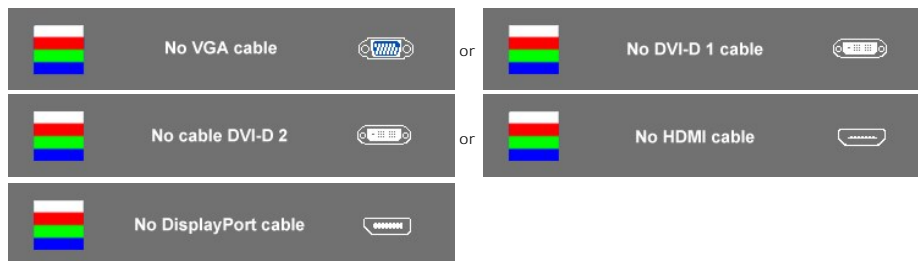

4. This box also appears during normal system operation if the video cable becomes disconnected or damaged.
5. Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer system, because your monitor is functioning properly.

NOTE: Self test feature check is not available for Composite, and Component video modes.

OSD Warning Messages

For OSD-related issues, see [OSD Warning Messages](#)

Common Problems

The following table contains general information about common monitor problems you might encounter.

Common Symptoms	What You Experience	Possible Solutions
No Video/ Power LED off	No picture	<ol style="list-style-type: none">1. Ensure that the video cable connecting the monitor and the computer is properly connected and secure.1. Verify that the power outlet is functioning properly using any other electric


		<ul style="list-style-type: none"> 1 Ensure that the power button is depressed fully.
No Video/ Power LED on	No picture or no brightness	<ul style="list-style-type: none"> 1 Increase brightness & contrast controls via OSD. 1 Perform monitor self-test feature check. 1 Check for bent or broken pins in the video cable connector.
Poor Focus	Picture is fuzzy, blurry, or ghosting	<ul style="list-style-type: none"> 1 Perform Auto Adjust via OSD. 1 Adjust the Phase and Pixel Clock controls via OSD. 1 Eliminate video extension cables. 1 Reset the monitor to Factory Settings. 1 Change the video resolution to the correct aspect ration (16:10).
Shaky/Jittery Video	Wavy picture or fine movement	<ul style="list-style-type: none"> 1 Perform Auto Adjust via OSD. 1 Adjust the Phase and Pixel Clock controls via OSD. 1 Reset the monitor to Factory Settings. 1 Check environmental factors. 1 Relocate the monitor and test in another room.
Missing Pixels	LCD screen has spots	<ul style="list-style-type: none"> 1 Cycle power on-off. 1 Pixel that is permanently off is a natural defect that can occur in LCD techn
Stuck-on Pixels	LCD screen has bright spots	<ul style="list-style-type: none"> 1 Cycle power on-off. 1 Pixel that is permanently off is a natural defect that can occur in LCD techn
Brightness Problems	Picture too dim or too bright	<ul style="list-style-type: none"> 1 Reset the monitor to Factory Settings. 1 Auto Adjust via OSD. 1 Adjust brightness & contrast controls via OSD.
Geometric Distortion	Screen not centered correctly	<ul style="list-style-type: none"> 1 Reset the monitor to Factory Settings. 1 Auto Adjust via OSD. 1 Adjust brightness & contrast controls via OSD. <p>NOTE: When using 'DVI-D', the positioning adjustments are not available.</p>
Horizontal/Vertical Lines	Screen has one or more lines	<ul style="list-style-type: none"> 1 Reset the monitor to Factory Settings. 1 Perform Auto Adjust via OSD. 1 Adjust Phase and Pixel Clock controls via OSD. 1 Perform monitor self-test feature check and determine if these lines are al mode. 1 Check for bent or broken pins in the video cable connector. <p>NOTE: When using 'DVI-D', the Pixel Clock and Phase adjustments are not avail</p>
Synchronization Problems	Screen is scrambled or appears torn	<ul style="list-style-type: none"> 1 Reset the monitor to Factory Settings. 1 Perform Auto Adjust via OSD. 1 Adjust Phase and Pixel Clock controls via OSD. 1 Perform monitor self-test feature check to determine if scrambled screen a test mode. 1 Check for bent or broken pins in the video cable connector. 1 Restart the computer in the <i>safe mode</i>.
Safety Related Issues	Visible signs of smoke or sparks	<ul style="list-style-type: none"> 1 Do not perform any troubleshooting steps. 1 Contact Dell immediately.
Intermittent Problems	Monitor malfunctions on & off	<ul style="list-style-type: none"> 1 Ensure that the video cable connecting the monitor to the computer is cor and is secure. 1 Reset the monitor to Factory Settings. 1 Perform monitor self-test feature check to determine if the intermittent pro self-test mode.
Missing Color	Picture missing color	<ul style="list-style-type: none"> 1 Perform monitor self-test feature check. 1 Ensure that the video cable connecting the monitor to the computer is cor and is secure. 1 Check for bent or broken pins in the video cable connector..
Wrong Color	Picture color not good	<ul style="list-style-type: none"> 1 Change the Color Setting Mode in the Color Settings OSD to Graphics or V to the application. 1 Try different Color Preset Settings in Color Settings OSD. Adjust R/G/B valu Settings OSD if the Color Management is turned off. 1 Change the Input Color Format to PC RGB or YPbPr in the Advance Setting
Image retention from a static image left on the monitor for a long period of time	Faint shadow from the static image displayed appears on the screen	<ul style="list-style-type: none"> 1 Use the Power Management feature to turn off the monitor at all times w/ more information, see Power Management Modes. 1 Alternatively, use a dynamically changing screensaver.

Video Problems

COMMON SYMPTOMS	WHAT YOU EXPERIENCE	POSSIBLE SOLUTIONS
No Video	No signal indicator is displayed	<ol style="list-style-type: none"> 1 Check Video Input Selection <ul style="list-style-type: none"> o Composite: Yellow colored RCA jack o Component: Red, Blue, Green colored RCA jacks
Low Quality DVD playback	Picture not crisp and some color distortion	<ol style="list-style-type: none"> 1 Check DVD connection <ul style="list-style-type: none"> o Composite gives good picture o Component: Red, Blue, Green colored RCA jacks
Blinking Video	Video is blinking or discontinuous	<ol style="list-style-type: none"> 1 Check DVD connection <ul style="list-style-type: none"> o Composite gives good picture o Component: Red, Blue, Green colored RCA jacks 1 Check if DVD player is HDCP compliant. <ul style="list-style-type: none"> o Some non-compliant players may exhibit blinking video and others v raster screen.

Product Specific Problems

SPECIFIC SYMPTOMS	WHAT YOU EXPERIENCE	POSSIBLE SOLUTIONS
Screen image is too small	Image is centered on screen, but does not fill entire viewing area	<ol style="list-style-type: none"> 1 Perform monitor reset on "Factory Reset"
Cannot adjust the monitor with the buttons on the front panel	OSD does not appear on the screen	<ol style="list-style-type: none"> 1 Turn the monitor off and unplug the power cord and then plug back and p
The monitor will not go into power saving mode.	No picture, the LED light is blue. When press "+", "-", or "Menu" key, the message " No Composite input signal " or " No Component input signal " will appear.	<ol style="list-style-type: none"> 1 Move mouse or hit any key on the keyboard on the computer or activate v access the OSD to set Audio to "off " state.
No Input Signal when you press the controls.	No picture, the LED light is blue. When you press "+", "-", or "Menu" key, the message " No Composite input signal " or " No Component input signal " will appear.	<ol style="list-style-type: none"> 1 Check the signal source Make sure the Computer is not in power saving b mouse or pressing any key on the keyboard. 1 Check to make sure Video Source to Composite or Component is powered video media. 1 Check whether the signal cable is plugged in and seated properly. Re-plu if necessary. 1 Re-boot the computer or video player.
The monitor will not fill the entire screen.	The picture can't fill the height or width of the screen.	<ol style="list-style-type: none"> 1 Due to the non-standard formats of DVDs, the monitor may not show the pictures.

 **NOTE:** When choosing DVI-D, DisplayPort, HDMI, Composite or Component video, [Auto Adjust](#) function is not available.

Universal Serial Bus (USB) Specific Problems

SPECIFIC SYMPTOMS	WHAT YOU EXPERIENCE	POSSIBLE SOLUTIONS
USB interface is not working	USB peripherals are not working	<ol style="list-style-type: none"> 1 Check that your monitor is powered ON. 1 Reconnect the upstream cable to your computer. 1 Reconnect the USB peripherals (downstream connector). 1 Switch off and then turn on the monitor again. 1 Reboot the computer.
High Speed USB 2.0 interface is slow.	High Speed USB 2.0 peripherals working slowly or not at all.	<ol style="list-style-type: none"> 1 Check that your computer is USB 2.0 capable. 1 Verify USB 2.0 source on your computer. 1 Reconnect the upstream cable to your computer. 1 Reconnect the USB peripherals (downstream connector). 1 Reboot the computer.

Troubleshooting the Dell™ Soundbar

COMMON SYMPTOMS	WHAT YOU EXPERIENCE	POSSIBLE SOLUTIONS
No Sound	No power to Soundbar - the power indicator is off. (built-in DC power supply. i.e. 2709W)	<ol style="list-style-type: none"> 1 Turn the Power/Volume knob on the Soundbar clockwise to the middle pos power indicator (blue LED) on the front of the Soundbar is illuminated. 1 Confirm that the power cable from the Soundbar is plugged into the monit 1 Confirm that the monitor has power. 1 If the monitor has no power, see Monitor Specific Troubleshooting for mor problem.

No Sound	Soundbar has power - power indicator is on.	<ul style="list-style-type: none"> 1 Plug the audio line-in cable into the computer's audio out jack. 1 Set all Windows volume controls to their maximum. 1 Play some audio content on the computer (i.e. audio CD, or MP3). 1 Turn the Power/Volume knob on the Soundbar clockwise to a higher volume. 1 Clean and reseal the audio line-in plug. 1 Test the Soundbar using another audio source (i.e. portable CD player).
Distorted Sound	Computer's sound card is used as the audio source.	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Confirm that the audio line-in plug is completely inserted into the jack of the computer. 1 Set all Windows volume controls to their midpoints. 1 Decrease the volume of the audio application. 1 Turn the Power/Volume knob on the Soundbar counter-clockwise to a low volume. 1 Clean and reseal the audio line-in plug. 1 Troubleshoot the computer's sound card. 1 Test the Soundbar using another audio source (i.e. portable CD player).
Distorted Sound	Other audio source is used.	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Confirm that the audio line-in plug is completely inserted into the jack of the audio source. 1 Decrease the volume of the audio source. 1 Turn the Power/Volume knob on the Soundbar counter-clockwise to a low volume. 1 Clean and reseal the audio line-in plug.
Unbalanced Sound Output	Sound from only one side of Soundbar	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Confirm that the audio line-in plug is completely inserted into the jack of the audio source. 1 Set all Windows audio balance controls (L-R) to their midpoints. 1 Clean and reseal the audio line-in plug. 1 Troubleshoot the computer's sound card. 1 Test the Soundbar using another audio source (i.e. portable CD player).
Low Volume	Volume is too low.	<ul style="list-style-type: none"> 1 Clear any obstructions between the Soundbar and the user. 1 Turn the Power/Volume knob on the Soundbar clockwise to the maximum. 1 Set all Windows volume controls to their maximum. 1 Increase the volume of the audio application. 1 Test the Soundbar using another audio source (i.e. portable CD player).

Troubleshooting the Card Reader



NOTICE: Do not remove the device while reading or writing media. Doing so may cause loss of data or malfunction in the media.

Problem	Cause	Solution
Drive letter is not assigned. (Windows® XP only)	Conflict with network drive letter.	<p>A. Right-click My Computer on the desktop, and then click Manage. Under Computer Management, click Disk Management.</p> <p>B. In the list of drives in the right panel, right-click Removable Device and the Drive Letter and Paths.</p> <p>C. Click Change, and in the drop-down box, specify a drive letter for the Removable Device choosing one that is not assigned to the mapped network drives.</p> <p>D. Click OK, and then click OK again</p>
Drive letter is assigned, but the media is not accessible	The media needs reformatting.	Right-click the drive in Explorer and choose Format from the resulting menu.
The media has been ejected during writing or erasing.	<p>Displays the error message, "Error copying file or folder."</p> <p>Displays the error message, "Cannot write folder (folder name) or file (file name)," during writing, or, "Cannot remove folder (folder name) or file(file name)," while erasing, you cannot write or erase in the same folder or file name.</p>	<p>Reinsert the media and write or erase again.</p> <p>Format the media for writing or erasing the same folder or file name.</p>
Despite the disappearance of the pop-up window, the media has been ejected while the LED was blinking.	Although the pop-up window disappears during writing, if you eject your media while the LED is still blinking, then you cannot complete your action on the media.	Format the media for writing or erasing the same folder or file name.
Cannot format or write on the media.	Write protect switch is enabled.	Verify that the write-protect switch of the media is unlocked.