Dell™ IN1720/IN1920 Flat Panel Monitor User's Guide

About Your Monitor

Setting Up the Monitor

Operating the Monitor

Troubleshooting

<u>Appendix</u>

Notes, Notices, and Cautions

NOTE: A NOTE indicates important information that helps you make better use of your computer.



NOTICE: A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A CAUTION indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice. © 2010 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell and the DELL logo are trademarks of Dell Inc.; Microsoft and Windows are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries. ENERGY STAR is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model IN1720c/IN1920c/IN1920b/IN1920f

January 2010 Rev. A00

Back to Contents Page

About Your Monitor

Dell™ IN1720/IN1920 Flat Panel Monitor User's Guide

- Package Contents
- Product Features
- Identifying Parts and Controls
- Monitor Specifications
- Plug and Play Capability
- LCD Monitor Quality & Pixel Policy
- Maintenance Guidelines

Package Contents

Your monitor ships with all the components shown below. Ensure that you have received all the components and Contact Delli* if anything is missing.

NOTE: Some items may be optional and may not ship with your monitor. Some features or media may not be available in certain countries.



Product Features

The Dell[™] IN1720/IN1920 flat panel display has an active matrix, Thin-film Transistor, Liquid Crystal Display. The monitors features include:


- IN1720: 17-inch (433.0 mm) viewable area display. 1440x900 resolution, plus full-screen support for lower resolutions.
- IN1920: 18.5-inch (470.0 mm) viewable area display. 1366x768 resolution, plus full-screen support for lower resolutions.
- Wide viewing angle to allow viewing from a sitting or standing position, or while moving from side-to-side.
- Tilt adjustment capability.
- Removable pedestal and Video Electronics Standards Association (VESA) 100mm mounting holes for flexible mounting solutions.
- Plug and play capability if supported by your system.
- On-Screen Display (OSD) adjustments for ease of set-up and screen optimization.
- Software and documentation media which includes an information file (INF), Image Color Matching File (ICM), and product documentation.
- Energy Saver feature for ENERGY STAR® compliance.
- Security lock slot.


Identifying Parts and Controls

Front View



- Function buttons (For more information, see
 Operating the Monitor)
- 2. Power On/Off button (with LED indicator)

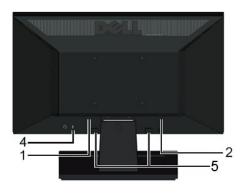

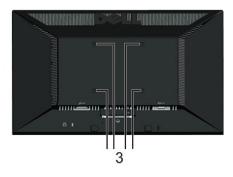


Label	Description	Use
1	Barcode serial number label	Refer to this label if you need to contact Dell for technical support.
2	Regulatory rating label	List the regulatory approvals.
3	VESA mounting holes (100mm)	To mount the monitor.
4	Security lock slot	Use a security lock with the slot to help secure your monitor.
5	Dell soundbar mounting brackets (only for IN1920)	To attach the optional Dell Soundbar.

Side View



Bottom View

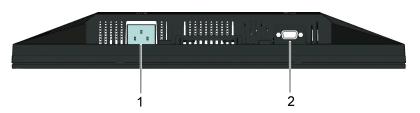

Label	Description	Use
1	AC power connector To connect the monitor power cable.	
2	VGA connector	To connect your computer to the monitor using a VGA cable.

Monitor Specifications

The following sections give you information about the various power management modes and pin assignments for the various connectors of your monitor.

Power Management Modes

If you have VESA's DPM compliance display card or software installed in your PC, the monitor automatically reduces its power consumption when not in use. This referred to as *Power Save Mode.* If the computer detects input from keyboard, mouse, or other input devices, the monitor automatically resumes functioning. The following table shows the power consumption and signaling of this automatic power saving feature:


IN1720:

VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation	Active	Active	Active	White	20 W(Typical) /25 W(Maximum)
Active-off mode	Inactive	Inactive	Blank	Amber	Less than 2 W
Switch off	=	-	=	Off	Less than 1 W

IN1920:

VESA Modes	Horizontal Sync	Vertical Sync	Video	Power Indicator	Power Consumption
Normal operation	Active	Active	Active		19 W(Typical) /23 W(Maximum)
Active-off mode	Inactive	Inactive	Blank	Amber	Less than 1 W
Switch off	-	-	-	Off	Less than 1 W

The OSD will only function in the normal operation mode. When any button except power button is pressed in Active-off mode, the following messages will be disp

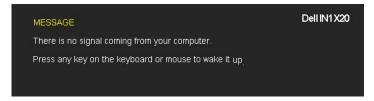

Activate the computer and monitor to gain access to the OSD.




NOTE: Dell IN1720/IN1920 Flat Panel monitor is ENERGY STAR®-compliant.

Zero power consumption in OFF mode can only be achieved by disconnecting the main cable from the monitor.



Pin Assignments

15-pin D-Sub connector

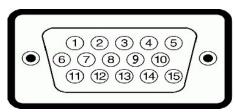

Pin Number	Monitor Side of the 15-pin Side Signal Cable
1	Video-Red
2	Video-Green
3	Video-Blue
4	GND
5	Self-test
6	GND-R
7	GND-G
8	GND-B
9	DDC +5V

10	GND-sync
11	GND
12	DDC data
13	H-sync
14	V-sync
15	DDC clock

Plug and Play Capability

You can install the monitor in any Plug and Play compatible system. The monitor automatically provides the computer with its Extended Display Identification Dat (EDID) using Display Data Channel (DDC) protocols so that the system can configure itself and optimize the monitor settings. Most monitor installations are autor You can select different settings if required.

Flat Panel Specifications

Model number	Dell I N1720 Flat Panel Monitor	Dell IN1920 Flat Panel Monitor		
Screen type	Active matrix - TFT LCD	Active matrix - TFT LCD		
Panel Type	TN	TN		
Screen dimensions	17 inches (17-inch wide viewable image size)	18.5 inches (18.5-inch wide viewable image size)		
Preset display area:				
1 Horizontal	367.2 mm (14.5 inches)	409.8 mm (16.1 inches)		
ı Vertical	229.5 mm (9.04 inches)	230.4 mm (9.07 inches)		
Pixel pitch	0.255 mm	0.300 mm		
Viewing angle:				
ı Horizontal	160° typical	160° typical		
ı Vertical	150° typical	160° typical		
Luminance output	250 CD/m ² (typical)	250 CD/m ² (typical)		
Contrast ratio	600 to 1 (typical)	1000 to 1 (typical)		
Faceplate coating	Anti-glare	Anti-glare		
Backlight	2 CCFL edgelight system	2 CCFL edgelight system		
Response Time	8ms typical	5ms typical		
Color Gamut 60% (typical)*		72% (typical)*		

^{*}Dell IN1720 Flat Panel monitor color gamut (typical) is based on CIE 1976 (65%) and CIE1931 (60%) test standards.

Resolution Specifications

Model number	Dell IN1720	Dell IN1920 Flat Panel Monitor	
Scan range			
Horizontal Vertical	, , ,	30 kHz to 83 kHz (automatic) 50 Hz to 75 Hz (automatic)	
Maximum preset resolution	1440 x 900 at 60 Hz	1366 x 768 at 60 Hz	

Electrical Specifications

	Model number	Dell IN1720/IN1920 Flat Panel Monitor
ш		

^{*}Dell IN1920 Flat Panel monitor color gamut (typical) is based on CIE 1976 (83%) and CIE1931 (72%) test standards.

Video input signals	Analog RGB: 0.7 Volts +/-5%, 75 ohm input impedance
Synchronization input signals	Separate horizontal and vertical synchronizations, polarity-free TTL level, SOG (Composite SYNC on green)
AC input voltage / frequency / current	100 to 240 VAC/50 or 60 Hz ± 3 Hz/1.6A (Max.)
Inrush current	120V: 30A (Max.) 240V: 60A (Max.)

Preset Display Modes

The following table lists the preset modes for which Dell guarantees image size and centering: ${\bf IN1720}$:

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/Vertical)
VESA, 720 x 400	31.5	70.0	28.3	-/+
VESA, 640 x 480	31.5	60.0	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 800 x 600	37.9	60.3	40.0	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1152 x 864	67.5	75.0	108 .0	+/+
VESA, 1280 x 1024	64.0	60.0	108.0	+/+
VESA, 1280 x 1024	80.0	75.0	135.0	+/+
VESA, 1440 x 900	55.935	60.0	106.5	-/+

IN1920:

Display Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (Horizontal/Vertical)
VESA, 720 x 400	31.5	70.0	28.3	-/+
VESA, 640 x 480	31.5	60.0	25.2	-/-
VESA, 640 x 480	37.5	75.0	31.5	-/-
VESA, 800 x 600	37.9	60.0	40.0	+/+
VESA, 800 x 600	46.9	75.0	49.5	+/+
VESA, 1024 x 768	48.4	60.0	65.0	-/-
VESA, 1024 x 768	60.0	75.0	78.8	+/+
VESA, 1366 x 768	47.7	60.0	85.5	+/+

Physical Characteristics

The following table lists the monitor physical characteristics:

Model Number	Dell IN1720 Flat Panel Monitor	Dell IN1920 Flat Panel Monitor	
Connector type	15-pin D-subminiature, blue connector;	15-pin D-subminiature, blue connector;	
Signal cable type	Analog: Detachable, D-Sub, 15pins, shipped attached to the monitor	Analog: Detachable, D-Sub, 15pins, shipped attached to the monitor	
Dimensions: (with stand)			
ı Height	13.17 inches (334.58 mm)	13.36 inches (339.34 mm)	
ı Width	15.91 inches (404.15 mm)	17.48 inches (443.99 mm)	
ı Depth	6.17 inches (156.67 mm)	6.13 inches (155.70 mm)	
Dimensions: (without stand)			
1 Height	10.49 inches (266.45 mm)	10.42 inches (264.67 mm)	
1 Width	15.91 inches (404.15 mm)	17.48 inches (443.99 mm)	
1 Depth	2.17 inches (55.00 mm)	2.52 inches (64.01 mm)	
Stand dimensions:			

ı Height	4.72 inches (119.96 mm)	4.91 inches (124.71 mm)	
ı Width	8.66 inches (219.92 mm)	9.84 inches (249.94 mm)	
ı Depth	6.17 inches (156.67 mm)	6.13 inches (155.70 mm)	
Weight with packaging	8.75 lbs (3.97 kg)	12.03 lbs (5.47 kg)	
Weight with stand assembly and cables	6.03 lbs (2.74 kg)	8.51 lbs (3.87 kg)	
Weight without stand assembly (For wall mount or VESA mount considerations - no cables)	5.04 lbs (2.29 kg)	6.73 lbs (3.06 kg)	
Weight of stand assembly	0.75 lbs (0.34 kg)	1.54 lbs (0.70 kg)	

Environmental Characteristics

The following table lists the environmental conditions for your monitor:

Model Number	Dell IN1720 Flat Panel Monitor	Dell IN1920 Flat Panel Monitor	
Temperature			
1 Operating	0° to 40°C (32° to 104°F)	0° to 40°C (32° to 104°F)	
ı Non-operating	Storage: -20° to 60°C (-4° to 140°F) Shipping: -20° to 60°C (-4° to 140°F)	Storage: -20° to 60°C (-4° to 140°F) Shipping: -20° to 60°C (-4° to 140°F)	
Humidity			
Operating Non-operating	10% to 80% (non-condensing) Storage: 5% to 90% (non-condensing) Shipping: 5% to 90% (non-	10% to 80% (non-condensing) Storage: 5% to 90% (non-condensing) Shipping: 5% to 90% (non-	
	condensing)	condensing)	
Altitude			
ı Operating	3,657.6m (12,000 ft) max	3,657.6m (12,000 ft) max	
ı Non-operating	12,192m (40,000 ft) max	12,192m (40,000 ft) max	
Thermal dissipation	256.08 BTU/hour (maximum) 119.5 BTU/hour (typical)	71.82 BTU/hour (maximum) 64.98 BTU/hour (typical)	

LCD Monitor Quality & Pixel Policy

During the LCD Monitor manufacturing process, it is not uncommon for one or more pixels to become fixed in an unchanging state. The visible result is a fixed pix appears as an extremely tiny dark or bright discolored spot. When the pixel remains permanently lit, it is known as a "bright dot." When the pixel remains black, known as a "dark dot."

In almost every case, these fixed pixels are hard to see and do not detract from display quality or usability. A display with 1 to 5 fixed pixels is considered norma within competitive standards. For more information, see Dell Support site at: support.dell.com.

Maintenance Guidelines

Caring for Your Monitor





▲ CAUTION: Before cleaning the monitor, unplug the monitor power cable from the electrical outlet.

For best practices, follow the instructions in the list below while unpacking, cleaning, or handling your monitor:

- To clean your antistatic screen, slightly dampen a soft, clean cloth with water. If possible, use a special screen-cleaning tissue or solution suitable for the antistatic coating. Do not use benzene, thinner, ammonia, abrasive cleaners, or compressed air.
 Use a slightly dampened, warm cloth to clean the plastics. Avoid using detergent of any kind as some detergents leave a milky film on the plastics.
 If you notice a white powder when you unpack your monitor, wipe it off with a cloth. This white powder occurs during the shipping of the monitor.
 Handle your monitor with care as a darker-colored monitor may scratch and show white scuff marks more than a lighter-colored monitor.
 To help maintain the best image quality on your monitor, use a dynamically changing screen saver and power off your monitor when not in use.

Appendix

Dell™ IN1720/IN1920 Flat Panel Monitor User's Guide

- Safety Instructions
- FCC Notice (U.S. Only) and Other Regulatory Information
- Contacting Dell

^CAUTION: Safety Instructions



CAUTION: Use of controls, adjustments, or procedures other than those specified in this documentation may result in exposure to shock, electrical hazards, and/or mechanical hazards.

For information on safety instructions, see the Product Information Guide.

FCC Notices (U.S. Only) and Other Regulatory Information

For FCC notices and other regulatory information, see the regulatory compliance website located at www.dell.com\regulatory compliance.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions

- (1) this device may not cause harmful interference
- (2) this device must accept any interference received including interference that may cause undesired operation

Contacting Dell

For customers in the United States, call 800-WWW-DELL (800-999-3355).



NOTE: If you do not have an active Internet connection, you can find contact information on your purchase invoice, packing slip, bill, or Dell product catalog.

Dell provides several online and telephone-based support and service options. Availability varies by country and product, and some services may not be available in your area. To contact Dell for sales, technical support, or customer service issues:

- 2. Verify your country or region in the Choose A Country/Region drop-down menu at the bottom of the page.
- 3. Click Contact Us on the left side of the page.
- 4. Select the appropriate service or support link based on your need.
- 5. Choose the method of contacting Dell that is convenient for you.

Back to Contents Page

Setting Up Your Monitor Dell™ IN1720/IN1920 Flat Panel Monitor

If you have a Dell™ desktop or a Dell™ portable computer with internet access

- 1. Go to http://support.dell.com, enter your service tag, and download the latest driver for your graphics card.
- 2. After installing the drivers for your graphics adapter, attempt to set the resolution to 1440 x 900 (for IN1720) or 1366 x 768 (for IN1920) again.

NOTE: If you are unable to set the resolution to 1440 x 900 (for IN1720) or 1366 x 768 (for IN1920), please contact Dell™ to inquire about a graphics adapter that supports these resolutions.

Setting Up Your Monitor

Dell™ IN1720/IN1920 Flat Panel Monitor

If you have a non Dell™ desktop, portable computer, or graphics card

- 1. Right-click on the desktop and click Properties.
- 2. Select the Settings tab.
- 3. Select Advanced.
- 4. Identify your graphics controller supplier from the description at the top of the window (e.g. NVIDIA, ATI, Intel etc.).
- 5. Refer to the graphic card provider website for updated driver (for example, http://www.ATI.com OR http://www.NVIDIA.com).
- 6. After installing the drivers for your graphics adapter, attempt to set the resolution to 1440 x 900 (for IN1720) or 1366 x 768 (for IN1920) again.

NOTE: If you are unable to set the resolution to 1440 x 900 (for IN1720) or 1366 x 768 (for IN1920), please contact the manufacturer of your computer or consider purchasing a graphics adapter that will support the video resolution of 1440 x 900 (for IN1720) or 1366 x 768 (for IN1920).

Operating the Monitor DellTM IN1720/IN1920 Flat Panel Monitor User's Guide

- Using the Front Panel Controls
- Using the On-Screen Display (OSD) Menu
- Setting the Maximum Resolution
- Using the Dell Soundbar (Optional).
- Using the Tilt


Power On the Monitor

Press the button to turn on the monitor



Using the Front Panel Controls

Use the keys on the front of the monitor to adjust the image settings.

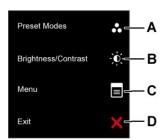


	Front panel Key	Description
А	Preset modes	Use the Preset modes key to choose from a list of preset color modes. See <u>Using the OSD Menu</u> .
В		
	Brightness / Contrast	Use the Brightness / Contrast key to direct access to the "Brightness" and "Contrast" control menu.
С	Menu	Use the Menu key to open the on-screen display (OSD).
D		



Use the Exit key to exit on-screen display (OSD) from menu and sub-menus.

Front panel Key

Use the keys on the front of the monitor to adjust the image settings.

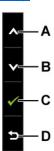

	Front panel Key	Description
A	N _{Up}	Use the Up key to adjust (increase ranges) items in the OSD menu.
В	Down	Use the Down key to adjust (decrease ranges) items in the OSD menu.
С	OK OK	Use the OK key to confirm your selection.
D	Back	Use the Back key to go back to the previous menu.

Using the On-Screen Display (OSD) Menu

Accessing the Menu System

NOTE: If you change the settings and then either proceed to another menu or exit the OSD menu, the monitor automatically saves those changes. The changes are also saved if you change the settings and then wait for the OSD menu to disappear.

Press the button to open the OSD menu and display the main menu.

Main Menu



- 2. Press the and buttons to toggle between options in the Menu. As you move from one icon to another, the option name is highlighted.
- 3. To select the highlighted item on the menu press the button again.
- 4. Press the and buttons to select the desired parameter.
- 5. Press the button to enter the slide bar and then use the or buttons, according to the indicators on the menu, to make your changes.
- 6. Select the lacktriangle to return to previous menu without accepting current settings or lacktriangle to accept and return to previous menu.

The table below provides a list of all the OSD menu options and their functions.

con	Menu and Submenus	Description				
Ö	BRIGHTNESS/CONTRAST	Use the Brightness and Contrast men	u to adjust the Brightness/Contrast.			
		Menu				DellIN
		- Brightness / Contras	Brightness	•	75	
		Auto Adjust	Contrast	>	75	
		Color Settings				
		Display Settings				
		★ Personalize				
		Resolution: 640 x 480 @60Hz	М	aximum R	esolution: 13	66 x 768 @
	Back	Press to go back to the main men	u.			
	Brightness	Allows you to adjust the brightness or	luminance of the backlight.			
		Press the key to increase brightn	ess and press the 🗪 key to decrease b	rightness (ı	min 0 ~ max 1	00).
	Contrast	Allows you to adjust the contrast or the contrast only if you need further adjust	ne degree of difference between darknes	ss and light	iness on the m	onitor scree
			and press the key to decrease conti	ast (min 0	~ max 100).	
	Auto Adjust	Use this key to activate automatic set	up and adjust menu. The following dialo	g appears	on a black scre	een as the n

Auto Adjustment in Progress...


Auto Adjustment allows the monitor to self-adjust to the incoming video signal. After using Auto Adjustment, you can Pixel Clock (Coarse) and Phase (Fine) controls under Image Settings.

NOTE: Auto Adjust does not occur if you press the button while there are no active video input signals or attached cables.



COLOR SETTINGS

Use the ${\bf Color}\ {\bf Setting}\ {\bf menu}\ {\bf to}\ {\bf adjust}\ {\bf the}\ {\bf monitor's}\ {\bf color}\ {\bf settings}.$

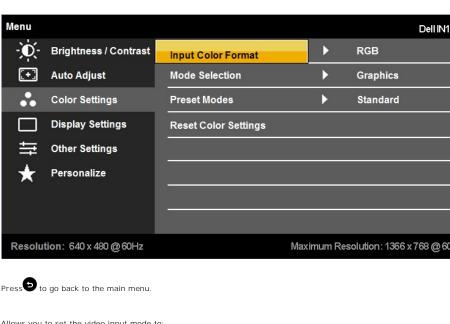

Back

Input Color Format

Allows you to set the video input mode to:

- 1 RGB: Select this option if your monitor is connected to a computer or DVD player using the HDMI cable or the H
- 1 YPbPr: Select this option if your DVD player supports only YPbPr output.

Mode Selection

Allows you to set the display mode to:


- 1 Graphics: Select this mode if your monitor is connected to your computer.
- 1 Video: Select this mode if your monitor is connected to a DVD player.

Preset Mode

NOTE: Depending upon the Display Mode you select the Preset Modes available for your monitor change.


Allows you to choose from a list of preset color modes.

In the Graphics mode, you can set the color to the following preset values:

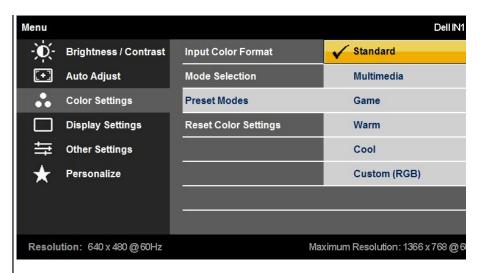

- 1 Standard: Loads the monitor's default color settings. This is the default preset mode.
- 1 Multimedia: Loads color settings ideal for multimedia applications.
- 1 Game: Loads color settings ideal for most gaming applications.
- 1 Warm: Increase the color temperature. The screen appears warmer with a red/yellow tint.
- 1 Cool: Decreases the color temperature. The screen appears cooler with a blue tint.
- 1 Custom (RGB): Allows you to manually adjust the color settings. press the and keys to adjust the Revour own preset color mode.

In the Video mode, you can set the color to the following preset values:

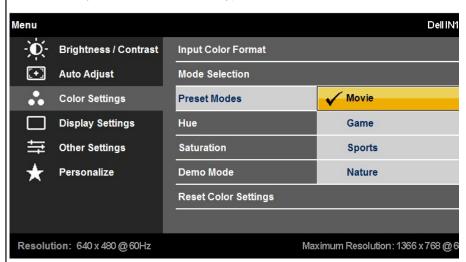

- 1 Movie: Loads color settings ideal for movies. This is the default preset mode.
- 1 Game: Loads color settings ideal for most gaming applications.
- 1 Sports: Loads color settings ideal for sports.
- 1 Nature: Loads color settings ideal for nature.

Allows you to adjust the skin tone of the image. Use lack o or lack v to adjust the hue from '0' to '100'.

NOTE: Hue adjustment is available only in the Video mode.

Allows you to adjust the color saturation of the image. Use lack o or lack v to adjust the saturation from '0' to '100'.

NOTE: Saturation adjustment is available only in the Video mode.

You can launch the Demo Mode to identify the monitor display difference between Normal and Enhanced.


Resets your monitor's color settings to the factory defaults.


Hue

Saturation

Demo Mode

Reset Color Settings

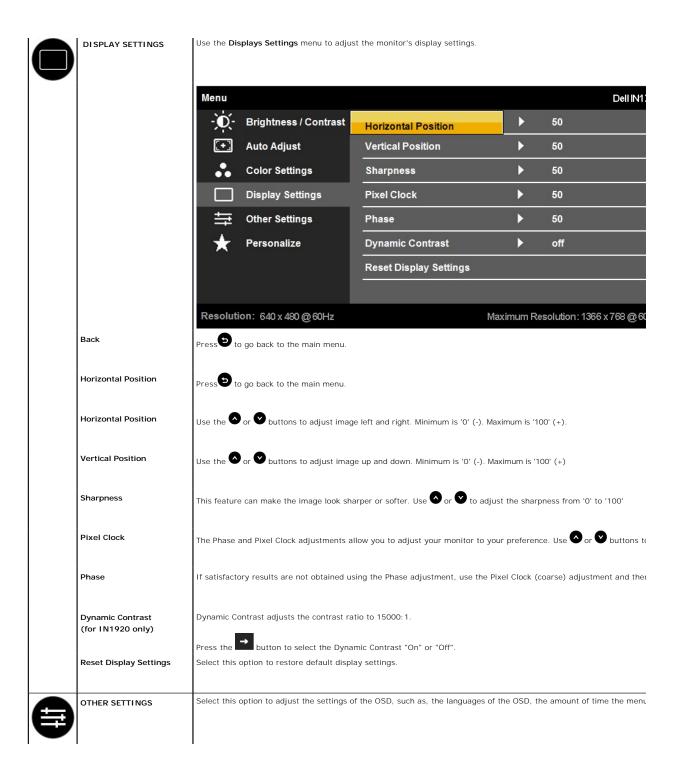

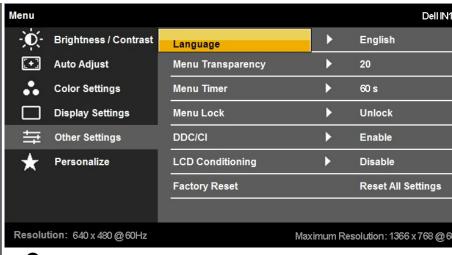

Back

Language

Menu Transparency

Menu Timer

Menu Lock

DDC/CI

Press to go back to the main menu.

Allows you to set the OSD display to one of eight languages: English, Spanish, French, German, Japanese, Brazilian P Allows you to adjust the OSD background from opaque to transparent.


Allows you to set the time for which the OSD remains active after you press a key on the monitor. Use the And keys to adjust the slider in 1 second increments, from 5 to 60 seconds.

Controls user access to adjustments. When **Lock** is selected, no user adjustments are allowed. All keys are locked example: When the OSD is locked, pressing the menu key takes you directly to the OSD settings menu, with 'OSD Lock hold key for 15 seconds to unlock and allow user access to all applicable settings.

DDC/CI (Display Data Channel/Command Interface) allows a software on your computer to adjust the monitor display balance etc.


Enable (Default): Optimizes the performance of your monitor and provides a better customer experience.

Disable: Disables the DDC/CI option and the following message appears on the screen.

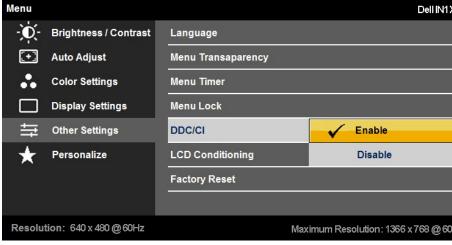

LCD Conditioning

Helps reduce minor cases of image retention. Depending on the degree of image retention, the program may take so feature by selecting "Enable".

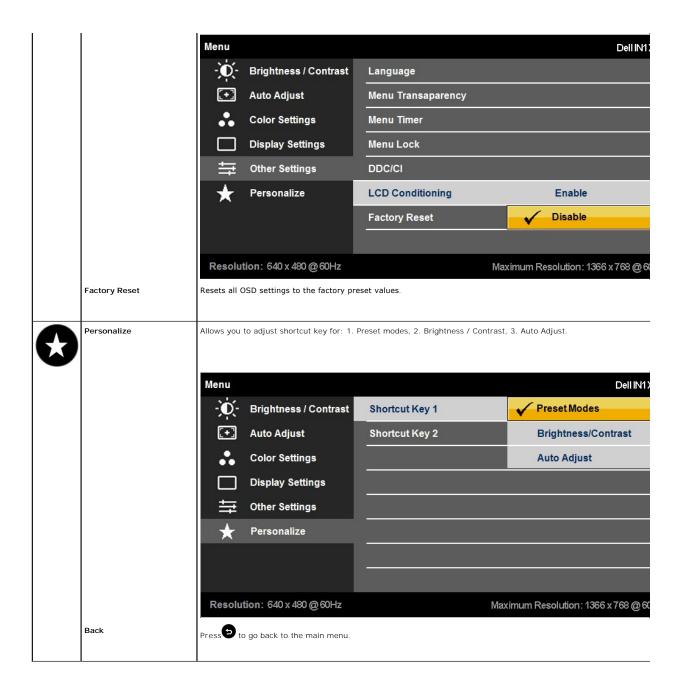

OSD Messages

When the monitor does not support a particular resolution mode you will see the following message: IN1720:



IN1920:



This means that the monitor cannot synchronize with the signal that it is receiving from the computer. See <u>Monitor Specifications</u> for the horizontal and vertical frequency ranges addressable by this monitor. Recommended mode is1440 x 900 (for IN1720) or 1366 x 768 (for IN17200) or 1366 x 768 (for IN172000) or 1366 x 768 (for IN172000) or 1366 x 768 (for IN1720000) or 1366 x 768 (for IN172000000) or 1366 x 768 (

You will see the following message before the DDC/CI function is disabled.



When the monitor enters the Power Save mode, the following message appears:




Activate the computer and wake up the monitor to gain access to the OSD

If you press any button other than the power button the following messages will appear depending on the selected input:



If VGA cable is not connected, a floating dialog box as shown below appears.

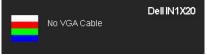

See Solving Problems for more information.

Setting the Maximum Resolution

To set the Maximum resolution for the monitor:

- Right-click on the desktop and select Properties.
- Select the **Settings** tab.

 Set the screen resolution to 1440 x 900 (for IN1720) or 1366 x 768 (for IN1920).

If you do not see 1440 x 900 (for IN1720 only) or 1366 x 768 (for IN1920 only) as an option, you may need to update your graphics card driver. Depending on

The Dell Soundbar is a stereo two channel system, mountable on Dell Flat Panel Displays. The Soundbar has a rotary volume and on/off control to adjust the overall system level, a LED for power indication, and two audio headset jacks.




	ON/volume	

Power indicator

Using the Tilt

Tilt

With the stand assembly, you can tilt the monitor for the most comfortable viewing angle.

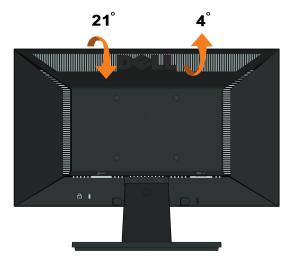

NOTE: The stand base is detached when the monitor is shipped from the factory.

Headphone connectors

Setting Up Your Monitor

Dell™ IN1720/IN1920 Flat Panel Monitor

Setting the display resolution to 1440 x 900 (for IN1720) or 1366 x 768 (for IN1920) (Maximum)

For optimal display performance while using the Microsoft Windows operating systems, set the display resolution to 1440 \times 900 (for IN1720) or 1366 \times 768 (for IN1920) pixels by performing the following steps:

- 1. Right-click on the desktop and click **Properties**.
- 2. Select the **Settings** tab.
- 3. Move the slider-bar to the right by pressing and holding left-mouse button and adjust the screen resolution to 1440×900 (for IN1720) or 1366×768 (for IN1920).
- 4. Click OK.

If you do not see1440 x 900 (for IN1720) or 1366 x 768 (for IN1920)as an option, you may need to update your graphics driver. Please choose the scenario below that best describes the computer system you are using, and follow the provided directions:

- 1: If you have a Dell™ desktop or a Dell™ portable computer with internet access.
- 2: If you have a non Dell™ desktop, portable computer, or graphics card.

Dell™ IN1720/IN1920 **Flat Panel Monitor**

User Guide

Setting the display resolution to 1440 x 900 (for IN1720) or 1366 x 768 (for IN1920) (Maximum)

Information in this document is subject to change without notice. © 2010 Dell Inc. All rights reserved

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: Dell and the DELL logo are trademarks of Dell Inc.; Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries. ENERGY STAR is a registered trademark of the U.S. Environmental Protection Agency. As an ENERGY STAR partner, Dell Inc. has determined that this product meets the ENERGY STAR guidelines for energy efficiency.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

Model IN1720c/IN1920c/IN1920b/IN1920f

January 2010 Rev. A00

Setting Up the Monitor

Dell™ IN1720/IN1920 Flat Panel Monitor User's Guide

- Attaching the Stand
- Connecting Your Monitor
- Removing the Stand Base
- Attaching the Dell Soundbar (Optional)
- Removing the Stand for VESA wall mount

Attaching the Stand

NOTE: The stand base is detached when the monitor is shipped from the factory.



To attach the monitor stand body to the stand base:

- 1. Place the monitor stand base on a stable table top.
- 2. Slide the monitor stand body in the correct direction down onto the stand base until it clicks into place.

Connecting Your Monitor




CAUTION: Before you begin any of the procedures in this section, follow the <u>Safety Instructions</u>.


To connect your monitor to the computer:

- Turn off your computer and disconnect the power cable.
 Connect the blue display connector cable to the corresponding video port on the back of your computer.

Connecting the Blue VGA Cable

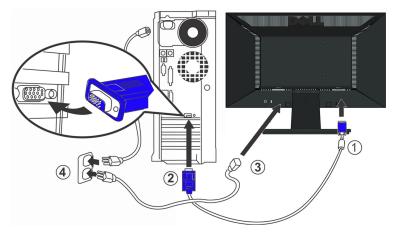

CAUTION: The graphics are used for the purpose of illustration only. Appearance on the computer may vary.

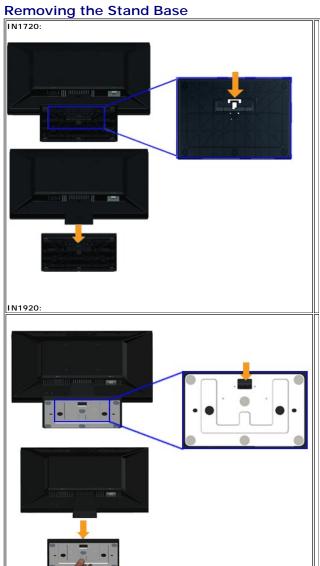

To remove stand base from the monitor:

- 1. Place the monitor panel on soft cloth or cushion on a stable flat table.
- 2. Press and hold the release latch, while pulling the stand base away from the monitor.

Attaching the Dell Soundbar(for IN1920 only)




NOTICE: Do not use with any device other than the Dell Soundbar.

To attach the soundbar:


- 1. Working from the back of the monitor, attach Soundbar by aligning the two slots with the two tabs along the bottom of the monitor.
- 2. Slide the Soundbar to the left until it snaps into place.
- 3. Connect the Soundbar with the DC power connector from the Soundbar Power Adaptor.
- 4. Insert the mini stereo plug from the back of the Soundbar into the computer's audio output jack.

Removing the Stand for VESA Wall Mount

IN1720

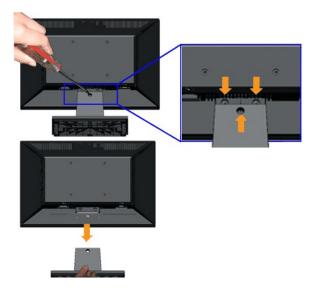

IN1920:

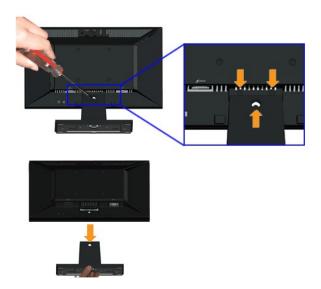

To remove the stand assembly from the monitor:

- 1. Place the monitor panel on soft cloth or cushion on a stable flat table.
- 2. Remove the three screws on the stand of the monitor as shown above.
- 3. Remove the stand assembly from the monitor.

Troubleshooting

Dell™ IN1720/IN1920 Flat Panel Monitor

- Self-Test
- Common Problems
- Product Specific Problems

ACAUTION: Before you begin any of the procedures in this section, follow the Safety Instructions.

Self-Test

Your monitor provides a self-test feature that allows you to check whether your monitor is functioning properly. If your monitor and computer are properly connected but the monitor screen remains dark, run the monitor self-test by performing the following steps:

- 1. Turn off both your computer and the monitor.
- 2. Unplug the video cable from the back of the computer. To ensure a proper Self-Test operation, remove the Analog (blue connector) cable from the back of computer.
- 3. Turn on the monitor.

The floating dialog box should appear on-screen (against a black background) if the monitor cannot sense a video signal and is working correctly. While in self-test mode, the power LED remains white. Also, depending upon the selected input, the dialog shown below will continuously scroll through the screen.



- This box also appears during normal system operation, if the video cable becomes disconnected or damaged.
 Turn off your monitor and reconnect the video cable; then turn on both your computer and the monitor.


NOTE: Self-test feature check is not available for S-Video, Composite, and Component video modes.

If your monitor screen remains blank after you use the previous procedure, check your video controller and computer, because your monitor is functioning properly.

Built-in Diagnostics

Your monitor has a built-in diagnostic tool that helps you determine if the screen abnormality you are experiencing is an inherent problem with your monitor, or with your computer and video card.

MOTE: You can run the built-in diagnostics only when the video cable is unplugged and the monitor is in self-test mode.

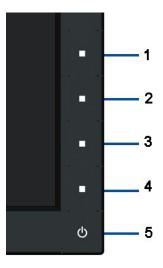

To run the built-in diagnostics:

- Ensure that the screen is clean (no dust particles on the surface of the screen).
 Unplug the video cable from the back of the computer or monitor. The monitor then goes into the self-test mode.
 Press and hold the 1st and 4th buttons on the front panel, simultaneously for 2 seconds. A gray screen appears.
 Carefully inspect the screen for abnormalities.
 Press the 4th button on the front panel again. The color of the screen changes to red.
 Inspect the display for any abnormalities.
 Repeat steps 5 and 6 to inspect the display in green, blue, black, white colored screens.

The test is complete when the white screen appears. To exit, press the 4th button again.

If you do not detect any screen abnormalities upon using the built-in diagnostic tool, the monitor is functioning properly. Check the video card and computer.

Common Problems

The following table contains general information about common monitor problems you might encounter and the possible solutions.

Common Symptoms	What You Experience	Possible Solutions	
No Video/Power LED off	No picture	Ensure that the video cable connecting the monitor and the computer is properly connected and secure. Verify that the power outlet is functioning properly using any other electrical equipment. Ensure that the power button is depressed fully.	
No Video/Power LED on	No picture or no brightness	Increase brightness & contrast controls via OSD. Perform monitor self-test feature check. Check for bent or broken pins in the video cable connector. Run the built-in diagnostics.	
Poor Focus	Picture is fuzzy, blurry, or ghosting	Perform Auto Adjust via OSD. Adjust the Phase and Pixel Clock controls via OSD. Eliminate video extension cables. Reset the monitor to Factory Settings. Change the video resolution to the correct aspect ratio (16:10 for IN1720 & 16:9 for IN1920).	
Shaky/Jittery Video	Wavy picture or fine movement	Perform Auto Adjust via OSD. Adjust the Phase and Pixel Clock controls via OSD. Reset the monitor to Factory Settings. Check environmental factors. Relocate the monitor and test in another room.	
Missing Pixels	LCD screen has spots	Cycle power on-off. Pixel that is permanently off is a natural defect that can occur in LCD technology. Run the built-in diagnostics.	
Stuck-on Pixels	LCD screen has bright spots	Cycle power on-off. Pixel that is permanently off is a natural defect that can occur in LCD technology. Run the built-in diagnostics.	
Brightness Problems	Picture too dim or too bright	Reset the monitor to Factory Settings. Auto Adjust via OSD. Adjust brightness & contrast controls via OSD.	
Geometric Distortion	Screen not centered correctly	Reset the monitor to Factory Settings. Auto Adjust via OSD. Adjust brightness & contrast controls via OSD.	
Horizontal/Vertical Lines	Screen has one or more lines	 Reset the monitor to Factory Settings. Perform Auto Adjust via OSD. Adjust Phase and Pixel Clock controls via OSD. Perform monitor self-test feature check and determine if these lines are also in self-test mode. Check for bent or broken pins in the video cable connector. Run the built-in diagnostics. 	
Synchronization Problems	Screen is scrambled or appears torn	Reset the monitor to Factory Settings. Perform Auto Adjust via OSD. Adjust Phase and Pixel Clock controls via OSD. Perform monitor self-test feature check to determine if the scrambled screen appears in self-test mode. Check for bent or broken pins in the video cable connector. Restart the computer in the safe mode.	
Safety Related Issues	Visible signs of smoke or sparks	Do not perform any troubleshooting steps. Contact Dell immediately.	
Intermittent Problems	Monitor malfunctions on & off	Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. Reset the monitor to Factory Settings. Perform monitor self-test feature check to determine if the intermittent problem occurs is self-test mode.	
Missing Color	Picture missing color	Perform monitor self-test feature check. Ensure that the video cable connecting the monitor to the computer is connected properly and is secure. Check for bent or broken pins in the video cable connector.	

Wrong Color P	Picture color not good	Change the Color Setting Mode in the Color Settings OSD to Graphics or Video depending on the application. Try different Color Preset Settings in Color Settings OSD. Adjust R/G/B value in Color Settings OSD if the Color Management is turned off. Change the Input Color Format to PC RGB or YPbPr in the Advance Setting OSD. Run the built-in diagnostics.
image left on the monitor for a in	Faint shadow from the static mage displayed appears on the screen	Use the Power Management feature to turn off the monitor at all times when not in use (for more information, see Power Management Modes). Alternatively, use a dynamically changing screensaver. In OSD Menu, under Reset to Factory Settings, select Enable LCD Conditioning. Using this option may take several hours before the image is eliminated. NOTE: Image Burn-in is not covered by your warranty.

Product Specific Problems

Specific Symptoms	What You Experience	Possible Solutions
	Image is centered on screen, but does not fill entire viewing area	Reset the monitor to Factory Settings.
Cannot adjust the monitor with the buttons on the front panel		1 Turn off the monitor, unplug the power cord, plug back, and then turn on the monitor.
controls are pressed	No picture, the LED light is white. When you press "up", "down" or "Menu" key, the message " No input signal" will appear.	Check the signal source. Ensure the computer is not in the power saving mode by moving the mouse or pressing any key on the keyboard. Check whether the signal cable is plugged in properly. Re-plug the signal cable if necessary.
The picture does not fill the entire screen	The picture cannot fill the height or width of the screen	Due to different video formats (aspect ratio) of DVDs, the monitor may display in full screen. Run the built-in diagnostics.