

USER GUIDE




**verizon**wireless

inpulse[™]
PAY AS YOU GO

Nokia 2128i

Nokia 2128i User Guide

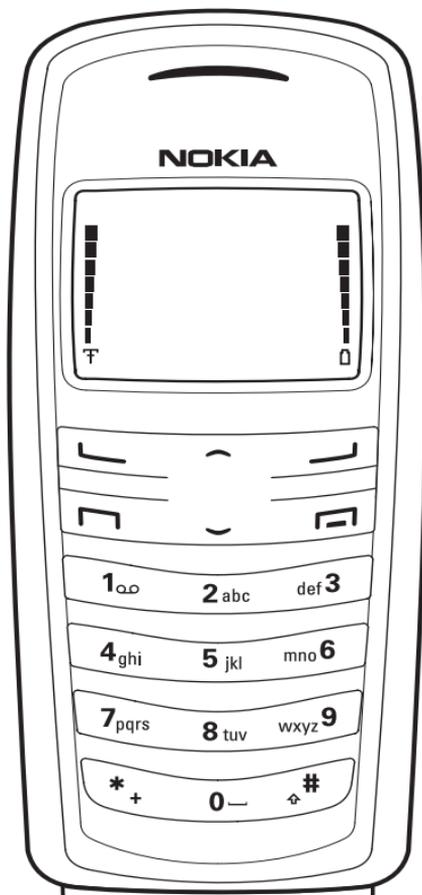

LEGAL INFORMATION

Part No.9240270, Issue No. 1a

Copyright ©2006 Nokia. All rights reserved.

Nokia, Nokia Connecting People, Nokia 2128i, Pop-Port, and the Nokia Original Enhancements logos are trademarks or registered trademarks of Nokia Corporation. Other company and product names mentioned herein may be trademarks or trade names of their respective owners.

US Patent No. 5818437 and other pending patents. T9 text input software

Copyright ©1999-2006. Tegic Communications, Inc. All rights reserved.



Includes RSA BSAFE cryptographic or security protocol software from RSA Security.



Java is a trademark of Sun Microsystems, Inc.

The information contained in this user guide was written for the Nokia 2128i product. Nokia operates a policy of ongoing development. Nokia reserves the right to make changes to any of the products described in this document without prior notice.

UNDER NO CIRCUMSTANCES SHALL NOKIA BE RESPONSIBLE FOR ANY LOSS OF DATA OR INCOME OR ANY SPECIAL, INCIDENTAL, AND CONSEQUENTIAL OR INDIRECT DAMAGES HOWSOEVER CAUSED.

THE CONTENTS OF THIS DOCUMENT ARE PROVIDED "AS IS." EXCEPT AS REQUIRED BY APPLICABLE LAW, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY AND RELIABILITY OR CONTENTS OF THIS DOCUMENT. NOKIA RESERVES THE RIGHT TO REVISE THIS DOCUMENT OR WITHDRAW IT AT ANY TIME WITHOUT PRIOR NOTICE.

Export Controls

This device may contain commodities, technology, or software subject to export laws and regulations from the U.S. and other countries. Diversion contrary to law is prohibited.

FCC/Industry Canada Notice

Your device may cause TV or radio interference (for example, when using a telephone in close proximity to receiving equipment). The FCC or Industry Canada can require you to stop using your telephone if such interference cannot be eliminated. If you require assistance, contact your local service facility. This device complies with part 15 of the FCC rules. Operation is subject to the condition that this device does not cause harmful interference.

Table of Contents

For your safety.....	5
Welcome.....	8
1. Phone at a glance.....	10
2. Set up your phone.....	14
3. Text entry.....	20
4. Contacts list	22
5. Messages	28
6. Call log.....	35
7. Profiles	37
8. Settings.....	38
9. Gallery.....	53
10. Games.....	54
11. Voice.....	55
12. Organizer.....	58
13. PC Connectivity	63
14. Enhancements.....	64
15. Battery information	65
Care and maintenance.....	68
Additional safety information	69
Index	74

Notes

For your safety

Read these simple guidelines. Not following them may be dangerous or illegal. Read the complete user guide for further information.

**SWITCH ON SAFELY**

Do not switch the phone on when wireless phone use is prohibited or when it may cause interference or danger.

**ROAD SAFETY COMES FIRST**

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

**INTERFERENCE**

All wireless phones may be susceptible to interference, which could affect performance.

**SWITCH OFF IN HOSPITALS**

Follow any restrictions. Switch the phone off near medical equipment.

**SWITCH OFF IN AIRCRAFT**

Follow any restrictions. Wireless devices can cause interference in aircraft.

**SWITCH OFF WHEN REFUELING**

Do not use the phone at a refueling point. Do not use near fuel or chemicals.

**SWITCH OFF NEAR BLASTING**

Follow any restrictions. Do not use the phone where blasting is in progress.

**USE SENSIBLY**

Use only in the normal position as explained in the product documentation. Do not touch the antenna unnecessarily.

**QUALIFIED SERVICE**

Only qualified personnel may install or repair this product.

**ENHANCEMENTS AND BATTERIES**

Use only approved enhancements and batteries. Do not connect incompatible products.

For your safety



WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.



BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.



CONNECTING TO OTHER DEVICES

When connecting to any other device, read its user guide for detailed safety instructions. Do not connect incompatible products.



EMERGENCY CALLS

Ensure the phone is switched on and in service. Press the end key as many times as needed to clear the display and return to the start screen. Enter the emergency number, then press the send key. Give your location. Do not end the call until given permission to do so.

About your device

The wireless device described in this guide is approved for use on the CDMA 800 and CDMA 1900 networks and also receives signals from the GPS location system. Contact your service provider for more information about networks.

When using the features in this device, obey all laws and respect privacy and legitimate rights of others.



Warning: To use any features in this device, other than the alarm clock, the device must be switched on. Do not switch the device on when wireless phone use may cause interference or danger.

Network services

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

■ Shared memory

The following features in this device may share memory: contacts, text messages, images, and tones in *Gallery*, calendar notes, games, and applications. Use of one or more of these features may reduce the memory available for the remaining features sharing memory. Your phone may display a message that the memory is full when you try to use a shared memory feature. In this case, delete some of the information or entries stored in the shared memory features before continuing. Some of the features, such as images, tones in *Gallery*, text messages, and applications may have a certain amount of memory specially allotted to them in addition to the memory shared with other features.

Contact Nokia

Please have your product with you when contacting either of the numbers below:

Nokia Customer Care Center, USA

Nokia Inc.

4630 Woodland Corporate Blvd.

Suite #160

Tampa, Florida 33614

Tel: 1-888-NOKIA-2U

(1-888-665-4228)

Fax: 1-813-249-9619

Web site: www.nokia.com/us

In Canada call:

Tel:1-888-22-NOKIA

(1-888-226-6542)

Web site: www.nokia.ca

For TTY/TDD users only:

1-800-24-NOKIA (1-800-246-6542)

Updates

Check www.nokiausa.com/support or your local Nokia Web site for the latest version of this guide, additional information, downloads, and services related to your Nokia product.

On the Web site, you can get information on the use of Nokia products and services. If you need to contact customer service, check the list of local Nokia Care contact centers at www.nokiausa.com/support.


For maintenance services, check your nearest Nokia Care services location at www.nokiausa.com/support.

Accessibility solutions

Nokia is committed to making mobile phones easy to use for all individuals, including those with disabilities. For more information visit the web site at www.nokiaaccessibility.com.

1. Phone at a glance


- Power key and flashlight (1)
- Earpiece (2)
- Right selection key (3)
- End key (4)
- Keypad (5)
- Connection port (6)
- Microphone (7)
- Charger port (8)
- Scroll up and down key (9)
- Send key (10)
- Left selection key (11)
- Display screen (12)

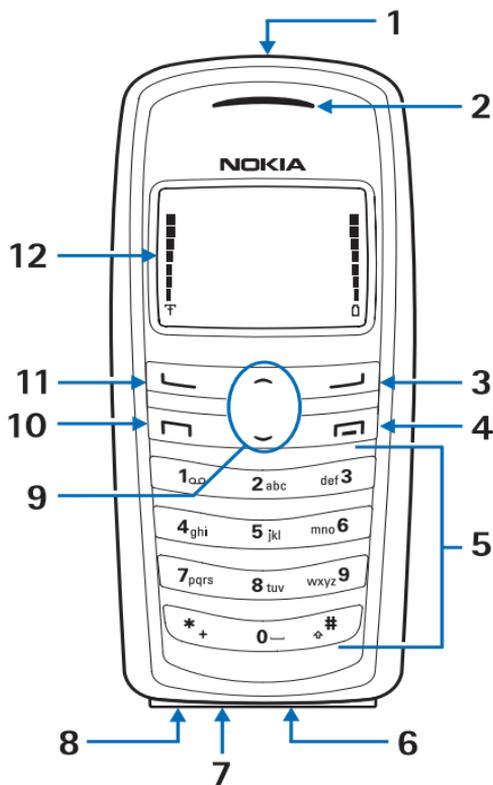

■ The start screen

Depending on your wireless service provider and the model number of your device, some or all of the following selection keys may appear on the start screen.

The start screen is home base and indicates that your device is in the standby mode.

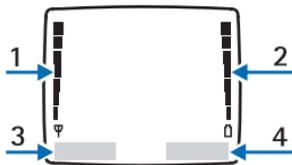

Signal strength (1)—A higher bar indicates a stronger network signal.

Battery level (2)—A higher bar indicates more charge in the battery.

Menu (3)—Press the left selection key to select this option.

Contacts (4)—Press the right selection key to select this option.

■ Quick keys

In the standby mode, scroll down to access the contacts list, and select a contact. Press the send key to call the primary number of the contact.

Press the scroll up key to activate the flashlight momentarily. Press the scroll up key twice to switch the flashlight on continuously. Press the scroll up key again to switch off the flashlight.

■ Indicators and icons

Depending on your wireless service provider and the model number of your phone, some or all of the following indicators and icons may appear in the standby mode:

-  You have new text or picture messages. See "Text messages," p. 28.
-  You have new voice messages. See "Automate voice mail," p. 33.
-  Device keypad is locked. See "Keyguard," p. 19.
-  Device is set to the silent profile. See "Profiles," p. 37.
-  Alarm clock is set to on. See "Alarm clock," p. 58.
-  Countdown timer is running. See "Countdown timer," p. 61.
-  Stopwatch timer running in the background. See "Stopwatch," p. 62.
-  Integrated hands-free is active. See "Use the loudspeaker," p. 18.

Phone at a glance

-  Timed profile is selected. See "Profiles," p. 37.
-  or  An enhancement is connected to the device. See "Enhancements," p. 64.
-  Voice privacy encryption is active in the network. See "Security settings," 48.
-  or  Location info sharing is set to [911 only](#) or [Location on](#). See "Location information sharing," p. 38.
-  You are roaming outside your home network. See "Roaming options," p. 50.
-  You are in a 1XRTT network. See "Network services," p. 6.
-  You are in a digital network. See "Network services," p. 6.
-  or  Off hook, call or data call in progress.

■ Phone menus

Phone features are grouped according to function and are accessed through the main menus. Each main menu contains submenus and lists from which you can select or view items and customize your phone features. To access these menus and submenus use the scroll method or use a shortcut.

Some features may not be available, depending on your network. For more information, contact your wireless provider.

The scroll method

1. In the standby mode, select [Menu](#), and scroll up or down through the main menus.

As you scroll through the menus, the menu number appears in the upper right corner of the display. Below the number is a scroll bar with a tab that moves up or down on the right side of the display screen as you scroll through the menus. This display provides a visual representation of your current position in the menu structure.



2. When you arrive at a menu, press the left selection key to enter submenus.
 - Select [Back](#) (the right selection key) to return to the previous menu.
 - Select the end key from any submenu or select [Exit](#) from the main menu level to return to the standby mode.

Shortcuts

To go directly to almost any menu or submenu, as well as activate most features use a shortcut.

In the standby mode, select *Menu*; then within 3 seconds, press the key or keys associated with the menu function you would like to view or activate.

For example, to select the meeting profile, select *Menu* 3-3-1 from standby mode (*Menu* > 3 *Profiles* > 3 *Meeting* > 1 *Activate*). After a brief pause, the *Meeting* profile is activated.

In-phone help

Many features have brief descriptions (help text) that can be viewed on the display. In order to view the descriptions, you must first activate help text.

In the standby mode, select *Menu* > *Settings* > *Phone settings* > *Help text activation* > *On* or *Off*.

To view these descriptions, scroll to a feature, and wait for about 15 seconds. Select *More*, when necessary, to view all of the description, or select *Back* to exit.

■ Security feature

The security feature protects your device from unauthorized outgoing calls or access to the stored information with the lock and security codes. The lock code is a four-digit number while the security code is a five-digit number. By default, the security feature uses the lock code (defaulted to the last four digits of your phone number) instead of the security code to protect your phone.

Enter the lock code to access the following security option:

1. In the standby mode, select *Menu* > *Settings* > *Security settings*.
2. Enter the lock code, and select *OK*. See "Security settings," p. 48.

Note: Depending on your wireless service provider, the preset lock code may be 1234 or 0000 instead of the last four digits of your phone number. If these codes do not work, contact your wireless service provider for help.

Your device, by default, requires you to enter the lock code to restore factory settings:

1. In the standby mode, select *Menu* > *Settings* > *Restore factory settings*.
2. Enter the lock code, and select *OK*. See "Security settings," p. 48.

Note: Depending on your wireless service provider, your device may ask you for the security code (defaulted to 12345) instead of the lock code.

2. Set up your phone

■ Antenna

Your phone has an internal antenna that is located toward the top of the phone.

In the Nokia 2128i phone, the GPS antenna is internal and is activated when you place emergency calls or when [Location on](#) is selected from the [Location info sharing](#) menu. See "Location information sharing," p. 38.

Hold the phone as you would any other telephone with the antenna area pointed up and over your shoulder.



Note: As with any other radio transmitting device, do not touch the antenna unnecessarily when the device is switched on. Contact with the antenna affects call quality and may cause the device to operate at a higher power level than otherwise needed. Avoiding contact with the antenna while operating the device optimizes the antenna performance and the battery life.



■ Change the battery

Always switch the device off, and disconnect the charger before removing the battery.



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from the chargers.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.



Note: Always switch off the power and disconnect the charger and any other device before removing the cover. Avoid touching electronic components while changing the cover. Always store and use the device with the cover attached.

Remove the back cover

1. With the back of the phone facing you, push down on the back cover release button.
2. Slide the back cover toward the bottom of the phone and remove.



Remove the battery

After you have removed the back cover, insert your finger into the finger grip, and lift the battery from its compartment.




Replace the battery

1. Position the battery so the positive and negative indicators on the battery match up with the positive and negative indicators on the phone.

The battery label should face away from the phone.


2. Insert the battery, gold-colored contact end first, into the battery slot.
3. Push down on the other end of the battery to snap it into place.

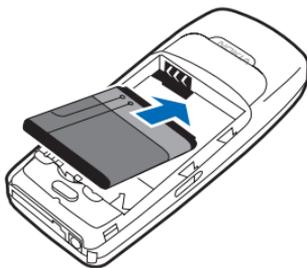

Set up your phone

Replace the back cover


Slide the back cover toward the top of the phone until the back cover is securely in place.

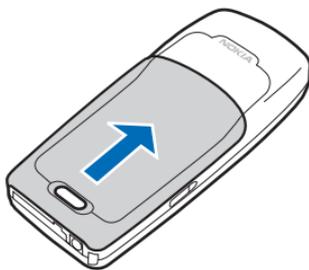

Charge the battery

1. Plug the charger into a standard ac outlet.
2. Insert the charger output plug into the round jack at the bottom end of the phone.

After a few seconds, the battery indicator on the display starts to scroll from bottom to top. If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

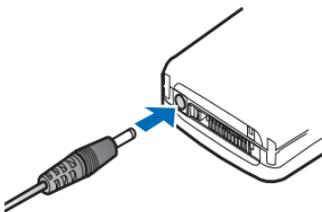

■ Turn your phone on or off

1. To turn your phone on or off, press and hold the power key on top of the phone for at least 3 seconds.
2. Enter the lock code, if necessary, and select *OK*. See "Security settings," p. 48.



■ Connect the headset

A compatible headset may be purchased with your phone or separately as an enhancement. See "Enhancements," p. 64.



Important: The headset may affect your ability to hear sounds around you. Do not use this headset in situations that may endanger your safety.




Warning: When using the headset, your ability to hear outside sounds may be affected. Do not use the headset where it can endanger your safety.

1. Plug the connector of the included headset adapter into the Pop-Port™ connector at the bottom end of your device.  appears in the standby mode.
2. Plug the connector of the headset into the jack on the adapter.
3. Position the headset on your ear.

With the headset connected, make, answer, and end calls as usual.

- Use the keypad to enter numbers.
- Press the send key to place a call.
- Press the end key to end a call.

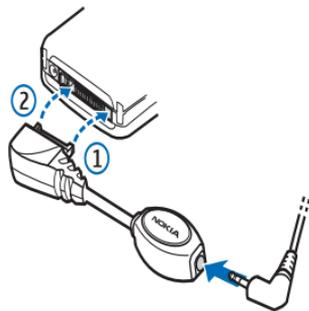

■ Make a call

Use the keypad

1. Enter the phone number (including the area code), and press the send key. To delete a character to the left of the cursor, select *Clear*.
2. Press the end key to end the call, or select *End call* to cancel the call attempt.

Use the contacts list

1. In the standby mode, scroll down to the entry you wish to view.
2. Press the send key to make the call, or select *Details* to view details of the entry.

Use the last dialed number

1. In the standby mode, press the send key to display the last 20 numbers dialed.
2. Scroll to the number (or name) you wish to redial, and press the send key.

Conference calls

Conference calling is a network service that allows you to take part in a conference call with two other participants.

1. Make a call to the first participant.
2. With the first participant on the line, select *Options > New call*.
3. Enter the phone number of the second participant, or select *Search* to retrieve a number from the contacts list.

Set up your phone

4. Select *Flash* and the first participant is put on hold.
5. When the second participant answers, press the send key to connect the calls.
6. To end the conference call, press the end key.

■ Answer calls

Answer, silence, or decline an incoming call

Silence and *Decline* are carrier dependent features.

1. Press the call or *Answer* key to answer the call.
2. To mute the ringing tone, select *Silence*. If you do not answer the call, the call is forwarded to voicemail.
3. To dismiss and forward the call to voicemail (a carrier dependent feature), select *Decline* after you have muted the ringing tone, or press the end key at any time.

Answer a call with the keypad locked

To answer a call with the keypad locked, press the send key. During the call, all features function normally. When you end, silence or decline the call, the keypad automatically relocks. See "Keyguard," p. 19.

When the keyguard is on, calls still may be possible to the official emergency number programed into your device.

Adjust the earpiece volume

While in a call, scroll up or down to adjust the volume of the earpiece.

When you adjust the volume, a bar chart appears in the display to indicate the volume level.

Use the loudspeaker

You can use your device as a loudspeaker during a call.

- To activate the loudspeaker, select *Loudsp.*
- To deactivate the loudspeaker during a call, select *Handset*.

The loudspeaker is deactivated automatically when a call (or a call attempt) ends, or when certain enhancements are connected.



Warning: Do not hold the device near your ear when the loudspeaker is in use, because the volume may be extremely loud.

Options during a call

Many of the options used during a call are network services. Check with your wireless service provider for more information.

1. Select *Options* to display the following:
 - Mute* or *Unmute*—Silence your end of the call.
 - Loudspeaker* or *Handset*—Activate or deactivate the loudspeaker while in a call.
 - New call*—Initiate a conference call. See "Conference calls," p. 17.
 - Add to contact*—Save the number you entered during a call to a contact that is already in the contacts list.
 - End all calls*—Disconnect from all active calls.
 - Touch tones*—Enter the numbers, and select *Tones* to send the numbers as tones.
 - Contacts*—View the contacts list.
 - Menu*—View the phone menu.
2. Scroll to and select an option to activate the option or enter its submenu.

■ Keyguard

Use keyguard, to lock the keypad and prevent keys from being pressed accidentally. Remember to lock your device keypad to prevent accidental calls. If the keypad is locked, it unlocks when you receive a call. After the call, the lock automatically reactivates.

When the keyguard is on, calls still may be possible to the official emergency number programmed into your device. Enter the emergency number and press the send key. See "Automatic keyguard," p. 41.

Lock the keypad

Select *Menu*; then press * within 2 seconds.

Unlock the keypad

Select *Unlock*; then press * within 2 seconds.

3. Text entry

You can use two methods for entering text and numbers: standard mode and predictive text mode.

- Select *Clear* to backspace the cursor and delete a character.
- Select and hold *Clear* to backspace continuously and delete characters.

■ Standard mode

Standard mode is the only way to enter text into the contacts list and to rename caller groups.

Text (Abc)

Press a key once to insert the first letter on the key and twice for the second letter, etc. If you pause briefly, the last letter in the display is accepted and your device awaits the next entry.

- Press 0 to enter a space and accept a completed word.
- Press 1 to insert a period into your message.
- Press and hold * to display a complete list of special characters.
- Press and hold # to switch between letters and numbers.

Numbers (123)

To switch from Abc mode to 123 mode, press and hold # at any message entry screen.

Punctuation and special characters

While at any text entry screen, press * to display special characters (press and hold * if predictive text is on). Press * again to cycle through all available characters. To navigate through the list of special characters, use the scroll keys. Once a character is highlighted, select *Insert* to insert the character into your message.

■ Predictive text mode


To write messages quickly, use predictive text mode with your keypad and the built-in dictionary. Predictive text mode is much faster than the standard mode method because you do not need to scroll through the letters on each key to spell a word. The dictionary determines which word to enter based on the keys selected.

Activate or deactivate

At any text entry screen, select *Options > Predictive text > English, Français, or Español* to activate predictive text; or select *Prediction off* to deactivate predictive text.

Text entry

The illustration below simulates your display each time a key is pressed. For example, to write 'Nokia' with predictive text on and the English dictionary selected, press each of the following keys:

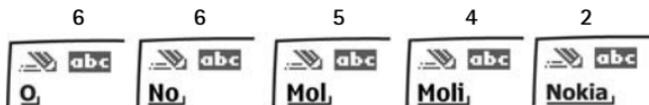

- Press 0 to enter a space, and begin writing the next word.
If a displayed word is not correct, press * to see other matches. To return to the previous word in the list of matches, select *Previous*.
- If ? appears after a word, select *Spell* to enter the word with the standard mode, and add the word to the dictionary.
- Press 1 to insert a period into your message.
- Press and hold * to display special characters. Press * again to cycle through all available characters.

Change case and mode

Press # to switch between uppercase, lowercase, and sentence case text; and between standard and predictive text mode. Case and mode are indicated by the icons that appear in the upper left of the display screen, as follows:



Uppercase text: standard mode is on.



Lowercase text: standard mode is on.



Sentence case text: standard mode is on.

This option is available only at the beginning of a sentence.



Uppercase text: predictive text is on.



Lowercase text: predictive text is on.



Sentence case text: predictive text is on.

This option is available only at the beginning of a sentence.

4. Contacts list

The contacts list can hold up to 250 contacts with multiple numbers and text notes for each contact. The amount of numbers and text entries that you can save may vary, depending on length and the total number of entries in the contacts list.

■ Search

In the standby mode, select *Contacts* > *Search*; highlight the contact you wish to view, and select *Details*.

■ Add new contacts

Save a name and number

1. In the standby mode, enter the phone number you wish to save.
2. Select *Options* > *Save*.
3. Enter the contact name, and select *OK*.

Save (only) a number

In the standby mode, enter the phone number you wish to save; select and hold *Options*.

Save multiple numbers and text items

The first number you save for any entry is automatically set as the default. The default setting can be changed later. To save different types of phone numbers and short text items per name to the device memory, do the following:

1. In the standby mode, scroll down to display a list of entries. Scroll to the entry to which to add a phone number or text item.
2. Select *Details* > *Options* > *Add number* or *Add detail*.
3. Enter the number or text for the type you have selected, and select *OK*.
4. To change the type, select *Change type* in the options list.

To change which phone number is the default number for the contact entry:

1. In the standby mode, scroll down to the entry you wish to change, and select *Details*.
2. Scroll to the number you wish to set as default, select *Options* > *As primary no.*

Set up voice tags

For more information on setting up voice tags and other voice features, see "Voice tags," p. 56.

Caller groups

You can add contact list entries to any of five caller groups, and assign a unique ringing tone or graphic to that group. This enables you to identify callers from the group by their unique ringing tone or graphic.

Set up a caller group

1. In the standby mode, scroll down to display a list of entries in your contacts list.
2. Scroll to a name to add to a caller group, and select *Details*.
3. Select *Options* > *Caller groups*.
4. Scroll to and select the caller group to add the name.

Options

1. In the standby mode, select *Contacts* > *Caller groups* > *Family, VIP, Friends, Business, and Other*.
2. Select from following caller group options:
 - Rename group*—Rename the group to your preference.
 - Group ringing tone*—Set the ringing tone for the group.
 - Group logo*—Turn the graphic for the caller group on or off or view the graphic.
 - Group members*—Add or remove members from the caller group.

Set up 1-touch dialing

You can associate any entry in the contacts list with a key from 2–9; then dial those entries by pressing and holding the assigned key. See "1-touch dialing," p. 39 to activate or deactivate 1-touch dialing.

Assign a key to 1-touch dialing

1. In the standby mode, select *Contacts* > *1-touch dialing*.

If 1-touch dialing is off, the device displays a prompt asking if you would like to turn 1-touch dialing on. Select *Yes* to activate 1-touch dialing
2. Scroll to an (*empty*) 1-touch dialing slot, and select *Assign*.
3. Enter the number (including the area code) and a name for the contact, or select *Search* to retrieve a number from the contacts list.
4. Select *OK*.

Change 1-touch dialing numbers

1. In the standby mode, select *Contacts* > *1-touch dialing*.
2. Scroll to the 1-touch dialing entry you wish to change, and select *Options* > *Change*.
3. Enter the new number; or search to retrieve a number from the contacts list, and select *OK*.
4. Enter a name for the entry, and select *OK*.

Delete 1-touch dialing numbers

1. In the standby mode, select *Contacts* > *1-touch dialing*.
2. Scroll to the 1-touch dialing location you wish to delete, and select *Options* > *Delete* > *OK*.

■ Edit contacts list entries

1. In the standby mode, scroll down to display your contacts list.
2. Scroll to the entry to edit; select *Details* and one of the following options:
 - Add voice tag* or *Voice tag*—Add a new voice tag or *Playback*, *Change*, or *Delete* an existing voice tag.
 - Edit number*—Edit an existing contact number.
 - Delete number*—Delete a phone number from the contact.
 - Use number*—Display the phone number in the standby mode, ready to be called.
 - View*—View the details of the contact.
 - Change type*—Change the number type to *General*, *Mobile*, *Home*, *Work*, or *Fax*.
 - As primary no.*—Change the default number of the contact.
 - Add number*—Add a number to the contact.
 - Add detail* > *E-mail*, *Web address*, *Street addr.*, or *Note*—Add an address or note to the contact.
 - Caller groups*—Add the contact to an existing caller group.
 - Custom tone*—Add a custom ringing tone to the contact.
 - Send bus. card*—Send the contact as a business card to another phone.
 - Send message*—Create and send a message to the contact.
 - 1-touch dialing*—Add the contact to your speed dial list.
 - Edit name*—Edit the name of the contact.
 - View name*—View the name of the contact.
 - Delete*—Delete the entire contact entry from your contacts list.

Edit phone number

Highlight the existing phone number you would like to edit, and select *Options* > *Edit number*.

E-mail address entry

Highlight the existing e-mail address entry to send or update, and select *Options* and one of the following:

Send e-mail—Send an e-mail.

Edit detail—Edit e-mail details.

Delete detail—Delete e-mail.

View—View the details of the e-mail contact.

Change type—Change the e-mail type to *E-mail*, *Web address*, *Street addr.*, or *Note*.

Add detail—Add an *E-mail*, *Web address*, *Street addr.*, or *Note* to the entry.

Add number—Add a number to the entry.

Caller groups—Add the e-mail to an existing caller group.

Custom tone—Add a custom ringing tone to the contact.

Send bus. card—Send the contact a business card.

Edit name—Edit the name of the contact.

View name—View the name of the contact.

Delete—Delete the entire e-mail entry from your contacts list.

Edit web address

1. Highlight the web address entry to edit, and select *Options*.
2. Select *Web address*, *Street addr.*, or *Note* > *OK*.

■ Delete contacts list entries

In the standby mode, select *Contacts* > *Delete*.

- To delete individual entries, select *One by one*, and scroll to the entry you wish to delete. Select *Delete* > *OK* to confirm.
- To delete the entire contents of your contacts list, select *Delete all* > *OK*. Select *OK* to confirm or *Back* to return to *Contacts*. If *OK*, enter the security code, and select *OK*. See "Security settings," p. 48.

■ View the contacts list

1. In the standby mode, select *Contacts* and one of the following options:
 - Search*—Find a name or select from a list.
 - Add new*—Add a contact to your contacts list.
 - Edit name*—Edit an existing name.
 - Delete*—Delete a name and its associated numbers.
 - Add number*—Add a number to an existing name.
 - Settings*—Change the contacts list view, check the memory status of your device.
 - 1-touch dialing*—View or modify the list of 1-touch dialing numbers.
 - Voice tags*—Attach, listen to, or modify a contact voice tag.
 - My number*—View your own phone number.
 - Caller groups*—View and edit the properties for any of the caller groups: *Family*, *VIP*, *Friends*, *Business*, or *Other*.
2. Scroll to and select an item to activate the feature or enter its submenu.

Fast search for a name

1. In the standby mode, scroll down to display the contents of your contacts list.
2. Press the key that corresponds to the first letter of the name for which you are performing a search.
3. Scroll up and down to highlight a contact, and select *Details* to view the details.

Configure settings

You can choose how the contacts appear in your contacts list and view the amount of memory used or available in your device.

For more information on used and available memory, see "Shared memory," p. 7.

In the standby mode, select *Contacts* > *Settings*, and one of the following options:

Scrolling view—Choose how names and numbers stored in the contacts list are viewed. Select *Name list* or *Name and no.*

Memory status—View the amount of memory used in the contacts list.

■ Send and receive contacts

To send and receive an entry in your contacts list, use text messaging, if supported by your wireless provider.

Send a business card

To send a business card as a text message to a compatible phone or other handheld device, do the following:

1. Highlight the entry from the contacts list and select *Details* > *Options* > *Send bus. card* > *Via text msg.*, and one of the following:
 - Select *Primary no.* or *All details*, if the entry has more than one number or detail.
 - Enter the number for your recipient.
 - Select *Search* to retrieve a number from your contacts list.
2. Select *OK*, to send the business card.

5. Messages



If you have subscribed to a messaging service through your wireless provider, you can send and receive text messages to compatible phones that also subscribe to a compatible message service. You may also be able to send and receive picture messages and e-mail messages.

Your device supports the sending of text messages beyond the 160 character limit for a single message. Longer messages will be sent as a series of two or more messages. Your service provider may charge accordingly. Characters that use accents or other marks, and characters from some language options like Chinese, take up more space, limiting the number of characters that can be sent in a single message.

The number of characters remaining in a message are indicated by counter in upper right corner of screen. If there are special characters in your message, the indicator may not show the message length correctly.



Note: When sending messages, your device may display *Message sent*. This is an indication that the message has been sent by your device to the message center number programmed into your device. This is not an indication that the message has been received at the intended destination. For more details about messaging services, check with your service provider.

■ Text messages

Write and send

1. In the standby mode, select *Menu > Messages > Text messages > Create message*, and one of the following:
 - *Text* (select to send an alphanumeric text message) > *Add number, Add e-mail, Edit message, List recipients, or Send*.
 - *Numeric page* (select to send a numeric message) > *Add number, Callback no., List recipients, or Send*.
2. Select *Add number* or *Add e-mail* to enter the recipient's phone number or e-mail address; or select *Search* to retrieve a number from your contacts list. Select *OK*.
3. Repeat step 2 to add more recipients, and select *OK*.
4. Select *Options > Edit message*.
5. Compose a message and select *Options > Send*.

Messaging options

When you create or reply to a text message, depending on the mode of text input you use and the features supported by your wireless service provider, some or all of the following options are available:

Send—Send the message to recipient.

List recipients—Send the message to more than one recipient; or delete or edit the recipient list.

Settings—Select *Urgent*, *Delivery note*, or *Callback no.*, and press *Mark* to add the selection to the message.

Save message—Save the message to a folder. Select *Sent items*, *Templates*, or *Archive*.

Clear text—Erase the text clipboard.

Exit editor—Save the message to your *Sent items* folder automatically, and exit the message editor.

Insert contact—Insert a name from your contacts list into your message.

Insert number—Insert a phone number or find a phone number in the contacts list, to insert into your message.

Use template—Insert a predefined template into your message.

Add-ins—Insert a *Sound*, *Animation*, or *Picture* to the text message.



Note: A picture message cannot be sent to an e-mail address.

Styles—Select *Font type* > *Bold*, *Italic*, *Underline*, *Strikethr.* and press *Mark* to add the selection to the message.

Insert word or *Edit word*—Enter or edit the text of a new word that might not appear in the predictive text dictionary. This displays only when the *Predictive text* is on.

Insert symbol—Insert a special character into your message. This displays only when the *Predictive text* is on.

Predictive text—Choose a predictive text language, and turn the dictionary on or off.

Matches—View matches found in the dictionary for the word you want to use. This displays only when the *Predictive text* is on and you have entered some text.

Distribution list

The distribution list allows you to send messages to a group of contacts. In the standby mode, select *Menu* > *Messages* > *Text messages* > *Distribution lists*.

To create a distribution list, select *Options* > *Add list*. To populate your list, select *Add contact* and a contact from your contacts list.

To view, rename or modify a distribution list, highlight the distribution list, and select *Options* > *View list*, *Rename list*, *Clear list*, or *Delete list*.

Templates

Templates are short, prewritten messages that can be recalled and inserted into new text messages.

1. Open the blank message creation screen. See "Write and send," p. 28.
2. Select *Options > Use template*.
3. Scroll to and select one of the available templates.
4. Enter the text into your new message, and select *Options > Send*.

Read messages



Important: Exercise caution when opening messages. Messages may contain malicious software or otherwise be harmful to your device or PC.

When you receive a text message, a notification message and  are displayed in the upper left corner in the standby mode. When you have unopened messages in your *Inbox*,  is displayed.

1. Select *Show* to read the message or *Exit* to remove the notification icon.
Scroll to view the whole message, if necessary.
2. Select *Options > Reply*.
3. Select *Empty screen*, and compose your reply.
4. To send your reply, select *Options > Send*.

Options

When you read a text message, some or all of the following options are available, depending on the text input mode and the features supported by your wireless service provider:

Delete—Discard the message.

Reply—Reply to the message. Create the message, and select *Options > Send*.

Use number—Choose *Save*, *Add to contact*, *Send message*, or *Call*.

Save—Save the message to a folder.

Use web link—Activate web link (appears when message contains a URL).

Save address—Save e-mail address (appears when the message contains an e-mail address).

List objects—Display a selection list that includes sounds, pictures, animations, vCard, and vCalendar objects embedded in message.

Forward—Forward the message to another phone number.

Rename—Edit the title of the message.

■ Message folders

Save messages

To save drafts of messages or received messages to a folder, do the following:

1. Open the message or create a new message, and select *Options*.
2. Select *Save* or *Save message* > *Sent items*, *Templates*, *Archive*, or a folder you created.

View saved messages

1. In the standby mode, select *Menu* > *Messages* > *Text messages*.
2. Select the folder containing the message you wish to view:
 - Inbox*—Stores read and unread messages.
 - Sent items*—Stores messages sent automatically from your phone.
 - Archive*—Stores messages you have saved.
 - Templates*—Stores pictures and prewritten templates.
 - My folders*—Provides a place to organize your messages in custom folders. Select *Options* > *Add folder* or *Options* > *Rename folder* or *Delete folder* to change a folder.
3. Once the folder opens, scroll to and select the message to view.

■ Delete messages

If your message memory is full, *Message overwriting* is set to off and you have more messages waiting at the network, when *No space for new messages* appears in the standby mode:

- Read some of the messages, and delete them.
- Delete messages from your folders.

Delete a single message

1. In the standby mode, select *Menu* > *Messages* > *Text messages*.
2. Scroll to and select the message to delete.
3. Select *Options* > *Delete* > *OK*. Select *Back* to exit

Delete all messages in a folder

1. In the standby mode, select *Menu* > *Messages* > *Text messages* > *Delete messages*.

Messages

2. Scroll to the folder containing the messages to delete, and **Select** one of the following options:

All—Deletes all messages in all folders

All read—Deletes any messages which have been read in all folders

All unread—Deletes any messages which have not been read in all folders

Inbox—Deletes all messages from the **Inbox** folder

Sent items—Deletes all messages from the **Sent items** folder

Archive—Deletes all messages from the **Archive** folder and all user created folders

User defined folders—Displays all user defined folders that the user added under **My folders** after the predefined folders.

3. Select **OK** to empty the folder.

Delete folders

Only folders created in **My folders** can be deleted. The **Inbox**, **Sent items**, **Archive**, and **Templates** folders are protected. When a folder is deleted, all messages in the folder are also deleted.

■ Message settings

Change sending options



Note: Some or all of the following **Sending options** may be available as determined by your carrier.

In the standby mode, select **Menu** > **Messages** > **Text messages** > **Message settings** > **Sending options**, and select the setting you wish to change.

- **Priority**—Sets the priority of the note to **Normal** or **Urgent**.
- **Delivery note**—Receives a note confirming delivery of the message. Select **On** or **Off**.
- **Send callback number**—Sends a callback number to the recipient. Select **Off** or enter your phone number.

Change message settings

In the standby mode, select **Menu** > **Messages** > **Text messages** > **Message settings** > **Other settings**, and one of the following options:

- **Message overwriting**—Select **Sent items only**, **Inbox only**, **S. items & inbox**, or **Off**.
- **Save to Sent items as sending**—Select **Always save**, **Always prompt**, or **Off**.

- *Auto-playback of sounds*—Automatically plays back any attached sounds in the message.

When the message memory is full, your phone cannot send or receive any new messages. However, you can set your phone to automatically overwrite selected messages in the *Inbox* or *Sent items* folders when new messages arrive.

Add-ins

Select *Menu > Messages > Text messages > Add-ins > Sounds, Animations, or Pictures*, to send animation, pictures or sounds in your text messages.

■ Connect to voice mail

Press and hold 1. The device connects to the stored voice-mail number. When you connect to voice mail and the prerecorded greeting begins, follow the service's automated instructions to set up or use your voice mail.

If no voice-mail number is stored, contact your service provider for the correct number.

■ Automate voice mail

Special characters, called dialing codes, can be added to phone numbers. Dialing codes instruct the receiving system to pause, wait, bypass, or accept the numbers that follow them in the dialing string. See "Insert dialing codes," p. 34.

Voice mail services vary by service provider. The following instructions are examples of common operations. Please check with your service provider for specific instructions for using your voice mail service.

Set up voice mail with dialing codes

1. Write down your voice mailbox number.
2. Call and check your voice mail as you normally would.
3. Write down your interaction with the recorded prompts step-by-step. Keep in mind that each voice mail service may vary. However, it should be similar to the following:
Dial *86, pause 5 seconds, enter password (such as, 1234), press #.
4. In the standby mode, select *Contacts > 1-touch dialing*.
5. Scroll to an *(empty)* 1-touch dialing slot and select *Assign*.
6. Enter your voice mailbox number, including the area code.

Messages

7. Enter any dialing codes as necessary using the information that you wrote down from "Insert dialing codes," p. 34.

If you pause for 5 seconds after connecting to voice mail, enter *p* twice after the voice mailbox number; for example, 2145551212*pp*.

8. Enter any remaining pauses or other information that allows you to listen to your messages, and select *OK*.
9. Enter a name (such as voice mail), and select *OK*.

To dial and listen to your voice mail, in the standby mode, press and hold the assigned 1-touch dialing key.

Insert dialing codes

Press *** repeatedly to cycle through the dialing codes. Once the desired code appears in the display, pause briefly. The code is inserted into the dialing string.

The following dialing codes are available:

*** – Bypasses a set of instructions

+ – International prefix

p – Pauses for 2.5 seconds before sending the numbers that follow

w – Waits for you to press the send key before sending the numbers or codes that follow

6. Call log



Call log stores information about the last 20 missed, 20 received, and 20 dialed calls. It also stores the duration of all calls. When the number of calls exceeds the maximum, the most recent call replaces the oldest.

To view information for *Missed calls*, *Received calls*, or *Dialed numbers*, choose from the following options:

Call time—Displays the date and time of the call

Send message—Sends a message to the number

View number—Displays the number

Use number—Edits the number and associates a name with the number

Save—Enters a name for the number and saves it to your contacts list

Add to contact—Adds the number to an existing entry in your contacts list, if the number is not associated with a name

Delete—Clears the number from memory

Call—Calls the number

■ View missed calls

Missed calls were never answered. The missed calls feature does not function when your phone is switched off.

If the message icon appears in the display, select *List* and highlight the missed call. Select *Options*.

Or, from the standby mode, select *Menu* > *Call log* > *Missed calls*. Highlight a missed call and select *Options*.

■ View received calls

Received calls have been answered. In the standby mode, select *Menu* > *Call log* > *Received calls*. Highlight a received call and select *Options*.

■ View dialed numbers

Dialed numbers were dialed previously from your phone. In the standby mode, press the send key, or select *Menu* > *Call log* > *Dialed numbers*. Highlight a name or number and select *Options*.

Call times

To view up to five calls with the time each call occurred, your phone clock must be set.

1. Select *Options* > *Call time*.
2. Scroll through the calls to view the recent call times.
3. Select *Back* to return to the options list.

■ Delete call logs

To delete any missed, dialed, or received calls from phone memory, in the standby mode, select *Menu* > *Call log* > *Delete recent call lists* and select the call type to clear: *All*, *Missed*, *Received* or *Dialed*.

■ View duration of calls



Note: The actual invoice for calls and services from your service provider may vary depending on network features, rounding off for billing, taxes, and so forth.

To activate the call timer, in the standby mode and while in a call, select *Details* > *Show call time on display* > *On* or *Off*.



Note: Some timers, including the life timer, may be reset during service or software upgrades.

To determine the duration of your calls, select *Menu* > *Call log* > *Call timers*, and *Duration of last call*, *Duration of dialed calls* (*Home* or *Roaming*), *Duration of received calls* (*Home* or *Roaming*), *Duration of all calls*, *Life timer*, *Clear timers*
Clear timers sets all call timers, except the life timer, to zero. Enter your security code, and *OK*. See "Security settings," p. 48.

7. Profiles



Profiles define how your phone reacts when you receive a call or message, how your keypad sounds when you press a key, and more. Ringing options, keypad tones, and other settings for each profile can be left at their default setting, or customized.

The following profiles are available: *Normal*, *Silent*, *Meeting*, *Outdoor*, and *Pager*.

Profiles are also available for enhancements such as a headset and car kit. See "Enhancement settings," p. 46, for more information about enhancement profiles.

■ Activate

In the standby mode, select *Menu* > *Profiles* > select the profile of your choice > *Activate*.

■ Customize a profile

You can customize the profiles in a variety of ways.

You cannot rename the *Normal* profile.

1. In the standby mode, select *Menu* > *Profiles*.
2. Highlight the profile you wish to customize and select *Customize*.
3. Select the option you want to customize: *Incoming call alert*, *Ringtone*, *Ringtone volume*, *Vibrating alert*, *Message alert tone*, *Keypad tones*, *Warning tones*, *Alert for*, or *Profile name*.

■ Set a timed profile

Timed profiles can prevent missed calls. For example, if you attend an event that requires your phone to be *Silent*, but you may forget to return it to *Normal*. A timed profile returns your phone to the default profile at the time you specify. Timed profiles can be set up to 24 hours in advance.

1. In the standby mode, select *Menu* > *Profiles*.
2. Select the profile to activate and select *Timed* for timed expiration.
3. Enter the time for the profile to expire, and select *OK*.

8. Settings



Use this menu to change the time settings, call settings, phone settings, display settings, tone settings, enhancement settings, security settings, network, network services, and to restore the factory settings.

■ Call settings

Location information sharing

Location information sharing is a network service and must be supported by your wireless service provider. See "Network services," p. 6, for more information.

Location info sharing allows the phone to share position information over the network. For calls to emergency numbers, this position information may be used by the emergency operator to determine the location of the phone. The functionality and accuracy of this feature is dependent on the network, satellite systems, and the agency that receives the information. It may not function in all areas or at all times.

Location information is always shared with the network during emergency calls to the official emergency number programmed into the phone, regardless of which setting is selected. After you place an emergency call the phone remains in emergency mode for five minutes. During this time, the location information is shared with the network.

In the standby mode, select *Menu > Settings > Call settings > Location info sharing > 911 only* or *Location on > OK > OK*.

911 only—This is the default profile. The phone location information is shared only during an emergency call to the official emergency number programmed into your phone. The phone screen displays  in the upper left hand corner when in the standby mode.

Location on—The phone location information is shared with the network whenever the phone is powered on and activated. The screen displays  in the upper left-hand corner when in the standby mode.

Anykey answer

Anykey answer allows you to answer an incoming call with a brief press of any key except the power, right selection, or end key.

In the standby mode, select *Menu > Settings > Call settings > Anykey answer > On* or *Off*.

Automatic redial

Occasionally, your network may experience heavy traffic, which results in a fast busy signal when you dial. With automatic redial activated, your phone redials the number up to three times, and notifies you once the network is available.

In the standby mode, select *Menu* > *Settings* > *Call settings* > *Automatic redial* > *On* or *Off*.

1-touch dialing

To activate or deactivate 1-touch dialing. In the standby mode, select *Menu* > *Settings* > *Call settings* > *1-touch dialing* > *On* or *Off*. See "Set up 1-touch dialing," p. 23.

Automatic update of service

Your phone can receive updates to wireless services sent to your phone by your service provider. This option is a network service.

Calling cards

If you use a calling card for long distance calls, save the calling card number in your phone. The phone can store up to four calling cards. Contact your calling card company for more information.

Save information

1. In the standby mode, select *Menu* > *Settings* > *Call settings* > *Calling card*.
2. Enter your security code, and select *OK*. See "Security settings," p. 48.
3. Scroll to the calling card of your choice, select *Options* > *Select* > *OK*.
4. Select one of the following sequence types:
 - Access no. + phone no. + card no.*—Dial the 1-800 access number, phone number, then enter the card number (plus PIN if required).
 - Access no. + card no. + phone no.*—Dial the 1-800 access number, card number (plus PIN if required), then enter the phone number.
 - Prefix + phone no. + card no.*—Dial the prefix (numbers that must precede the phone number) and phone number, then enter the card number (plus PIN if required).
5. Enter the required information (access number or prefix and card number), and select *OK* to confirm your entries.
6. Select *Card name* > enter the card name > *OK*.

Select a calling card

You can select one of the calling cards for which you have saved information. The selected card information is used when you make a card call.

1. In the standby mode, select *Menu > Settings > Call settings > Calling card*.
2. Enter your security code, and select *OK*. See "Security settings," p. 48.
3. Scroll to the calling card of your choice, and select *Options > Select > OK*.

Make card calls

After you have selected a calling card, make a card call.

1. Enter the phone number, including any prefix (such as 0 or 1) that your calling card may require when you make a calling card call. See your calling card for instructions.
2. Press and hold the send key key for a few seconds until *Card call* is displayed.
3. Follow the instructions on the screen.
4. When you hear the tone or system message, select *OK*.

International prefix

To store an international dialing prefix into your phone, enter + at the beginning of a phone number. Your phone automatically inserts the international dialing prefix that you stored.

1. In the standby mode, select *Menu > Settings > Call settings > International prefix*.
2. Enter the international dialing prefix (for example, 0011), and select *OK*.
3. In the standby mode, enter + (press * key twice) and the phone number to call (for example, +3546789).

The phone calls the international dialing prefix you have stored in your phone and the phone number you have entered (for example, the phone calls 0011354789).

Call summary

Your phone can display the time spent on a call when you hang up.

In the standby mode, select *Menu > Settings > Call settings > Call summary > On or Off*.

■ Phone settings

Phone language

In the standby mode, select *Menu > Settings > Phone settings > Phone language*, and select the language: *English* or *Español*.

The phone language you choose affects the time and date formats of the clock, alarm clock, and calendar.

Automatic keyguard

To set the keypad of your phone to lock automatically after a preset time delay (from 10 seconds to 60 minutes), do the following:

1. In the standby mode, select *Menu > Settings > Phone settings > Automatic keyguard > On* or *Off*.
2. If you select *On*, *Set delay*: is displayed.
3. Enter the delay (in minutes and seconds), and select *OK*.



Important: When keyguard is on, calls may be possible to the emergency number programed into your phone. Enter the emergency number, and press the send key. The number is displayed only after you enter the last digit.

Touch tones

Touch tones sound when you press the keys on your phone keypad. You can use touch tones for many automated dial-up services such as banking and airlines, or for entering your voice mailbox number and password.

Touch tones are sent during an active call and can be sent manually from your phone keypad, or sent automatically by saving them in your phone.

Set type

1. In the standby mode, select *Menu > Settings > Phone settings > Touch tones > Manual touch tones*.
2. Select one of the following options:
 - Continuous*—Sets tone sounds for as long as you press and hold a key
 - Fixed*—Sends tones of the duration you specify in the *Touch tone length* option
 - Off*—Turns off tones. No tones are sent when you press a key.

Set length

To specify touch tone length when using the *Fixed* option, in the standby mode, select *Menu* > *Settings* > *Phone settings* > *Touch tones* > *Touch tone length* > *Short* (0.1 seconds) or *Long* (0.5 seconds).

Welcome note

You can write a welcome note that briefly appears on the display screen whenever you switch your phone on. Predictive text input is not available for entering welcome note text.

1. In the standby mode, select *Menu* > *Settings* > *Phone settings* > *Welcome note*.
2. Enter a note (up to 44 characters).
Press * to display and select from the available special characters.
3. When you are finished, select *Options* > *Save* to save the welcome note or *Delete* to delete the previous text and create another welcome note.

Help text

Your phone displays brief descriptions for most menu items. These descriptions are called help text.

The default setting for help text is *On*. To turn help text on or off, in the standby mode, select *Menu* > *Settings* > *Phone settings* > *Help text activation* > *On* or *Off*.

When *Help text activation* is turned *On*, select a feature or menu, pause for 10 to 15 seconds, and wait for the help text to display. Use the scroll keys in view the complete help text, if necessary.

■ Time and date settings

Time

Show or hide the clock

In the standby mode, select *Menu* > *Settings* > *Time settings* > *Clock* > *Show clock* or *Hide clock*.

Set the time

1. In the standby mode, select *Menu* > *Settings* > *Time settings* > *Clock* > *Set the time*.
2. Enter the time (in hh:mm format), and select *OK*.
3. Select *am* or *pm* if you selected *12-hour* format.

Change the format

In the standby mode, select *Menu > Settings > Time settings > Clock > Time format > 24-hour* or *12-hour*.

Date

Show or hide the date

In the standby mode, select *Menu > Settings > Time settings > Date > Show date* or *Hide date*.

Set the date

1. In the standby mode, select *Menu > Settings > Time settings > Date > Set the date*.
2. Enter the date, and select *OK*.

Change the date format

1. In the standby mode, select *Menu > Settings > Time settings > Date*.
2. Scroll to *Date format*, and select a format.
3. Scroll to and select the *Date separator*.
4. Select a separator.

Set the auto-update of date and time

Auto-update is a network service. See "Network services," p. 6.

If your wireless service provider supports this feature, you can allow the digital network to set the clock, which is useful when you are out of your home area, or when you have traveled to another network or time zone.

In the standby mode, select *Menu > Settings > Time settings > Auto-update of date & time > On, Confirm first, or Off*.

If you use the *Auto-update of date & time* option while outside your digital network, you may be prompted to enter the time manually. Network time will replace the time and date when you re-enter your digital network.

If your battery has been removed or has drained outside the digital network, you may be prompted to enter the time manually (once the battery is replaced or recharged, and you are still outside of the digital network).

■ Display settings

Wallpaper

You can set your phone to display a background picture (wallpaper) in the standby mode. To activate or deactivate wallpaper, in the standby mode, select [Menu](#) > [Settings](#) > [Display settings](#) > [Wallpaper](#) > [On](#) or [Off](#). To select the wallpaper you wish to display, do the following:

1. In the standby mode, select [Menu](#) > [Settings](#) > [Display settings](#) > [Wallpaper](#) > [Select wallpaper](#).
2. Highlight the [Graphics](#) folder, and select [Open](#).
3. Browse the folder.
4. When you find an image, select [Options](#) > [Set as wallpaper](#).

Color scheme

You can change the color of some display components in your phone, such as indicators and signal bars.

1. In the standby mode, select [Menu](#) > [Settings](#) > [Display settings](#) > [Color schemes](#).
2. Select the color scheme of your choice.

Banner

If your wireless service provider supports this feature, you can choose whether the display shows the operator logo or customized text when the device is in the idle state.

In the standby mode, select [Menu](#) > [Settings](#) > [Display settings](#) > [Banner](#) > [Default](#) or [Customize](#).

Screen saver time-out

The screen saver is activated when no function of the device is used after a preset period of time. Press any key to deactivate the screen saver. You can set your device to display a screen saver after a preset time or after a custom time (up to 60 minutes) of your choosing.

1. In the standby mode, select [Menu](#) > [Settings](#) > [Display settings](#) > [Screen saver time-out](#).
2. Scroll to and select the time-out option of your choice.
3. To set a custom time (up to 60 minutes), select [Other](#), enter the custom time, and select [OK](#).

Display brightness

You can change the brightness of your device display.

1. In the standby mode, select *Menu > Settings > Display settings > Display brightness*.
2. Scroll up or down to adjust the brightness level to your preference.
3. Select *OK* to accept your settings.

Backlight time-out

You can choose whether the backlights will be always on, off, or on for a selected time.

In the standby mode, select *Menu > Settings > Display settings > Backlight time-out > 7 seconds, 15 seconds, 30 seconds, Always on, or Always off*.

■ Tone settings

From this menu, you can adjust the ringing volume, keypad tones, and other tone settings for the currently active profile. See "Customize a profile," p. 37, for more information on profile settings.

Select *Menu > Settings > Tone settings*, and one of the following options:

Incoming call alert—Select how the device notifies you of an incoming call.

Ringing tone—Select the ringing tone for incoming calls.

Ringing volume—Set the volume of your ringing tone.

Vibrating alert—Turn the vibrating alert *On* or *Off*.

Message alert tone—Select the tone for received messages.

Keypad tones—Set the volume of your keypad tones (or turn them off).

Warning tones—Turn warning and confirmation tones *On* or *Off*.

Alert for—Define which caller groups the selected profile will accept or decline.

■ Phone details

From this menu, you can check details of your phone service. Select *Menu > Settings > Phone details*, and one of the following options:

User details—Display the mobile ID number (MIN) and own number (MDN).

Version details—Display the device model, hardware version, and software version of the device.

System details—Display the system ID, channel, preferred roaming list (PRL), mode, and frequency of the phone service.

■ Enhancement settings

The enhancement settings menu is displayed only if the device is connected to a compatible enhancement.



Important: The headset may affect your ability to hear sounds around you. Do not use the headset in situations that may endanger your safety.

In the standby mode, select *Menu* > *Settings* > *Enhancement settings* > *Headset, Handsfree, Loopset, TTY/TDD* (carrier dependent), or *Charger*.

Headset

Scroll to and select an option to enter the submenu and modify its settings.

Default profile—Choose the profile you wish to be automatically activated when a headset is connected.

Automatic answer—Answer calls automatically after one ring when a headset is connected. Select *On* or *Off*.

Handsfree

Scroll to and select an option, to enter the submenu and modify its settings.

Default profile—Select the profile to automatically activate when your device is connected to a car kit. See also "Customize a profile," p. 37.

Automatic answer—Set so calls are answered automatically after one ring when a car kit is connected. Select *On* or *Off*.

Lights—Choose to keep the device lights always on, or to shut off automatically after several seconds. Select *On* or *Automatic*.

Loopset

The loopset (for use with T-coil equipped hearing aids) is recommended for use with your device. Scroll to and select the option of your choice, to enter the submenu and select *Use loopset* > *Yes* or *No* to modify the settings.

TTY/TDD

Select *Yes* or *No* to use TTY/TDD. Check with the manufacturer of the TTY/TDD device for a connecting cable that is compatible with the Nokia device.

TTY/TDD communications depend on network availability. Check with your service provider for availability and description of services.

Set up the TTY/TDD profile

To connect your device directly to the TTY/TDD device, set up the TTY/TDD profile.

1. Connect the HDA-10 headset adapter to the connector on the bottom of the device.
2. Connect one end of the cable to the TTY/TDD device.
3. Insert the other end of the cable into the headset jack on the HDA-10 headset adapter.
4. In the standby mode, select *Menu* > *Settings* > *Enhancement settings* > *TTY/TDD* > *Use TTY* > *Yes*.

TTY/TDD calls



Important: Some manufacturers of TTY/TDD devices suggest that the device be at least 18 inches from the TTY/TDD device. When connecting to any other device, read its user guide or contact its manufacturer for detailed instructions and safety information.

- Check with the manufacturer of the TTY/TDD device for a connecting cable that is compatible with the Nokia device.
- TTY/TDD communications depend on network availability. Check with your service provider for availability and description of services.

Make a call

1. In the standby mode, enter the number, and press the send key.
2. When the receiving party answers, begin typing your conversation on the TTY/TDD.
3. Press the end key to end the call.

Receive a call

1. Make sure the TTY/TDD device is connected to your device.
2. Press the send key to answer the call, and type your responses on the TTY/TDD.
3. Press the end key to end the call.

Charger

In the standby mode, select *Menu* > *Settings* > *Enhancement settings* > *Charger*, and one of the following options:

Default profile—Choose the profile you wish to be automatically activated when your device is connected to the charger.

Lights—Choose to keep the device lights always on or to shut off automatically after several seconds. Select *On* or *Automatic*.

■ Security settings

When first accessing the security settings, enter the preset lock code. By default, this is the last four digits of your phone number. Your wireless service provider, may preset the lock code to a four-digit number such as 1234 or 0000. If these numbers do not work, contact your wireless service provider.

Activate or deactivate phone lock

The phone lock feature protects your device from unauthorized outgoing calls or unauthorized access to information stored in the device.

To activate or deactivate the phone lock setting on your device:

1. In the standby mode, select *Menu* > *Settings* > *Security settings*.
2. Enter the lock code, and select *OK*. See "Change lock code," p. 49.
3. Select *Phone lock* and one of the following options:
 - *Off*—Immediately turns off the phone lock feature.
 - *Lock now*—immediately turns on the phone lock feature.
 - *On power-up*—Turns on the phone lock feature after power on.

If you selected *Lock now*, you are prompted to enter your lock code when you select menu or the left softkey. When the lock code has been entered, phone lock deactivates and your device functions normally.

When phone lock is activated, *Phone locked* is displayed each time you turn your device on or off.

When the device is locked, calls still may be possible to the official emergency number programmed into your device.

Call not allowed is displayed if you attempt to place a call while your device is locked. To answer a call with phone lock on, select *Answer*, or press the send key.

Allow numbers when phone locked

When phone lock is on, the only outgoing calls that can be made are to the emergency number programmed into your device (for example, 911) or the numbers stored in the *Allowed no. when phone locked* location.

To add a number to the allowed list:

1. In the standby mode, select *Menu* > *Settings* > *Security settings*.
2. Enter the lock code and select *OK*. See "Security settings," p. 48.
3. Select *Allowed no. when phone locked*. Highlight an empty location, select *Assign*, and enter the phone number; or select *Assign* > *Search* to recall the number from *Contacts*. Select *OK*.

Call an allowed phone number

In the standby mode, enter an allowed number and press the send key.

Change lock code

The preset lock code is 1234 or the last four digits of your phone number.

If you enter the wrong lock code 5 times in succession, you will not be able to enter a code for 5 minutes, even if you power off the device between incorrect entries.

1. In the standby mode, select *Menu > Settings > Security settings > Change lock code*.
2. Enter the new lock code (must be 4 characters in length), reenter the new lock code for verification, and select *OK*.

When you change your lock code, make sure you store it in a safe place, away from your device. Avoid entering access codes similar to emergency numbers to prevent accidental emergency calls.

Restrict calls

You can restrict the calls your phone can make and receive. When calls are restricted, calls still may be possible to the official emergency number programmed into your phone. Contact your service provider for additional information.

1. In the standby mode, select *Menu > Settings > Security settings > Call restrictions*.
2. Enter the security code, and select *OK*. See "Change lock code," p. 49.
3. Select the type of calls you wish to restrict:
Restrict outgoing calls > Blocked numbers or *Allowed numbers > Select, Add restriction, Edit, or Delete*—Calls cannot be made.
Restrict incoming calls > Blocked numbers or *Allowed numbers > Select, Add restriction, Edit, or Delete*—Calls cannot be received.

Voice privacy

Voice privacy is a network service. See "Network services," p. 6. If your wireless service provider supports this feature, the voice privacy feature protects the privacy of your current phone conversation from other callers placing phone calls on your same network.

In the standby mode, select *Menu > Settings > Security settings > Voice privacy > On* or *Off*.

■ Network

The menu options in your device are based on your service provider's network. The network determines which options actually appear in the phone menu. Check with your service provider for more information.

The *Network* menu allows you to customize the way your device chooses a network in which to operate while you are within or outside of your primary or home system. Your device is set to search for the most cost-effective network. If your device cannot find a preferred network, it selects a network automatically based on the option you choose in the *Network* menu.

Roaming options

To set your device to roam or search for another network when you are not in your home area, do the following:

1. In the standby mode, select *Menu > Settings > Network > Roaming options*.
2. Select one of the following options:

Home only—Make and receive calls in your home area only.

Automatic—Phone automatically searches for service in another digital network. *Automatic A* scans the channels in the A carrier's system. *Automatic B* scans the B system. The roaming rate applies when you are not in the home service area. When set to *Automatic*, there is no audible tone to signal that you are roaming. The appearance of the  icon is the only indication that the device is roaming, and calls are charged at the roaming rate.

3. Select *OK*, if necessary, to confirm the activation.

Mode

You can choose whether your device uses digital service.

1. At the start screen, select *Menu > Settings > Network > Mode*.
2. Select one of the following service options:

Digital only—The device only works in digital mode.

IS-95 per call—Allows calls on the IS-95 network. If no calls are placed ten minutes after IS-95 selection, calls return to the previous network selection.

■ Network services

The following features are network services. See "Network services," p. 6.

Store a feature code

1. In the standby mode, select *Menu > Settings > Network services > Network feature setting*.
2. Enter the feature code from your service provider (for example, *633 *Forward if busy*), and select *OK*.
3. Select the type of forwarding that matches the feature code you entered (for example, *Call forwarding*).

The activated feature code is now stored in your device, and you are returned to the *Feature code*: field. Continue entering other feature codes (for example, *633), or press the **end** key to return to standby mode. Once you enter a network feature code successfully, the feature becomes visible in the *Network services* menu.

Call forwarding

Call forwarding tells your network to redirect incoming calls to another number. Call forwarding is a network service and may not work the same in all networks, so contact your wireless provider for availability.

Activate

1. In the standby mode, select *Menu > Settings > Network services > Call forwarding* and select one of the following options: *Forward all calls*, *Forward if busy*, *Forward if not answered*, *Forward if out of reach*, or *Cancel all call forwarding*.
2. Select *Activate*.
3. Scroll to and select the destination to which your calls will be forwarded.
4. Enter the number to which your calls, data, or other information will be forwarded, and select *OK*.

Call waiting

If your wireless provider supports this feature, call waiting notifies you of an incoming call even while you are in a call. You can then accept, decline, or ignore the incoming call.

1. In the standby mode, select *Menu > Settings > Network services > Call waiting > Activate* or *Cancel*.
2. During a call, select *Answer* or the send key to answer the waiting call.
The first call is put on hold.
3. Press the end key to end the active call.

Send own caller ID when calling

If your wireless service provider supports this feature, you can prevent your number from appearing on the receiving party caller ID.

In the standby mode, select *Menu > Settings > Network services > Send my caller ID > Yes or No*.

Select your own phone number

If your wireless service provider supports this feature, and you have more than one number, you can select the number to be used. In the standby mode, select

Menu > Settings > Network services > Own number selection.

■ Restore factory settings

This option resets some of the menu settings to their original values. It does not delete data that you have entered or downloaded, or affect entries in your contacts list.

In the standby mode, select *Menu > Settings > Restore factory settings*. Enter the security code, and select *OK*. See "Security settings," p. 48.

9. Gallery



Pictures and ring tones can be saved to folders in the *Gallery*, or to folders created of your own. Images and tones can be downloaded using web sites.

■ Open the gallery

In the standby mode, select *Menu* > *Gallery* where you can *View folders*, *Add folder*, *Delete folder*, and *Rename folder*.

■ View folders

1. In the standby mode, select *Menu* > *Gallery* > *View folders* > *Images*, *Graphics*, or *Tones* > *Open*.
2. Scroll to and select an image, graphic or tones, and *Options* > *Open*, *Delete*, *Move*, *Rename*, *Set as wallpaper*, *Details* or *Sort*.

10. Games



Challenge yourself or a friend to one of the fun games in your device: Air Glide, Bowling, and Sky Diver. Some menus listed are network services. Contact your wireless provider for more information.

■ Play a game

1. In the standby mode, select *Menu > Games > Select game*.
2. Scroll to a game, and press the send key.
3. Select one of the following options (if supported by the particular game):
 - New game*—Launch a new game.
 - High scores*—View the high scores for this game (if previously played).
 - Instructions*—View instructions for playing the game. Scroll down to read more.

■ Game settings

1. In the standby mode, select *Menu > Games*.
2. Scroll to and select one of the following game submenus:
 - Select game*—Select a game or enter a game option list. See "Game details," p. 54.
 - Memory*—Check the available memory for games and game-related applications.
 - Settings*—Turn *Game sounds*, *Game lights*, and *Shakes* on or off.

■ Game details

To display the name, version, and size of a selected game, select *Options > Details*.

11. Voice



■ Voice tag dialing

You can dial up to 25 stored numbers using voice tag dialing.

Before using voice tags, note that:

- Voice tags are not language-dependent. They are dependent on the speaker's voice.
- You must say the name exactly as you said it when you recorded it.
- Voice tags are sensitive to background noise. Record voice tags, and use them in a quiet environment.
- Very short names are not accepted. Use long names and avoid similar names for different numbers.



Note: The use of voice tags may be difficult in a noisy environment or during an emergency, so you should not rely solely upon voice dialing in all circumstances.

Assign a voice tag

Before you use voice dialing, assign a voice tag to the number.

1. In the standby mode, scroll down to enter the contacts list.
2. Highlight the contact to assign a voice tag, select *Details* > *Options* > *Add voice tag* > *Start*.
3. Speak clearly into the microphone. Do not select *Quit* unless you want to cancel the recording.

The device replays and then saves the recorded tag. The  icon appears next to commands that have voice tags assigned.

If the recording is not successful, your device displays *Voice system error*. Select *Options* > *Add voice tag*, and repeat Step 3.

Dial a number

In the standby mode, select and hold *Contacts*. When you hear several beeps, *Speak now* is displayed. Release *Contacts*. Pronounce the voice tag clearly into the microphone.

When the device finds the voice tag, *Found:* is displayed, and the device automatically dials the number. If the device does not locate a number or recognize the voice tag, *No match found* is displayed.

Voice tags

After you have associated a voice tag to a contact, in the standby mode, select *Menu* > *Voice* > *Voice tags* > *Options* > *Playback, Change, or Delete*.

■ Voice commands

Set as many as five voice commands, to allow hands-free operation of certain device features.

Assign a voice tag to a command

Before using voice commands, you must first add a voice tag to the device function.

1. In the standby mode, select *Menu* > *Voice* > *Voice commands*.
2. Select the device function you wish to tag: *Profiles, Voice mailbox, Voice recorder, or Call log*.
3. If necessary, scroll to an option associated with that function, and select *Options* > *Add command*.
4. Select *Start*, and speak the voice tag clearly into the microphone.



Note: Do not select *Quit* unless you want to cancel the recording.

The device replays and saves the recorded tag.  appears next to commands that have voice tags assigned.

Activate a voice command

After you have associated a voice tag with a device function, you can issue a command by speaking the voice tag.

1. Select and hold *Contacts*.
2. When *Speak now* is displayed, pronounce the voice tag clearly into the microphone.

When the device finds the voice tag, *Found:* is displayed, and the device plays the recognized voice tag through the earpiece. The function you requested is activated.

Options

After you have associated a voice tag to a command, you can choose one of the following options. In the standby mode, select *Menu* > *Voice* > *Voice commands* > *Options* > *Playback, Change, or Delete*.

■ Voice recorder

This feature allows you to record speech or sound with your device and listen to them later. The total available time is 30 seconds if no memos have been stored. The maximum length of a recording depends on how much memory remains available.

The recorder cannot be used when a data call or connection is active.

Record speech or sound

1. In the standby mode, select *Menu* > *Voice* > *Voice recorder* > *Record*.
2. After the recorder start tone is heard, begin recording speech or sound.
3. When you are finished recording, select *Stop*.
4. Enter the title for the recording, and select *OK*.

Options

After you have saved the recording to the *Recordings list*, highlight the recording; and select one of the following options: *Playback*, *Delete*, *Edit title*, or *Add alarm*.

12. Organizer



Your device contains features to help organize your everyday life, including an alarm clock, calendar, calculator, countdown timer, and stopwatch.

■ Alarm clock

Set an alarm

The alarm clock is based on the device clock. The alarm sounds an alert for any time you specify.

1. In the standby mode, select *Menu* > *Organizer* > *Alarm clock* > *Alarm time*.
2. Enter the time for the alarm (in hh:mm format), and select *OK*.
3. Select *am* or *pm* if you select *12-hour* format.

Alarm on is displayed briefly in the display, and  is displayed in the standby mode.

Change the time

1. In the standby mode, select *Menu* > *Organizer* > *Alarm clock* > *Alarm time* > *On*.
2. Enter the time for the alarm (in hh:mm format), and select *OK*.
3. Select *am* or *pm* (if you select *12-hour* format).

Alarm on is displayed briefly, and  is displayed in the standby mode.

Set the alarm tone

You can set the tone to play when the alarm sounds.

1. In the standby mode, select *Menu* > *Organizer* > *Alarm clock* > *Alarm tone*.
2. Highlight *Standard*, *Ringing tone*, or *Open Gallery*; and select a tone.

Alarm conditions

When the alarm sounds, your device beeps, vibrates (if vibrating alert is on for the currently active profile), and lights up the display. If you do not press a key, the alarm stops (snoozes) for 10 minutes, then sounds again.

With the device on, select *Stop* to shut the alarm off, or select *Snooze*. The alarm stops for 10 minutes and *Snooze on* is displayed.

If the alarm time is reached while the device is switched off, the device switches itself on and starts sounding the alarm tone. If you select *Stop*, the device asks whether you want to activate the device for calls. Select *No* to switch off the device or *Yes* to make and receive calls. Do not select *Yes* when wireless device use may cause interference or danger.

Turn an alarm off

In the standby mode, select *Menu > Organizer > Alarm clock > Alarm time > Off*.

■ Calendar

The calendar tracks reminders, calls to make, meetings, and birthdays. It can even sound an alarm for any of these events.

Monthly view provides an overview of the selected month and weeks. It also allows you to jump to a specific date. Any days or dates that appear in bold font contain calendar notes such as a meeting or reminder.

Open

In the standby mode, select *Menu > Organizer > Calendar*.

Move the cursor in some calendar views with the up and down scroll keys.

Go to a date

1. In the standby mode, select *Menu > Organizer > Calendar > Options > Go to date*.
2. Enter the date (for example, mm/dd/yyyy), and select *OK*.

Note a specific date

You can choose from five types of notes: *Meeting*, *Call*, *Birthday*, *Memo*, and *Reminder*. Your device asks for further information depending on which note you choose. You also have the option to set an alarm for any note that you select.

1. Go to the date for which you want to set a reminder. See "Go to a date," p. 59, in the previous section if you need more information.
2. From the monthly view (with the go to date highlighted), select *Options > Make a note*, and one of the following note types:
 - Meeting*—Enter a subject, a location, and a start and end time. You can then set an alarm.
 - Call*—Enter a phone number, a name, and the time. You can then set an alarm.
 - Birthday*—Enter the person's name, and year of birth. You can then set an alarm.

Organizer

Memo—Enter a subject and an end date, and set an alarm.

Reminder—Enter the subject, and set an alarm.

3. Enter your note, and select *Options* > *Save*.

View notes (day view)

To view the created calendar notes, do the following:

1. In the standby mode, select *Menu* > *Organizer* > *Calendar*.
2. Scroll to the date that has a note. (Days with notes are in bold font.)
3. Select *Options* > *View day*.
4. To view a highlighted note, select *Options* > *View*.

Send a note

1. In the standby mode, select *Menu* > *Organizer* > *Calendar*.
2. Scroll to the date containing the note. Any days containing notes are in bold font.
3. Select *Options* > *View day*.
4. Scroll to the note, and select *Options* > *Send note* > *Via calendar* or *Via text msg*. The note is sent to another device in calendar-to-calendar (vCal) format (if supported in the receiving phone) or as a plain text message.
5. If you selected *Via calendar*, enter the number for the recipient or select *Search* to retrieve a number from the contacts list, and select *OK*.
6. If you selected *Via text msg*., the note appears as a text message.
7. Select *Add number*.
8. Enter the number for the recipient, or select *Search* to retrieve a number from the contacts list, and select *OK*.
9. Select *Options* > *Send*.

Receive notes

When you receive a calendar note in calendar-to-calendar (vCal) format, *Calendar note received* is displayed. When you receive a calendar note as a text message, a message notification appears in the standby mode. You can then view, save, or discard the note, and set an alarm for any date and time.

■ Calculator

The calculator in your device adds, subtracts, multiplies, divides, calculates the square and the square root, changes the sign of the number entered, and converts currency values.



Note: This calculator has a limited accuracy and is designed for simple calculations.

1. In the standby mode, select *Menu > Organizer > Calculator*.

2. Enter the first number in the calculation.

Press # for a decimal point if necessary.

Press * to cycle through the add (+), subtract (-), multiply (*), and divide (/) characters. Pause briefly to select the displayed character.

3. Enter the second number in your calculation.

4. Select *Options* (equals is highlighted).

To perform a square or square root calculation, select *Options > Square* or *Square root*.

To change the sign, select *Options > Change sign*, or scroll to the key.

■ Countdown timer

You can enter a specified countdown time (up to 99 hours and 59 minutes).

When the time runs out, your device sounds an alarm. The countdown timer only works when the device is on.

Set the countdown timer

1. In the standby mode, select *Menu > Organizer > Countdown timer*.

2. Enter the time (in hh:mm format), and select *OK*.

3. Enter a note for the timer, and select *OK*.

The  icon appears in the standby mode when the countdown timer is set.

When the time runs out, your device sounds an alarm, displays the timer note, and flashes its lights.

- Press any key during the alarm to stop the timer.
- After 30 seconds the timer alert expires automatically.

Change the time

After you have set the timer, you can change the time.

1. In the standby mode, select *Menu > Organizer > Countdown timer > Change time*.

2. Enter the new time, and select *OK*.

3. Leave the note as it was, or enter a new note, and select *OK*.

Stop the timer

After you have set the timer, you can stop the timer at any time.

In the standby mode, select *Menu > Organizer > Countdown timer > Stop timer*.

■ Stopwatch

Your device has a stopwatch that displays time in hours, minutes, seconds, and fractions of a second in hh:mm:ss.s format.

Using the stopwatch or allowing it to run in the background when using other features increases the demand on battery power and reduces the battery life.

Measure time

1. In the standby mode, select *Menu > Organizer > Stopwatch > Split timing* or *Lap timing > Start*. The running time is displayed on the screen.
2. Select *Split* to note the lapsed time.
The timer continues to run. The split time appears below the running time. If you split the time more than once, the new measured time appears at the beginning of the list. Scroll to see previous measured times.
3. Select *Lap* to note the lap time.
The clock stops, then starts immediately from zero. The lap time appears below the running time. If you take more than one lap time, the new measured time appears at the beginning of the list. You can scroll to see previous measured times. When you select *Stop*, the total time appears at the top.
4. Select *Stop* to end the timing. The total time is displayed on the screen.
5. Select *Options > Save* to save the split or lap time.
6. Enter a name for the measurement, and select *OK*. If you do not enter a name, the total time is used as the default title for the time.

Operation note

If you press the **end** key and return to standby mode, the clock continues to run in the background and  appears in the upper left corner of the screen.

To return to the stopwatch screens:

1. In the standby mode, select *Menu > Organizer > Stopwatch > Continue*.
2. To stop the clock, select *Stop*.

Options

The following options are available with the stopwatch: *Continue*, *Show last time*, *Split timing*, *Lap timing*, *View times*, and *Delete times*.

13. PC Connectivity

You can synchronize contacts and calendar between your device and a compatible PC. Some of the features available in PC Suite are carrier-dependent.

Check www.nokiausa.com/support or your local Nokia Web site for the latest version of this guide, additional information, downloads, and services related to your Nokia product.



Important: Only install and use applications and other software from sources that offer adequate security and protection against harmful software.

14. Enhancements

Check the model number of any charger before use with this device. This device is intended for use when supplied with power from an approved charger only.



Warning: Use only batteries, chargers, and enhancements approved by Nokia for use with this particular model. The use of any other types may invalidate any approval or warranty, and may be dangerous.

For availability of approved enhancements, please check with your dealer. When you disconnect the power cord of any enhancement, grasp and pull the plug, not the cord.

A few practical rules about accessories and enhancements

- Keep all accessories and enhancements out of the reach of small children.
- When you disconnect the power cord of any accessory or enhancement, grasp and pull the plug, not the cord.
- Check regularly that enhancements installed in a vehicle are mounted and are operating properly.
- Installation of any complex car enhancements must be made by qualified personnel only.

Power

- Standard 1150 mAh Li-Ion Battery
- Standard Travel Charger
- Vehicle Power Charger

Audio

- Headset
- FM Radio Headset

Car

- Handsfree Car Kit
- Headrest Handsfree

15. Battery information

■ Charging and discharging

Your device is powered by a rechargeable battery. The full performance of a new battery is achieved only after two or three complete charge and discharge cycles. The battery can be charged and discharged hundreds of times but it will eventually wear out. When the talk and standby times are noticeably shorter than normal, replace the battery. Use only Nokia approved batteries, and recharge your battery only with Nokia approved chargers designated for this device.

If a replacement battery is being used for the first time or if the battery has not been used for a prolonged period, it may be necessary to connect the charger then disconnect and reconnect it to begin charging the battery.

Unplug the charger from the electrical plug and the device when not in use. Do not leave the battery connected to a charger. Overcharging may shorten its lifetime. If left unused, a fully charged battery will lose its charge over time.

If the battery is completely discharged, it may take a few minutes before the charging indicator appears on the display or before any calls can be made.

To prolong battery life of NiMh batteries, discharge the battery from time to time by leaving your device switched on until it turns itself off. Do not attempt to discharge the battery by any other means.

Use the battery only for its intended purpose. Never use any charger or battery that is damaged.

Do not short-circuit the battery. Accidental short-circuiting can occur when a metallic object such as a coin, clip, or pen causes direct connection of the positive (+) and negative (-) terminals of the battery. (These look like metal strips on the battery.) This might happen, for example, when you carry a spare battery in your pocket or purse. Short-circuiting the terminals may damage the battery or the connecting object.

Leaving the battery in hot or cold places, such as in a closed car in summer or winter conditions, will reduce the capacity and lifetime of the battery. Always try to keep the battery between 15°C and 25°C (59°F and 77°F). A device with a hot or cold battery may not work temporarily, even when the battery is fully charged. Battery performance is particularly limited in temperatures well below freezing.

Do not dispose of batteries in a fire as they may explode. Batteries may also explode if damaged. Dispose of batteries according to local regulations. Please recycle when possible. Do not dispose batteries as household waste.

■ Nokia battery authentication guidelines


Always use original Nokia batteries for your safety. To check that you are getting an original Nokia battery, purchase it from an authorized Nokia dealer, look for the Nokia Original Enhancements logo on the packaging and inspect the hologram label using the following steps:

Successful completion of the four steps is not a total assurance of the authenticity of the battery. If you have any reason to believe that your battery is not an authentic original Nokia battery, you should refrain from using it and take it to the nearest authorized Nokia service point or dealer for assistance. Your authorized Nokia service point or dealer will inspect the battery for authenticity. If authenticity cannot be verified, return the battery to the place of purchase.


Authenticate hologram



1. When looking at the hologram on the label, you should see the Nokia connecting hands symbol from one angle and the Nokia Original Enhancements logo when looking from another angle.

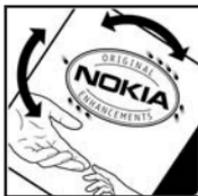

2. When you angle the hologram left, right, down, and up, you should see 1, 2, 3, and 4 dots on each side respectively.

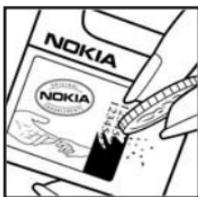

3. Scratch the side of the label to reveal a 20-digit code, for example 12345678919876543210. Turn the battery so that the numbers are facing upwards. The 20-digit code reads starting from the number at the top row followed by the bottom row. Confirm that the 20-digit code is valid by following the instructions at www.nokia.com/batterycheck.

What if your battery is not authentic?

If you cannot confirm that your Nokia battery with the hologram on the label is an authentic Nokia battery, please do not use the battery. Take it to the nearest authorized Nokia service point or dealer for assistance. The use of a battery that is not approved by the manufacturer may be dangerous and may result in poor performance and damage to your device and its enhancements. It may also invalidate any approval or warranty applying to the device.

To find out more about original Nokia batteries, visit www.nokia.com/battery.

Care and maintenance

Your device is a product of superior design and craftsmanship and should be treated with care. The suggestions below will help you protect your warranty coverage.

- Keep the device dry. Precipitation, humidity and all types of liquids or moisture can contain minerals that will corrode electronic circuits. If your device does get wet, remove the battery and allow the device to dry completely before replacing it.
- Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
- Do not store the device in hot areas. High temperatures can shorten the life of electronic devices, damage batteries, and warp or melt certain plastics.
- Do not store the device in cold areas. When the device returns to its normal temperature, moisture can form inside the device and damage electronic circuit boards.
- Do not attempt to open the device other than as instructed in this guide.
- Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device.
- Do not paint the device. Paint can clog the moving parts and prevent proper operation.
- Use a soft, clean, dry cloth to clean any lenses (such as camera, proximity sensor, and light sensor lenses).
- Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the device and may violate regulations governing radio devices.
- Use chargers indoors.
- Always create a backup of data you want to keep, such as contacts and calendar notes, before sending your device to a service facility.

All of the above suggestions apply equally to your device, battery, charger, or any enhancement. If any device is not working properly, take it to the nearest authorized service facility for service.

Additional safety information

■ Operating environment

Remember to follow any special regulations in force in any area and always switch off your device when its use is prohibited or when it may cause interference or danger. Use the device only in its normal operating positions. This device meets RF exposure guidelines when used either in the normal use position against the ear or when positioned at least 2.2 centimeters (7/8 inches) away from the body. When a carry case, belt clip or holder is used for body-worn operation, it should not contain metal and should position the device the above-stated distance from your body.

In order to transmit data files or messages, this device requires a good quality connection to the network. In some cases, transmission of data files or messages may be delayed until such a connection is available. Ensure the above separation distance instructions are followed until the transmission is completed.

■ Medical devices

Operation of any radio transmitting equipment, including wireless phones, may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions. Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15.3 centimeters (6 inches) be maintained between a wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers should:

- Always keep the device more than 15.3 centimeters (6 inches) from the pacemaker when the device is switched on.
- Do not carry the device in a breast pocket.
- Hold the device to the ear opposite the pacemaker to minimize the potential for interference.

If you suspect interference, switch off your device, and move the device away.

Hearing aids

Some digital wireless devices may interfere with some hearing aids. If interference occurs, consult your service provider.

■ Vehicles

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles such as electronic fuel injection systems, electronic antiskid (antilock) braking systems, electronic speed control systems, air bag systems. For more information, check with the manufacturer or its representative of your vehicle or any equipment that has been added.

Only qualified personnel should service the device, or install the device in a vehicle. Faulty installation or service may be dangerous and may invalidate any warranty that may apply to the device. Check regularly that all wireless device equipment in your vehicle is mounted and operating properly. Do not store or carry flammable liquids, gases, or explosive materials in the same compartment as the device, its parts, or enhancements. For vehicles equipped with an air bag, remember that air bags inflate with great force. Do not place objects, including installed or portable wireless equipment in the area over the air bag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

Using your device while flying in aircraft is prohibited. Switch off your device before boarding an aircraft. The use of wireless teledevices in an aircraft may be dangerous to the operation of the aircraft, disrupt the wireless telephone network, and may be illegal.

■ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere and obey all signs and instructions. Potentially explosive atmospheres include areas where you would normally be advised to turn off your vehicle engine. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Switch off the device at refuelling points such as near gas pumps at service stations. Observe restrictions on the use of radio equipment in fuel depots, storage, and distribution areas; chemical plants; or where blasting operations are in progress. Areas with a potentially explosive atmosphere are often but not always clearly marked. They include below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), and areas where the air contains chemicals or particles such as grain, dust, or metal powders.

■ Emergency calls



Important: Wireless phones, including this device, operate using radio signals, wireless networks, landline networks, and user-programed functions. Because of this, connections in all conditions cannot be guaranteed. You should never rely solely on any wireless phone for essential communications like medical emergencies.

To make an emergency call:

1. If the phone is not on, switch it on. Check for adequate signal strength.
2. Press the end key as many times as needed to clear the display and ready the phone for calls.
3. Enter the official emergency number for your present location. Emergency numbers vary by location.
4. Press the send key.

If certain features are in use, you may first need to turn those features off before you can make an emergency call. Consult this guide or your service provider for more information.

When making an emergency call, give all the necessary information as accurately as possible. Your wireless device may be the only means of communication at the scene of an accident. Do not end the call until given permission to do so.

■ Certification information (SAR)

This mobile device meets guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all person, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit set by ICNIRP is 2.0 watts/kilogram (W/kg) averaged over 10 grams of tissue. Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The actual SAR level of an operating device can be well below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value when tested according to international testing procedures for use at the ear is 0.72 W/kg.

Use of device accessories and enhancements may result in different SAR values. SAR values may vary depending on national reporting and testing requirements and the network band. Additional SAR information may be provided under product information at www.nokia.com.

Your mobile device is also designed to meet the requirements for exposure to radio waves established by the Federal Communications Commission (USA) and Industry Canada. These requirements set a SAR limit of 1.6 W/kg averaged over one gram of tissue. The highest SAR value reported under this standard during product certification for use at the ear is 1.21 W/kg and when properly worn on the body is 1.17 W/kg.

Information about this device can be found on the FCC's website at <http://www.fcc.gov/oet/fccid> by searching the equipment authorization system using FCC ID: QMNRH-71.

■ Technical information

Dimensions—Width 49.9 mm (1.96 inches); length 108.3 mm (4.26 in); depth 23.2 mm (0.91 in)

Weight—3.84 oz (108.8 g) with BL-6C Li-Ion Battery

Volume—5.95 in³ (97.5cm³)

Frequency range (Tx)—PCS 1851.25–1908.75 MHz;

Cellular 824.70–848.37 MHz

Frequency range (Rx)—PCS 1931.25–1988.75 MHz;

Cellular 869.70–893.37 MHz

GPS frequency—1575.42 MHz

■ Battery information

This section provides information about battery charging time with the Travel Charger (ACP-12) talk-times, and standby times. Be aware that the information in this section is subject to change. For more information, contact your service provider.

Charging time

The following charging time is approximate with the BL-6C 1150 mAh Li-Ion battery:

Travel Charger (ACP-12): up to 2 hours

Talk and standby times

Operation times are estimates only and depend on signal strength, phone use, network conditions, features used, battery age and condition (including charging habits), temperatures to which the battery is exposed, and many other factors.

Talk time: up to 4 hours cellular and 4.4 hours PCS

Standby time: up to 13 days

Index

NUMERICS

1-touch dialing 23

A

activate phone lock 48
Add-ins 33
alarm clock 58
allowed number when
phone locked — add 48
antenna 14
anykey answer 38
automate voicemail 33
automatic redial 39
automatic update of service 39
auto-update 43

B

back cover
removing 15
replacing 16
backlight timeout 45
banner 44
battery
charging 16
charging time 73
removing 15
replacing 15
talk and standby times 73
battery information 73
business cards 26

C

calculator 61
calendar 59
call duration 36
call forwarding 51
call log 35
caller groups 23
calling cards 39

calls
answering 18
in-call options 19
making 17
certification information (SAR) 72
charger
connecting 16
color schemes 44
contacts list 22
add 22
delete 25
edit 24
send 26
view 26
countdown timer 61
customer care 9

D

deactivate phone lock 48
dialing codes 34
display language 41
display settings 44
distribution list 29

E

emergency calls 71
with keypad locked 41
enhancement settings 46
handsfree 46
headset 46
music stand 47
TTY/TDD 46
enhancements 64
ESN 8

F

FCC information 72
feature codes 51
flashlight 11

G

gallery 53
games 54

H

handsfree 46
headset 16, 46
help 8
help text 13, 42

I

indicators and icons 11

K

Keyguard 19
 automatic 41

L

languages 41
lock code 13, 49
loudspeaker 18

M

message folders 31
messages
 delete 31
 text messages 28
music stand 47

O

organizer 58

P

phone lock
 change lock code 49
phone settings 41
predictive text 20
profiles 37

Q

quick keys 11

R

restore factory settings 52
restrict calls 49

S

safety 5
screen saver 44
scrolling 12
security code 13
security feature 13
security features 13
security settings 48
send own caller ID 52
set
 date 43
 time 42
settings 38
shortcuts 13
standard mode 20
start screen 11
stopwatch 62

T

talk and standby times 73
technical information 73
text entry 20
 predictive text 20
 standard 20
text messages 28
time and date settings 42
timed profiles 37
tone settings 45, 50
touch tones 41
TTY/TDD 46
turn phone off 16
turn phone on 16

V

view
 call duration 36
 call times 36
 dialed numbers 35
 missed calls 35

I n d e x

- own phone number 52
- received calls 35
- saved messages 31
- voice 55
- voice commands 56
- voice dialing 55
- Voice mail – connect to 33
- voice privacy 49
- voice recorder 57

- volume
 - adjusting 18
 - using the loudspeaker 18

W

- wallpaper 44
- welcome note 42

NOTES

NOTES

NOTES

NOTES