

**Confidential**

# developer's guide

## TM-U230

|             |     |
|-------------|-----|
| Copied Date | , , |
| Copied by   |     |



**EPSON**

English

401347601

**Confidential**

## CONFIDENTIALITY AGREEMENT

BY USING THIS DOCUMENT, YOU AGREE TO ABIDE BY THE TERMS OF THIS AGREEMENT. **PLEASE RETURN THIS DOCUMENT IMMEDIATELY IF YOU DO NOT AGREE TO THESE TERMS.**

1. This document contains confidential, proprietary information of Seiko Epson Corporation or its affiliates. You must keep such information confidential. If the user is a business entity or organization, you must limit disclosure to those of your employees, agents and contractors who have a need to know and who are also bound by obligations of confidentiality.
2. On the earlier of (a) termination of your relationship with Seiko Epson, or (b) Seiko Epson's request, you must stop using the confidential information. You must then return or destroy the information, as directed by Seiko Epson.
3. If a court, arbitrator, government agency or the like orders you to disclose any confidential information, you must immediately notify Seiko Epson. You agree to give Seiko Epson reasonable cooperation and assistance in resisting disclosure.
4. You may use confidential information only for the purpose of facilitating authorized sales and service of, or developing software and similar products for authorized use with, EPSON products. Any other use requires the prior written consent of Seiko Epson.
5. THE INFORMATION IN THIS DOCUMENT IS PROVIDED "AS IS," WITHOUT WARRANTY OF ANY KIND, INCLUDING ANY WARRANTY OF TITLE OR NON-INFRINGEMENT. Seiko Epson has no liability for loss or damage arising from or relating to your use of or reliance on the information in the document.
6. You may not reproduce, store or transmit the confidential information in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise) without the prior written permission of Seiko Epson.
7. Your obligations under this Agreement are in addition to any other legal obligations. Seiko Epson does not waive any right under this Agreement by failing to exercise it. The laws of Japan apply to this Agreement.

## CAUTIONS

- This document shall apply only to the product(s) identified herein.
- No part of this document may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Seiko Epson Corporation.
- The contents of this document are subject to change without notice. Please contact us for the latest information.
- While every precaution has been taken in the preparation of this document, Seiko Epson Corporation assumes no responsibility for errors or omissions.
- Neither is any liability assumed for damages resulting from the use of the information contained herein.
- Neither Seiko Epson Corporation nor its affiliates shall be liable to the purchaser of this product or third parties for damages, losses, costs, or expenses incurred by the purchaser or third parties as a result of: accident, misuse, or abuse of this product or unauthorized modifications, repairs, or alterations to this product, or (excluding the U.S.) failure to strictly comply with Seiko Epson Corporation's operating and maintenance instructions.
- Seiko Epson Corporation shall not be liable against any damages or problems arising from the use of any options or any consumable products other than those designated as Original EPSON Products or EPSON Approved Products by Seiko Epson Corporation.

## TRADEMARKS

EPSON® and ESC/POS® are registered trademarks of Seiko Epson Corporation.

General Notice: Other product and company names used herein are for identification purposes only and may be trademarks of their respective companies.

***Revision Information***

| <b>Revision</b> | <b>Page</b> | <b>Altered Items and Contents</b>           |
|-----------------|-------------|---|
| Rev. A          | All         |   |
| Rev. B          | 1-6         | Ethernet interface specification is added.  |
|                 | 1-18~1-20   | Ethernet interface specification is added.  |
|                 | 2-2~2-4     | Description of Waterproof is added.         |
|                 | 3-1,3-3     | The internal buzzer specification is added. |
|                 | 4-7~4-10    | Description of DirectIO in OPOS is added    |
|                 | AppendixC   | Newly added.                                |

# Confidential

## Key to Symbols

The following symbols are used in the documentation for this product. See the specific warnings and cautions at appropriate points throughout this guide.



### **WARNING:**

*Warnings must be followed carefully to avoid serious bodily injury.*



### **CAUTION:**

*Cautions must be observed to avoid minor injury to yourself, damage to your equipment, or loss of data.*



### **Note:**

*Notes have important information and useful tips on the operation of the product.*

## Safety Precautions

This section presents important information to ensure safe and effective use of this product. Please read this section carefully and store it in an accessible location.



### **WARNING:**

- ❑ Turn off the power switch immediately and unplug the power cord from the electrical outlet if the TM-U230 produces smoke, a strange odor, or unusual noise. Continued use may lead to fire or electric shock.
- ❑ Do not modify the printer or perform any disassembly operation not described in this manual. Doing so could result in a fire or shock hazard.
- ❑ Use only the designated power supply. Use of a different power supply could cause a fire or shock hazard.
- ❑ Never insert or disconnect plugs with wet hands. Doing so may cause a serious shock.
- ❑ Never drop or push objects into the product through openings. This could cause a fire or shock.
- ❑ If the printer is exposed to water or other liquid, turn off the POWER button and disconnect the power cord immediately. Continued use under these conditions could cause a fire or shock hazard.
- ❑ Do not connect the power cord to an overloaded wall outlet. This may cause a fire hazard. Connect the printer directly to a wall outlet.
- ❑ Handle the power cord with care. Incorrect handling may lead to fire or shock.

- Do not modify the power cord.
- Do not place heavy objects on the power cord.
- Do not bend, twist, or pull the power cord excessively.
- Do not route the power cord near heaters.
- Remove any dirt or dust from the power plug before plugging it in.
- Be sure to fully insert the power plug.

** CAUTION:**

- ❑ All cables are to be connected only as described in the manual. Incorrect connection could cause damage or a fire hazard.
- ❑ Be sure to set this product on a firm, stable, horizontal surface. The product may break or cause injury if it falls.
- ❑ Do not install the printer in extremely humid or dusty locations. Operation under such conditions could damage the printer or cause a fire or shock hazard.
- ❑ Do not stand on the printer or place heavy objects on it. The printer could fall or collapse, causing breakage and possible injury.
- ❑ For added protection of the printer, disconnect the power plug from the wall outlet when the printer is not to be used for an extended period of time.
- ❑ Be sure not to touch the print head or motors when you remove paper jammed in the printer. Wait until the print head and motors have cooled down before removing jammed paper. When the printer has been used for an extended period, the print head and the motors are very hot and could cause burns.

***Precautions in handling the fine coating of the case  
(only for fine coating case model)***

A fine coating is used for the external surface of the plastic case of the printer, which makes wiping and removing kitchen stains easy; however, you should note the following when cleaning the surface in order to preserve the quality of the coating (the metal plate and the inside of the case do not have the fine coating):

- ❑ Do not scrub the surface with a hard object. Otherwise, the case will be scratched and harder to clean.
- ❑ Do not use a cleanser that includes polishing materials such as grains of glass, metal, or ceramics. Otherwise, the case will be scratched and harder to clean.
- ❑ Never use disinfectant, bleach, alcohol, benzine, thinner, chlorine solvent, or ketone solvent. Otherwise, the case will be harder to clean, and the case may be seriously harmed or even deformed and its color may be changed.
- ❑ The label may come off of the fine coating of the case if harsh cleaning methods are used.

# Confidential

## ***Moduler Connector***

Use the moduler connector specifically designed for the cash drawer for this product. Do not connect a telephone line to the drawer kick-out connector.

## ***About This Guide***

This guide is intended to provide all information necessary for system planning, design, installation and application of the TM-U230 for designers and developers of POS systems.

## ***Related Software and Documents***

| <b>Software/document name</b>         | <b>Description</b>   |
|---------------------------------------|--|
| TM-U230 User's Manual                 | Provides instructions for operators of POS systems in which the TM-U230 is installed so that the operators can use the TM-U230 safely and correctly. |
| TM-U230 Service Manual                | Provides the information on printer maintenance and repair.  |
| ESC/POS Application Programming Guide | Provides ESC/POS commands descriptions   |

**developer's guide****TM-U230**

|  |     |
|--|-----|
| Revision Information .....   | i   |
| Key to Symbols .....   | ii  |
| Safety Precautions .....   | ii  |
| Precautions in handling the fine coating of the case<br>(only for fine coating case model) ..... | iii |
| Moduler Connector .....  | iv  |
| About This Guide .....   | iv  |
| Related Software and Documents .....   | iv  |

**Chapter 1 Installation**

|  |      |
|--|------|
| Installation and Positioning of TM-U230 .....  | 1-1  |
| Precautions in Handling the Fine Coating Case<br>(only for Fine Coating Case model) .....  | 1-1  |
| Selecting a Place of Installation .....  | 1-1  |
| Environment Specifications .....   | 1-1  |
| External Dimensions .....  | 1-2  |
| Dip Switch Settings .....  | 1-3  |
| Settings for Horizontal Installation .....   | 1-7  |
| Changing the Location of the Rubber Feet .....   | 1-7  |
| Changing the Orientation of Near End Sensor .....  | 1-8  |
| Attaching Switch Panel for Horizontal Installation .....                                   | 1-9  |
| Attaching the Power Supply Box<br>(only for models with exclusive power supply unit) ..... | 1-10 |
| Assembling the Power Box .....   | 1-10 |
| Vertical Installation .....  | 1-11 |
| Horizontal Installation and Wall Mounting .....  | 1-12 |
| Wall Mounting .....  | 1-13 |
| Notes on Wall Mounting .....   | 1-13 |
| Installation .....   | 1-13 |
| Connecting a Host PC .....   | 1-16 |
| Drawer Kick-Out Connector (Marked DK) .....  | 1-21 |

**Chapter 2 Handling**

|  |      |
|--|------|
| Important Safety Information .....   | 2-1  |
| Precautions in handling the fine coating of the case<br>(only for Fine Coating Case model) ..... | 2-2  |
| Waterproof .....   | 2-2  |
| Replacing roll paper .....   | 2-5  |
| Replacing the ribbon cassette .....  | 2-7  |
| Removing paper jams .....  | 2-9  |
| Installing the power button cover .....  | 2-13 |

**Chapter 3 Compatibility**

|                                  |     |
|----------------------------------|-----|
| Internal Buzzer .....            | 3-1 |
| Receive Buffer .....             | 3-3 |
| Page 254, 255 (Space Page) ..... | 3-4 |

**Chapter 4 Programming Samples**

|   |     |
|---|-----|
| Saving Space for Receipt Printing ..... | 4-1 |
| GS V (Function B) .....                 | 4-1 |

# Confidential

|                                      |     |
|--------------------------------------|-----|
| GS V (Function C) .....              | 4-2 |
| Notes on Using GS V Function C ..... | 4-5 |
| The usage of DirectIO in OPOS .....  | 4-7 |
| Control of The Buzzer .....          | 4-8 |

## Appendix A **Specifications**

|                                      |     |
|--------------------------------------|-----|
| Printing Specifications .....        | A-1 |
| Character Specifications .....       | A-1 |
| Paper Specifications .....           | A-2 |
| Autocutter Specifications .....      | A-2 |
| Printing Area .....                  | A-3 |
| Electrical Specifications .....      | A-3 |
| Environmental Specifications .....   | A-3 |
| External Appearance .....            | A-5 |
| Drawer Kick-out Connector .....      | A-8 |
| Drawer Kick-out Specifications ..... | A-8 |
| Limitations .....                    | A-8 |
| Pin Assignment .....                 | A-9 |
| Drawer Circuitry .....               | A-9 |

## Chapter 1

# Installation

---

### **Installation and Positioning of TM-U230**

#### **Precautions in Handling the Fine Coating Case (only for Fine Coating Case model)**

This printer is housed in a plastic case (\*) with a fine coating; simple cleaning is enough to enable dirt to come off easily so that the exterior of the printer remains in good condition. Like plastic cases, handle the fine coating with care as described below.

(\*)Fine coating is not applied to the installation surface of the metal plate, the power supply box and the inside of the case.

- Do not scratch the surface with hard objects; otherwise the case may become damaged and dirt may become difficult to remove.
- Do not use any type of abrasive agent (glass, metal, ceramic, etc.) to clean the case; otherwise the surface of the case may become damaged and dirt may become difficult to remove.
- Never clean the case with disinfectant, bleach, alcohol, benzene, thinner, chlorine, or ketone; otherwise the dirt may become difficult to remove. Also, they may cause the case to become discolored, dissolved, or deformed.
- Label may come off of the fine coating of the case.

#### **Selecting a Place of Installation**

This printer can be installed vertically (standard installation) so that the paper exit faces the front or horizontally so that the paper exit faces upwards. With the optional wall mounting bracket (Model No: WH-10) the printer can be wall-mounted.



**Note:**

*Since vibrations are generated during paper cutting, take suitable measures to secure the printer.*

- ❑ Installation on a table (vertical or horizontal installation)
  - Regardless of installation method chosen, the tilt of surface selected must be 15° or less.
  - Attach the supplied switch panel sheet for horizontal installation when the printer is to be installed horizontally.
  - Adjust the N.E detector and attach the rubber feet as required by the chosen method of installation.

#### **Environment Specifications**

See the Environment Specifications section in Appendix A.

# Confidential

## External Dimensions

See the External Appearance section in Appendix A.



Vertical installation



Horizontal installation

### *Desk installation*

#### ❑ Wall mounting

- Use the optional wall mounting bracket (Model Name: WH-10) when the printer is to be wall mounted.
- When the printer is wall mounted, adjust the N.E. detector in the same way as for vertical installation.
- The power supply box can be attached below the printer if necessary.




*Wall-mounted installation*

***Dip Switch Settings***

Make DIP switch settings according to the following procedures.

1. Remove the circuit board plate.

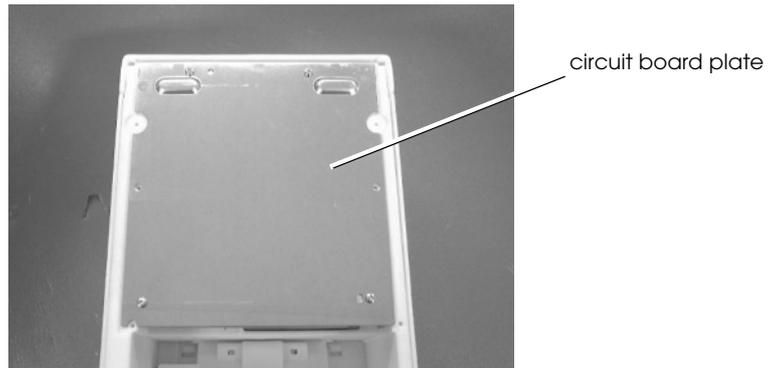

2. Set the DIP switches.

# Confidential

## Serial Interface

### DIP Switch 1

| Switch No. | Function                | On                  | Off                            | Default |
|------------|-------------------------|---------------------|--------------------------------|---------|
| 1          | Data receive error      | Ignored             | Print "?"                      | Off     |
| 2          | Receive buffer capacity | 1KB                 | 16KB                           | Off     |
| 3          | Handshaking             | XON/XOFF            | DTR/DSR                        | Off     |
| 4          | Word length             | 7 bit               | 8 bit                          | Off     |
| 5          | Parity check            | Yes                 | No                             | Off     |
| 6          | Parity selection        | Even                | Odd                            | Off     |
| 7          | Baud rate selection     | 4800 bps            | 9600 bps                       | Off     |
| 8          | BUSY condition          | Receive buffer-full | Offline<br>Receive buffer-full | Off     |

### DIP Switch 2

| Switch No. | Function   | On             | Off                    | Default |
|------------|--|----------------|------------------------|---------|
| 1          | Selects number of characters per line (cpl)<br>(7 × 9 font/9 × 9 font) | 42 cpl//35 cpl | 40 cpl/33 cpl          | Off     |
| 2          | For internal use only (*1)<br>(autocutter)                             | Enabled        | Disabled               | On      |
| 3          | Pin 6 reset signal   | Used           | Not used               | Off     |
| 4          | Pin 25 reset signal  | Used           | Not used               | Off     |
| 5          | PAPER OUT LED blinking pattern   | Blinks         | Lights on              | On      |
| 6          | For internal use only (*1)<br>(Flash memory rewriting)                 | Enabled        | Disabled               | off     |
| 7          | For internal use only (*1)<br>(Interface synchronization)              | Asynchronous   | Synchronous with clock | Off     |
| 8          | internal buzzer  | Disabled       | Enabled                | Off     |

\*1: Do not change the settings of DIP switches 2-2, 2-6, and 2-7.

**Parallel Interface***DIP Switch 1*

| Switch No. | Function       | On                  | Off                            | Default |
|------------|----------------|---------------------|--------------------------------|---------|
| 1          | Auto line feed | Enabled             | Disabled                       | Off     |
| 2          | Receive buffer | 1KB                 | 16KB                           | Off     |
| 3 - 7      | Undefined      | --                  | --                             | Off     |
| 8          | Busy condition | Receive buffer-full | Offline<br>Receive buffer-full | Off     |

*DIP Switch 2*

| Switch No. | Function   | On             | Off                    | Default |
|------------|--|----------------|------------------------|---------|
| 1          | Selects number of characters per line (cpl)<br>(7 × 9 font/9 × 9 font) | 42 cpl//35 cpl | 40 cpl/33 cpl          | Off     |
| 2          | For internal use only (*1)<br>(autocutter)                             | Enabled        | Disabled               | On      |
| 3          | Undefined  | --             | --                     | Off     |
| 4          | Pin 31 reset signal  | Used           | Not used               | On      |
| 5          | PAPER OUT LED blinking pattern   | Blinks         | Lights on              | On      |
| 6          | For internal use only (*1)<br>(Flash memory rewriting)                 | Enabled        | Disabled               | off     |
| 7          | For internal use only (*1)<br>(Interface synchronization)              | Asynchronous   | Synchronous with clock | Off     |
| 8          | Undefined  | --             | --                     | Off     |

\*1: Do not change the settings of DIP switches 2-2, 2-6, and 2-7.

# Confidential

## Ethernet Interface

### DIP Switch 1

| Switch No. | Function       | On                  | Off                            | Default |
|------------|----------------|---------------------|--------------------------------|---------|
| 1          | Auto line feed | Enabled             | Disabled                       | Off     |
| 2          | Receive buffer | 1KB                 | 16KB                           | Off     |
| 3 - 7      | Undefined      | --                  | --                             | Off     |
| 8          | Busy condition | Receive buffer-full | Offline<br>Receive buffer-full | Off     |

### DIP Switch 2

| Switch No. | Function   | On             | Off                    | Default |
|------------|--|----------------|------------------------|---------|
| 1          | Selects number of characters per line (cpl)<br>(7 × 9 font/9 × 9 font) | 42 cpl//35 cpl | 40 cpl/33 cpl          | Off     |
| 2          | For internal use only (*1)<br>(autocutter)                             | Enabled        | Disabled               | On      |
| 3          | Undefined  | --             | --                     | Off     |
| 4          | Pin 31 reset signal  | Used           | Not used               | On      |
| 5          | PAPER OUT LED blinking pattern   | Blinks         | Lights on              | On      |
| 6          | For internal use only (*1)<br>(Flash memory rewriting)                 | Enabled        | Disabled               | off     |
| 7          | For internal use only (*1)<br>(Interface synchronization)              | --             | Synchronous with clock | Off     |
| 8          | Undefined  | --             | --                     | Off     |

\*1: Do not change the settings of DIP switches 2-2, 2-6, and 2-7.

***Settings for Horizontal Installation***


Perform the following procedures when the printer is to be used in a horizontal installation.

***Changing the Location of the Rubber Feet***

Remove the rubber feet from the bottom of the printer and attach them to the back of the printer.



Remove

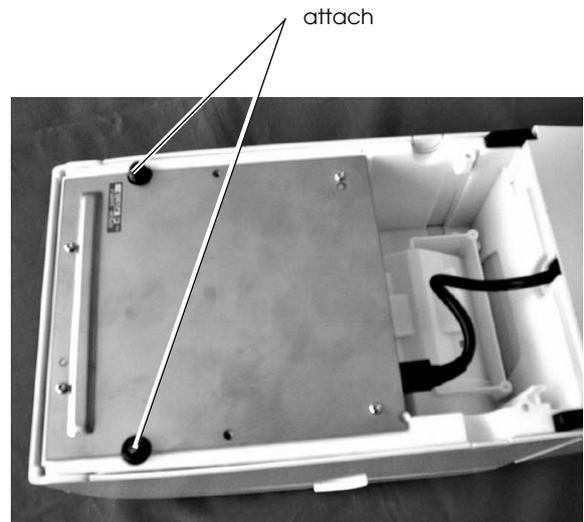


attach

# Confidential

## *Changing the Orientation of Near End Sensor*

Perform the following procedures to change the orientation of the near end sensor.

1. Place the printer horizontally and open the roll paper cover.
2. Use a coin to loosen the near end adjustment screw.
3. Turn the protrusion on the near end holder to change the position of the near end lever.
4. Tighten the near end adjustment screw, check that the near end sensor lever operates normally and close roll paper cover.

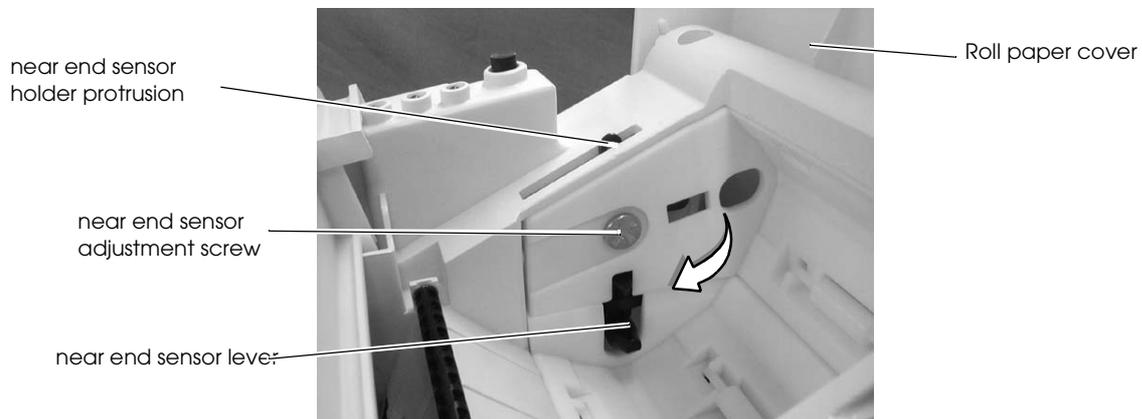

*Changing the orientation of Near end sensor*

**Attaching Switch Panel for Horizontal Installation**

1. Clean the switch panel attached to roll paper cover.

**Note:**

*Do not touch the switch panel surface after cleaning. Touching this surface may lower the strength of the adhesive.*

2. Remove the seal covering the adhesive surface of the switch panel for horizontal installation.

**Note:**

*Do not touch the adhesive surface of the switch panel for horizontal installation. Touching this surface may lower the strength of the adhesive.*

3. Attach the switch panel for horizontal installation on top of the switch panel attached to the roll paper cover. Press down the switch panel with sufficient force equally across the surface of the panel.

Attach the switch panel for horizontal installation on top of the existing switch panel.



Roll paper cover

*Switch panel attachment*

## Confidential

### **Attaching the Power Supply Box (only for models with exclusive power supply unit)**

The location of the power supply box varies with the method of installation.

#### **⚠ WARNING:**

*Use only AC adapter designated by EPSON. Using a non-standard power supply may cause a fire or shock hazard.*

*When you are using an EPSON AC power supply or the equivalent, immediately turn off the printer and disconnect the power plug when you notice an abnormality.*

#### **⚠ CAUTION:**

*Always disconnect the power plug from the wall outlet when connecting or disconnecting the AC adapter. Otherwise you may damage the AC adapter or the printer.*


*Make sure that the rated voltage of the AC adapter matches the voltage of the wall outlet before connecting the AC adapter. Do not plug in the AC adapter if the voltages do not match. Otherwise you may damage the AC adapter or the printer.*

#### **📎 Note:**

*To remove the DC cable connector, make sure the power supply power cord is unplugged; then grasp the connector at the arrow and pull it straight out.*

### **Assembling the Power Box**

1. Place the AC adapter in the upper adapter cover. Bundle up the DC power supply cable. Be sure that the power receptacle is against the rectangular hole in the power supply box.

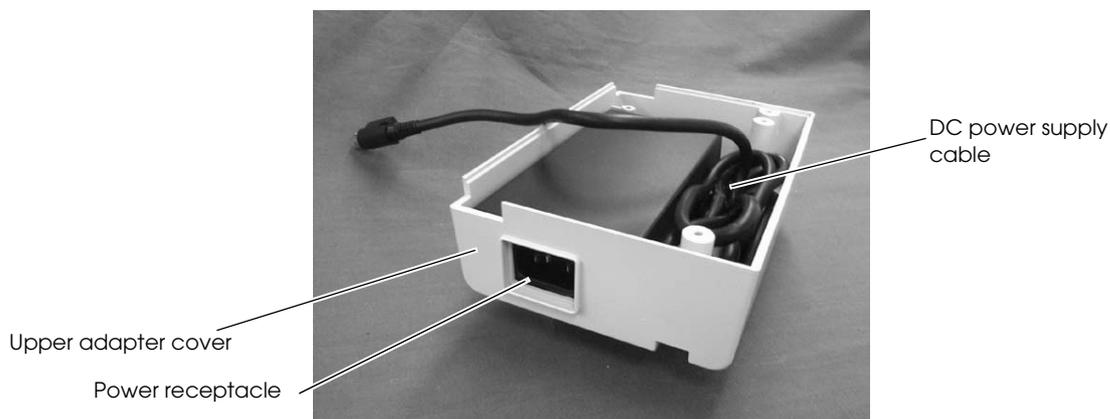


*Power supply box assembly (1)*


2. Put on the lower adapter cover with the cable through the notch in the lid and tighten the screws. In doing so, pull out the DC power supply cable from the DC power supply cable exit in the lower adapter cover so that around 15 cm of the cable protrudes from the cover.
3. Secure the covers with the screws packed with the printer (C.P.T-B Screw, 3 × 12, F/Zn).

Pull out around 15 cm  
of the power cable

Screws

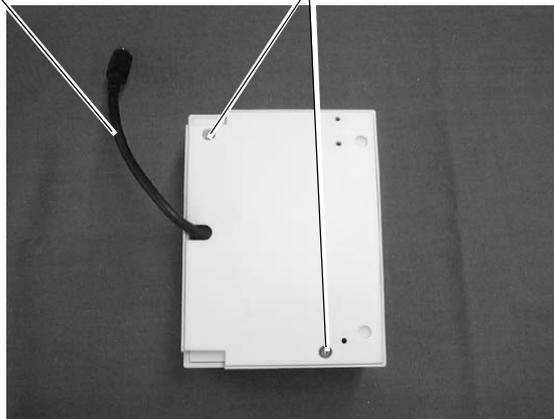

Lower adapter  
cover

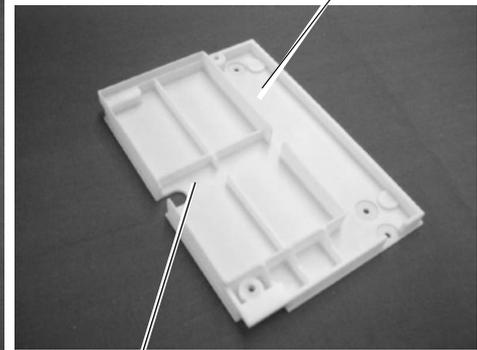

notch

*Power supply box assembly (2)*

### **Vertical Installation**


1. Check that the printer POWER switch is off and that the power supply cord of the AC adapter is not plugged into the wall outlet.
2. Connect DC power supply cable of the AC adapter to the DC connector on the printer.

 **Note:**

Place the cables so that they go through the holes numbered 1 in the illustration below. If there are many cables used, use the other holes numbered 2 (you need to break that parts).

## Confidential

3. Attach the power supply box to the rear of the printer, aligning the box inside the rubber pads and secure with two screws packed with the printer (C.P.T-B Screw, 3 × 14, F/Ni).

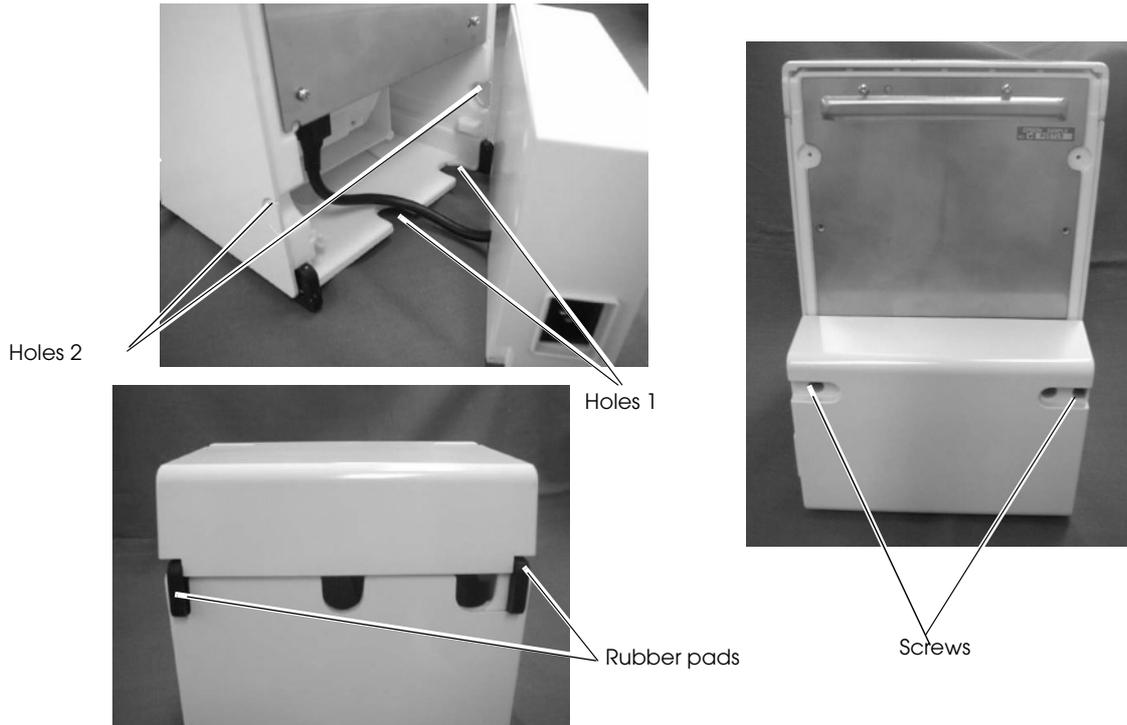

### ***Horizontal Installation and Wall Mounting***

1. Check that the printer POWER switch is off and that the power supply cord of the AC adapter is not plugged into the wall outlet.
2. Connect DC power supply cable of the AC adapter to the DC connector on the printer.

3. Attach the power supply box to the bottom of the printer and secure with two screws packed with the printer(C.P.T-B Screw, 3 × 14, F/Ni).



Screws

*Attaching the power supply box for horizontal installation and wall mounting*

## **Wall Mounting**

An optional wall mounting bracket (Model Name: WH-10) is required to wall mount the printer.

### **Notes on Wall Mounting**

- ❑ Cut printing paper may stick to the case due to static electricity (however, this does not affect printer operation).

### **Installation**

#### **⚠ CAUTION:**

*Before starting any installation work, turn off the printer and all accessories connected to the printer, and connect all cables connected to the printer.*

# Confidential

## Installing the wall mount

### **CAUTION:**


The weight of the printer is listed in the table below. Use screws that are long enough to properly support the weight of the printer and that suit the type of wall you attach the mount to. It is recommended that you use screws with a 4 mm diameter.

Secure the mount to the wall using all the 10 screw holes.

Table 1-1 Weight of printer and accessories

|   | Weight         |
|---|----------------|
| TM-U230 printer<br>AC adapter<br>Power supply box | Approx. 3.5 kg |
| TM-U230 printer                                   | Approx. 2.8 kg |


- ❑ Select a location for wall mounting that will provide sufficient space around the printer when the roll paper cover and cutter cover are open.
- ❑ Attach the wall mounting bracket using all the 10 screw holes.
- ❑ Since no screws have been supplied with the wall mounting bracket, select screws that suit the wall where the bracket is to be attached.

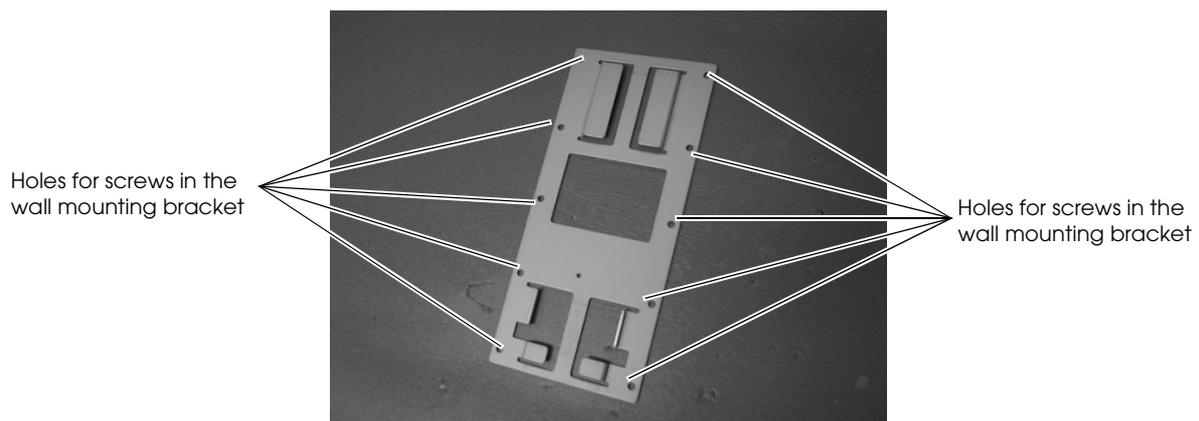

Screw holes in the wall mounting bracket

**Attaching the hangers****Note:**

- ❑ There are holes for 4 screws in the hangers (The number of the type of screw to be used is stamped on the hanger). Use the correct screw holes.
  - ❑ In attaching the hangers to the printer, use the 4 screws supplied with the WH-10 wall mounting bracket.
1. Place the hangers on the printer (one at the center and the other at the bottom of the printer).
  2. Use the screw holes in the printer marked "2" for the top hanger. Secure the hanger using two of the supplied screws.
  3. Use the screw holes in the printer marked "1" for the bottom hanger. Secure the hanger using two of the supplied screws.

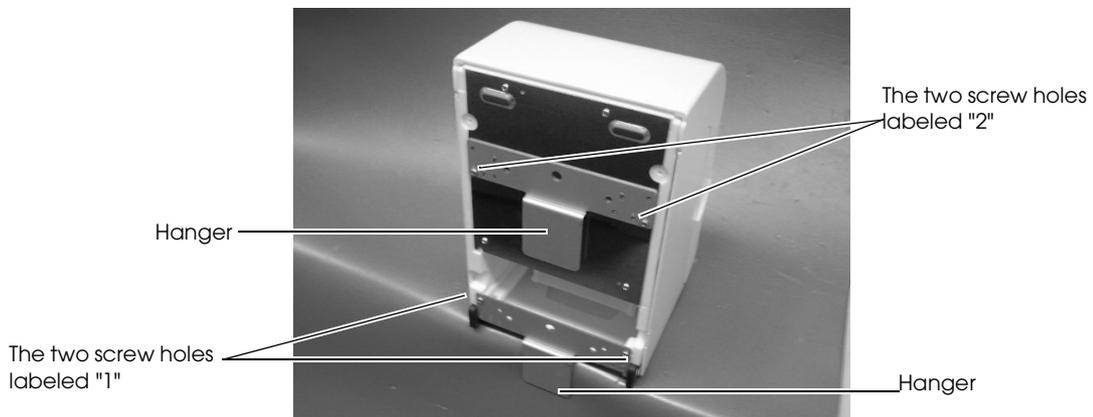*Attaching the hanger*** CAUTION:***Make sure that all 4 screws are properly secured.*


## Confidential

### Attaching the printer to the wall

#### **CAUTION:**

Check again that the wall mounting bracket is properly secured to the wall before attaching the printer.

1. Insert the hangers in the groove of the wall mounting bracket.

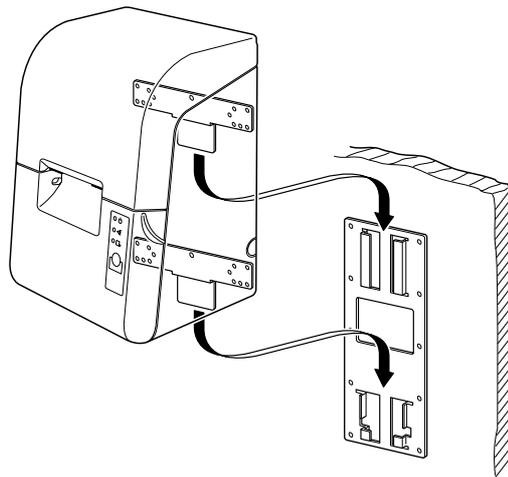

Attaching the printer to a wall

### Connecting a Host PC


Turn off both the printer and the computer before making any cable connections.

#### **Note:**

Be sure that cables go through the holes numbered 1 in the illustration on page 1-10. If there are many cables used, use the other holes numbered 2 (you need to break that parts).

#### **Serial interface connections**


1. Connect the interface cable connector to the interface connector on the connector panel.
2. Secure both screws of connectors equipped with screws.

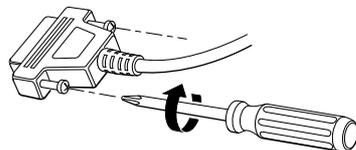

Tightening connector screws

**Note:**

Your printer has inch-type hexagonal lock screws installed. If your interface cable requires millimeter-type screws, replace the inch-type screws with the enclosed millimeter-type screws using a hex screwdriver (5 mm).

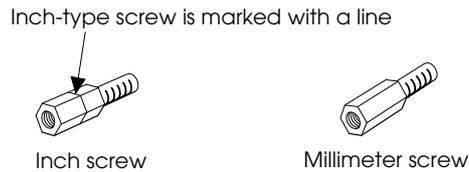

*Inch screw and millimeter screw*

3. If your interface connector has a grounding wire, attach it to the printer using the screw labeled FG.
4. Connect the other end of the interface cable to the host PC.

**Connecting to a parallel interface**

1. Connect the interface cable connector to the interface connector on the connector panel.
2. Close the tabs on both sides of the connector to lock it.
3. If your interface cable has a grounding wire, attach it to the printer using the screw labeled FG.
4. Connect the other end of the interface cable to the host PC.

**Connecting to a USB interface**

Be sure to use the same settings of the DIP switches as the parallel interface. Set DIP switch 2-4 (# 31 reset signal) On.


1. Attach a locking wire saddle as shown in the figure below.
2. Pass the USB cable through the locking wire saddle as shown in the figure.

## Confidential



### Note:

Passing the USB cable through the wire locking saddle as shown in the figure will keep the connection from coming loose.

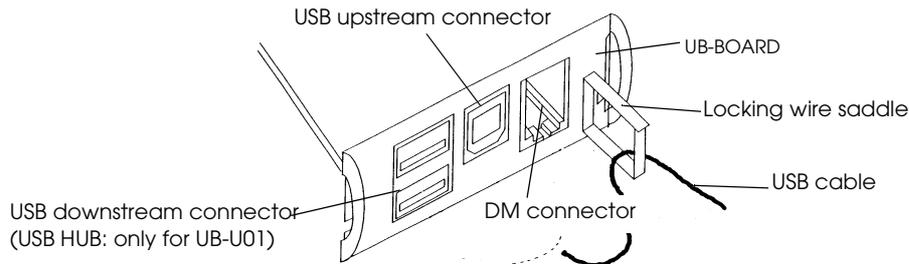

Attaching the locking wire saddle

3. Connect the USB cable from the host PC to the USB upstream connector.
4. A total of 2 USB devices can be connected to the USB downstream connector to a printer equipped with UB-U01.



### Note:

The UB-U01 hub is a power supply hub. Consequently, a bus power supply hub (including UB-U01) or a bus power supply function with a current consumption exceeding 100 mA cannot be directly connected to this connector. (A UB-U02 can be directly connected to a UB-U01 hub.)

5. Install a UB-U01/02 device driver on the host PC.



### Note:

Please contact the dealer where you purchased the product for information on how to obtain device drivers and instructions on how to install them.


## Connecting to an Ethernet interface

Be sure to note the following when using the Ethernet interface.

- ❑ Use the same settings of the DIP switches as the parallel interface.
- ❑ When turning on the power, the Ethernet interface board transmits the **GS I** and **GS a ffh** commands to acquire printer information.
- ❑ Refer to the DIP switch setting section on page 1- 6 for the settings when using the Ethernet interface.

*Names of parts*

Ethernet interface terms are given below.

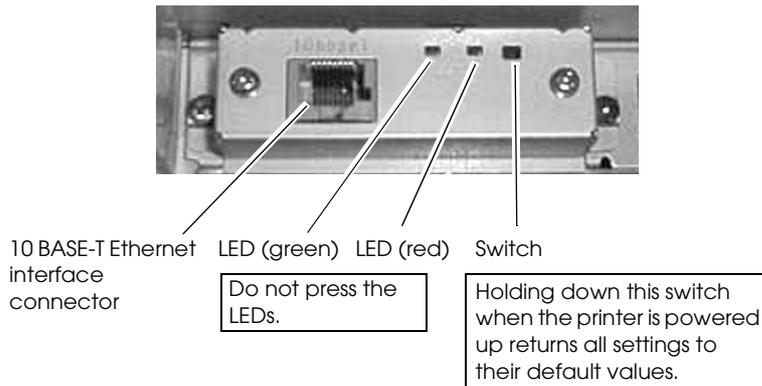

*Names of parts*

*Ethernet test switch*

The Ethernet test switch has the following functions.

- ❑ **Setting Initialization**  
Holding down this switch for 5 seconds or more when the printer is powered up returns all settings to their factory default values.
- ❑ **Status Sheet Test Printing**  
Holding down this switch for 3 seconds or more while the printer is online causes the printer status sheet to be printed out.

# Confidential

## Ethernet LEDs

The operating status of the Ethernet interface is indicated by the combined status of the two Ethernet LEDs (redx1 and greenx1).

| No. | Green                   | Red     | Status                        |
|-----|-------------------------|---------|-------------------------------|
| 1   | Off                     | Off     | Power off                     |
| 2   | Off                     | On      | Hardware error                |
| 3   | Off                     | 1 blink | CPU test error                |
| 4   | Off                     | 6 blink | Printer reset error           |
| 5   | On                      | Off     | Waiting                       |
| 6   | Slowblinking            | Off     | Data or status sheet printing |
| 7   | Slow blinking in unison |         | Download mode                 |
| 8   | Blinking alternately    |         | Downloading                   |
| 9   | Fast blinking in unison |         | Initializing                  |
| 10  | Fast blinking           | Off     | Sending and receiving packets |

## Interface cable connections



### CAUTION:

Connecting devices directly to LAN cables that are installed outdoors will expose them to damage from power surges caused by lightning and other inductive sources. It is best to make sure that devices without proper surge protection are cushioned by being connected through devices that do have surge protection. Otherwise, it is better not to connect them to outdoors lines.

1. Make sure that both the printer and the host PC are turned off.
2. Press in the 10 BASE-T cable plug into the 10 BASE-T Ethernet connector until you hear a clicking sound.



### CAUTION:

Never connect a customer display connector cable, drawer kick-out connector or a public telephone line to the 10 BASE-T Ethernet connector.



### Note:

Refer to the UB-E01 Developer's Guide for more details about the Ethernet Interface.

**Drawer Kick-Out Connector (Marked DK)****⚠ CAUTION:**


Connect a drawer that matches the printer specifications. Using an improper drawer may damage the printer as well as the drawer.

Do not connect a telephone line to the drawer kick-out connector (marked DK). Such a connection may damage both the printer and the telephone lines.

**✎ Note:**

Be sure that cables go through the holes numbered 1 in the illustration on page 1-10. If there are many cables used, use the other holes numbered 2 (you need to break that parts).

1. Connect the drawer cable to the drawer kick-out connector (marked DK) on the connector panel.

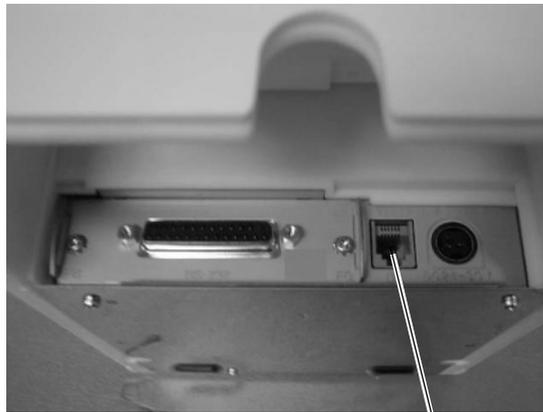

Drawer kick-out connector

Drawer connection

**Confidential**

## Chapter 2

# Handling

---

### Important Safety Information

#### **WARNING:**

- ❑ Turn off the power switch immediately and unplug the power cord from the electrical outlet if the TM-U230 produces smoke, a strange odor, or unusual noise. Continued use may lead to fire or electric shock.
- ❑ Do not modify the printer or perform any disassembly operation not described in this manual. Doing so could result in a fire or shock hazard.
- ❑ Use only the designated power supply. Use of a different power supply could cause a fire or shock hazard.
- ❑ Never insert or disconnect plugs with wet hands. Doing so may cause a serious shock.
- ❑ Never drop or push objects into the product through openings. This could cause a fire or shock.
- ❑ If the printer is exposed to water or other liquid, turn off the POWER button and disconnect the power cord immediately. Continued use under these conditions could cause a fire or shock hazard.
- ❑ Do not connect the power cord to an overloaded wall outlet. This may cause a fire hazard. Connect the printer directly to a wall outlet.
- ❑ Handle the power cord with care. Incorrect handling may lead to fire or shock.
  - Do not modify the power cord.
  - Do not place heavy objects on the power cord.
  - Do not bend, twist, or pull the power cord excessively.
  - Do not route the power cord near heaters.
  - Remove any dirt or dust from the power plug before plugging it in.
  - Be sure to fully insert the power plug.

## Confidential

### **CAUTION:**

- ❑ All cables are to be connected only as described in the manual. Incorrect connection could cause damage or a fire hazard.
- ❑ Be sure to set this product on a firm, stable, horizontal surface. The product may break or cause injury if it falls.
- ❑ Do not install the printer in extremely humid or dusty locations. Operation under such conditions could damage the printer or cause a fire or shock hazard.
- ❑ Do not stand on the printer or place heavy objects on it. The printer could fall or collapse, causing breakage and possible injury.
- ❑ For added protection of the printer, disconnect the power plug from the wall outlet when the printer is not to be used for an extended period of time.
- ❑ Be sure not to touch the print head or motors when you remove paper jammed in the printer. Wait until the print head and motors have cooled down before removing jammed paper. When the printer has been used for an extended period, the print head and the motors are very hot and could cause burns.

### ***Precautions in handling the fine coating of the case (only for Fine Coating Case model)***

A fine coating is used for the external surface of the plastic case of the printer, which makes wiping and removing kitchen stains easy; however, you should note the following when cleaning the surface in order to preserve the quality of the coating (the metal plate and the inside of the case do not have the fine coating):

- ❑ Do not scrub the surface with a hard object. Otherwise, the case will be scratched and harder to clean.
- ❑ Do not use a cleanser that includes polishing materials such as grains of glass, metal, or ceramics. Otherwise, the case will be scratched and harder to clean.
- ❑ Never use disinfectant, bleach, alcohol, benzine, thinner, chlorine solvent, or ketone solvent. Otherwise, the case will be harder to clean, and the case may be seriously harmed or even deformed and its color may be changed.
- ❑ The label may come off of the fine coating of the case if harsh cleaning methods are used.

### ***Waterproof***

The TM-U230 is designed as a kitchen printer with protection from water. When it is installed vertically or horizontally, the printer meets the European Standards IEC 529 for protection against water of "keeps out water coming from an angle up to 15° from vertical, evaluating IP level. (The TM-U230 also meets the IEC Standards for protection from tools and thin wires with a diameter more than 2.5 mm and protection from solid foreign objects with a diameter greater than 2.5 mm.) The IP code of the TM-U230 when it is installed vertically or horizontally is IP32. The meaning of the "IP" numbers is described in the next section of this manual.

**IP**

The ability of an enclosure to keep out dirt and water is defined in IEC 529. When an enclosure protects the equipment from water and particles of dirt, it also protects people from any potential hazard inside the equipment.

The degree of protection is designated by the letters "IP" followed by two digits such as "IP01" or "IP34." The first digit indicates the degree that the equipment is protected from solid foreign objects. The second digit indicates the degree that the equipment is protected from water. The details are described in the tables below. The first digit, protection from solid foreign objects, is divided into "protection from human contact" and "protection from foreign bodies."

| First Digit | Protection From Human Contact   | Protection From Foreign Bodies   |
|-------------|---|--|
| 0           | No protection   | No protection  |
| 1           | Protection from the palm of a hand  | Protection from foreign bodies with a diameter greater than 50 mm          |
| 2           | Protection from fingers   | Protection from foreign bodies with a diameter greater than 12.5 mm        |
| 3           | Protection from tools and thin wires, etc. with a diameter more than 2.5 mm | Protection from foreign bodies with a diameter greater than 2.5 mm         |
| 4           | Protection from tools and thin wires, etc. with a diameter more than 1 mm   | Foreign body with a diameter greater than 1 mm                             |
| 5           | Complete protection   | Protection from grainy foreign bodies (only a certain amount is permitted) |
| 6           | Complete protection   | Complete protection from grainy foreign bodies                             |

| Second Digit | Ability to keep water out  |
|--------------|--|
| 0            | No protection  |
| 1            | Keeps out water coming from directly above   |
| 2            | Keeps out water coming from an angle up to 15° from vertical   |
| 3            | Keeps out water sprayed at an angle of 60° from vertical   |
| 4            | Keeps out water sprayed from all directions (only a certain amount of water penetrating the enclosure is permitted)(*)                   |
| 5            | Keeps out low pressure water jet sprayed from all directions (only a certain amount of water penetrating the enclosure is permitted)(*)  |
| 6            | Keeps out high pressure water jet sprayed from all directions (only a certain amount of water penetrating the enclosure is permitted)(*) |
| 7            | Keeps out water during temporary immersion   |
| 8            | Keeps out water during permanent immersion   |

(\*) : Only a certain amount of water may enter though the printer can continue printing.

# Confidential

Example:

When the IP code of a product is IP32, the first digit means that the product has protection from tools and thin wires with a diameter more than 2.5 mm and protection from solid foreign objects with a diameter greater than 2.5 mm. The second digit means that the product is protected from water coming from an angle up to 15° from vertical.

The test for keeping out water coming from an angle up to 15° from vertical is executed under the following conditions.

| Amount of water | Angle  | Time                     |
|-----------------|--|--------------------------|
| 3mm/min         | 15° from each of front, rear, right and left | 2.5 min. for each angle. |

## Waterproof mechanism

TM-U230 is especially designed to protect the printer from water. If the printer is installed horizontally, when water enters the printer through the portions indicated in blue, that water goes out of the printer through the portions indicated in red.


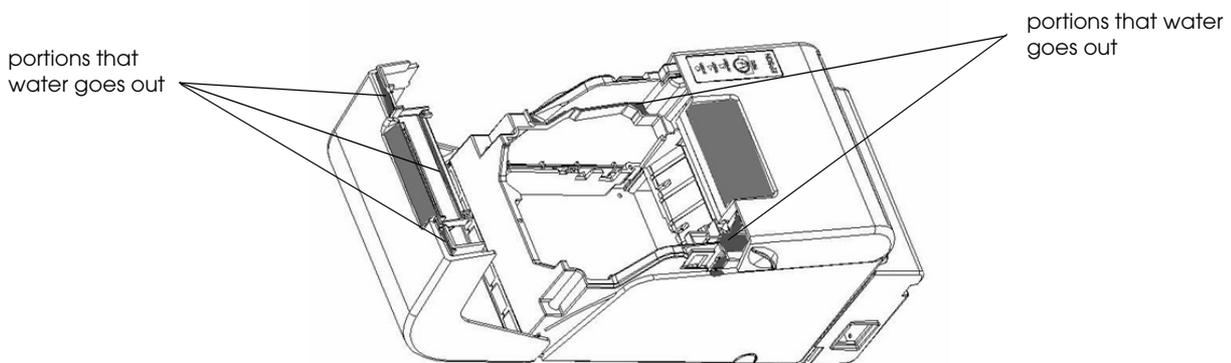


Figure 2-1

### ***Replacing roll paper***


Use the designated type of roll paper. (See Appendix A for information on roll paper specifications.)

1. Be sure that the power is turned on.
2. Open the roll paper cover.
3. Remove the roll paper and cut the paper along the dotted line in the figure below.

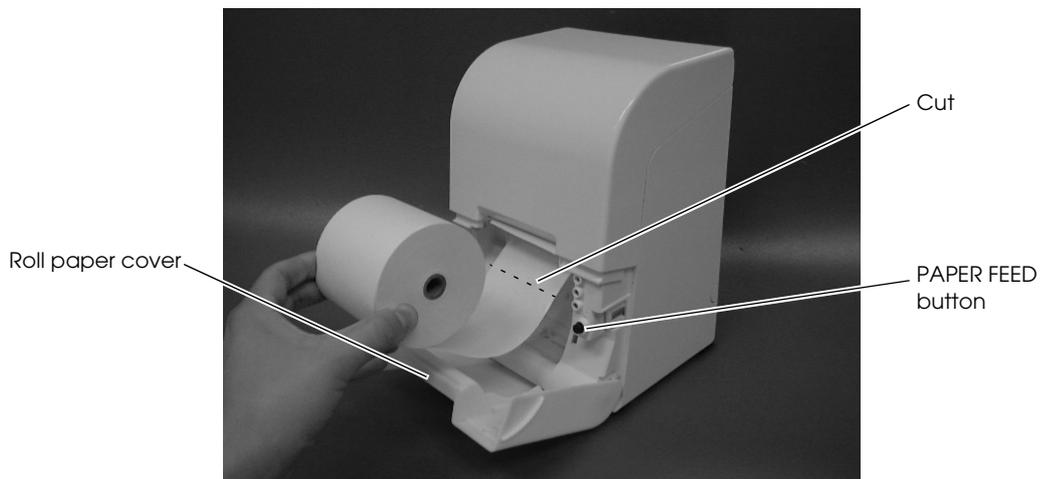

*Figure 2-2 Cutting roll paper*

4. Press the PAPER FEED button to remove the cut paper.
5. Use a pair of scissors to cut the front end of the paper off squarely.

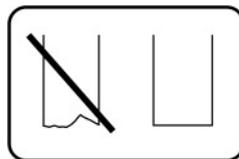

*Figure 2-3 Shape of roll paper front end*

6. Load the roll paper in the printer. Be sure to note the correct direction that the paper should come off the roll. (See Figure 2-4.)
7. Hold the front end of the roll paper with both hands and insert the roll paper into the paper insertion slot as far as it will go. The roll paper is now automatically fed.

## Confidential



**Note:**

If the cutter cover is opened, the printer is offline and paper will not be fed automatically. Be sure to close the cutter cover.


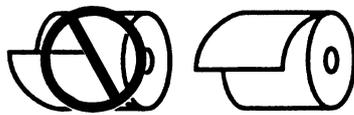


Figure 2-4 Loading roll paper

8. Close the roll paper cover.
9. When the PAPER OUT LED starts to flash, press the PAPER FEED button. The printer is online when the PAPER OUT LED stops flashing.

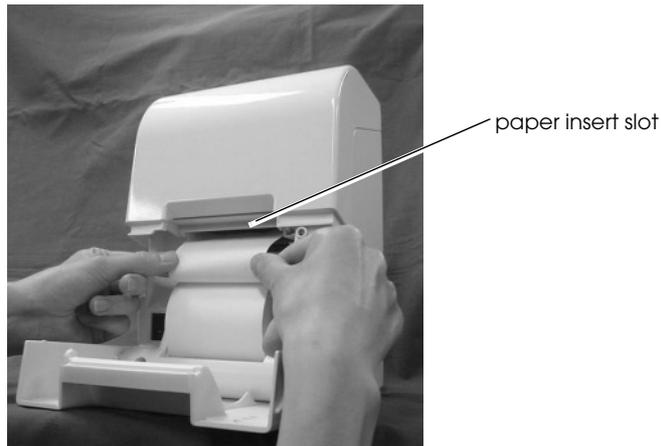

**Note:**

The printer is offline as long as the LED is flashing.

**Replacing the ribbon cassette**

Use the EPSON ERC-38 ribbon cassette.

1. Open the roll paper cover.
2. Open the cutter cover.
3. Raise the autocutter lock lever and open the autocutter. Be sure that the autocutter is locked.

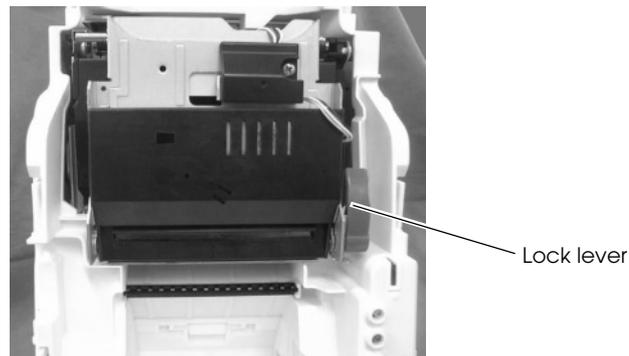


Figure 2-5 Autocutter lock lever

4. Take the ribbon cassette out of the printer.
5. Turn the knob on the new ribbon cassette in the direction indicated by the arrow on the cassette to remove any slack.

**⚠ CAUTION:**

Do not turn the ribbon cassette knob in the opposite direction. Turning the knob in the opposite direction may damage the ribbon cassette.

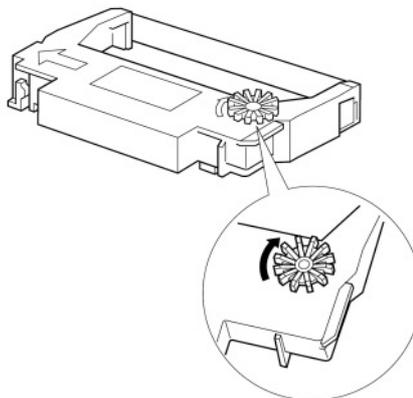


Figure 2-6 Removing ribbon slack

## Confidential

6. Insert the ribbon between the print head and the platen, as shown in the figure below, and press it in until it clicks into place.
7. Turn the ribbon cassette knob 5 to 6 times in the direction of the arrow to remove any slack in the ribbon.



**Note:**

*Make sure that the ribbon is inserted between the print head and the platen and that there are no creases or folds in the ribbon.*

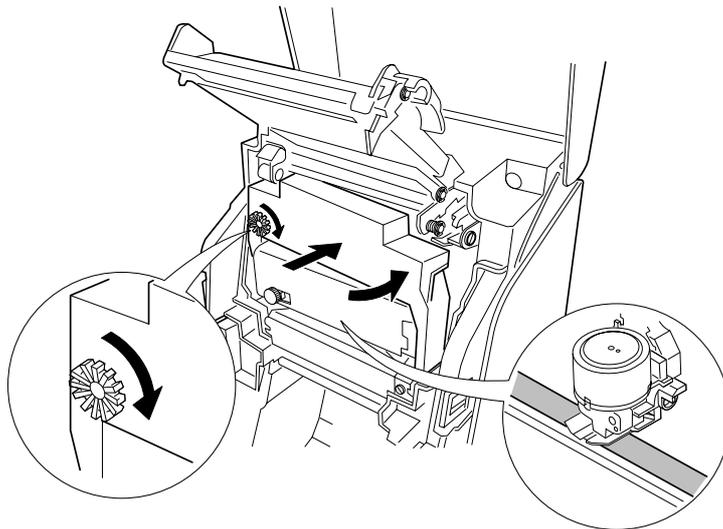


Figure 2-7 Installing the ribbon cassette and removing ribbon slack

**Removing paper jams****Paper jams in the vicinity of the print head**

1. Turn off the power and open the roll paper cover.
2. Take out the roll paper and cut the paper along the dotted line in the figure below.


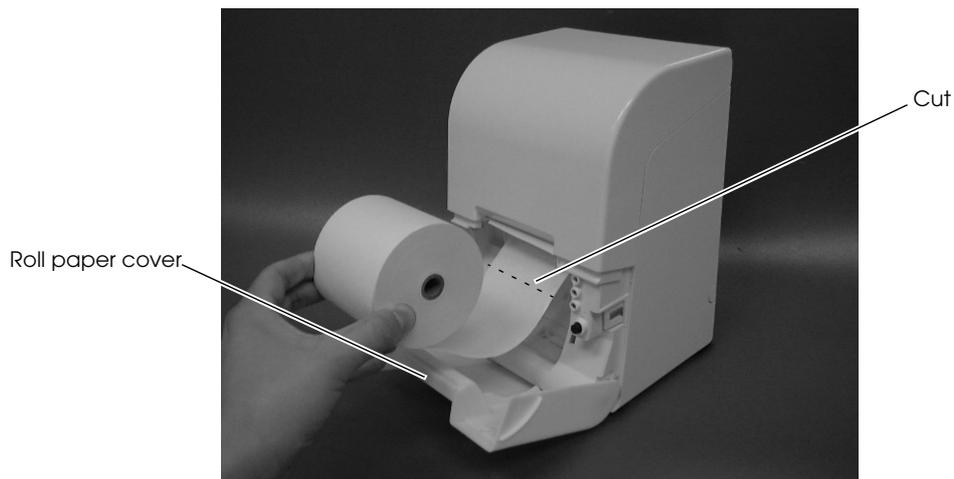


Figure 2-8 Cutting roll paper

3. Open the cutter cover.
4. Raise the autocutter lock lever and open the autocutter.
5. If possible, pull the jammed paper in the paper exit direction to remove it. If the paper cannot be pulled out in the direction of the paper exit, try the following procedure.

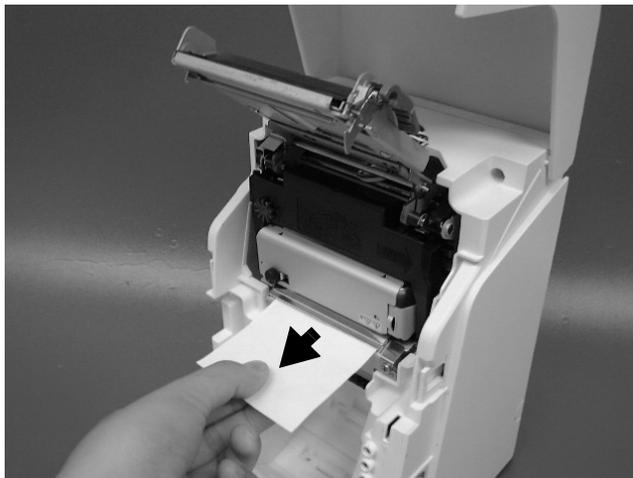

*Figure 2-9 Removing jammed paper*

**⚠ CAUTION:**

*Do not remove jammed paper by pulling it against paper feed direction.*

6. Take the ribbon cassette out of the printer.
7. Loosen the screw that secures the print head cover. Loosen the screw until it tilts.
8. Remove the print head cover.

**⚠ CAUTION:**

*The print head becomes hot during printing. Perform this procedure when the print head has become cool.*

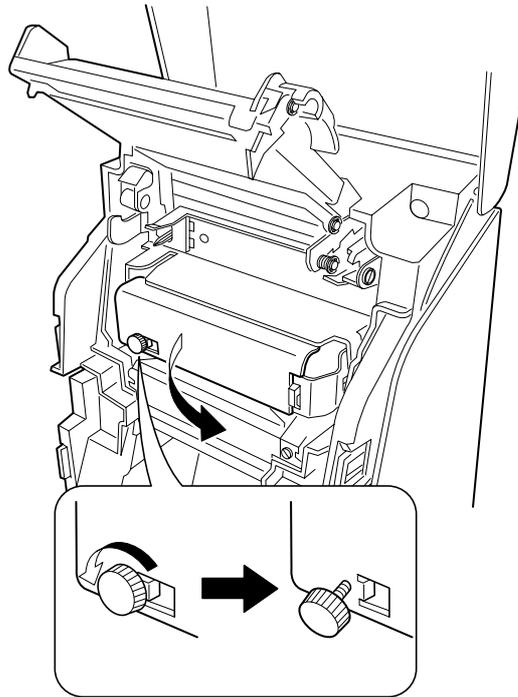


Figure 2-10 Removing the print head cover

9. Remove the jammed paper.

**⚠ CAUTION:**

*Do not remove jammed paper by pulling it against paper feed direction.*

10. Perform Steps 7 and 8 above in the opposite order to install the print head cover and secure it with the screw.

**⚠ CAUTION:**


*Be sure to properly secure the cover with the screw.*

11. Install the ribbon cassette in the printer.

# Confidential

## *Paper jam in the auto cutter*

When the autocutter blade is visible through the slit, a paper jam may have occurred in the auto cutter. Insert a screwdriver in the hole on the side of the autocutter to turn the gear and return the blade to a position where it cannot be seen from the slit (indicated by the bold dotted line in Figure 2-11).

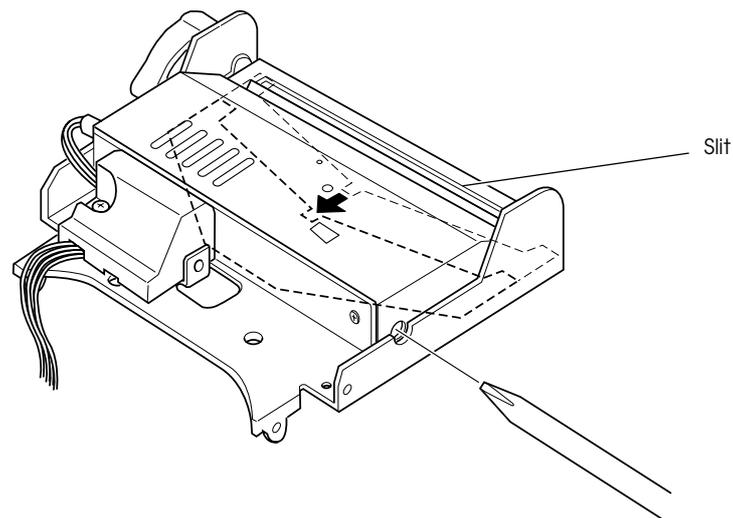

*Figure 2-11 Normal auto cutter position*

***Installing the power button cover***

The power button cover is provided to prevent someone from pressing the power button inadvertently. Install the cover over the printer POWER button as shown in the figure below.

When a power button cover has been installed, insert a ballpoint pen or the like in the holes provided to turn the printer on and off.

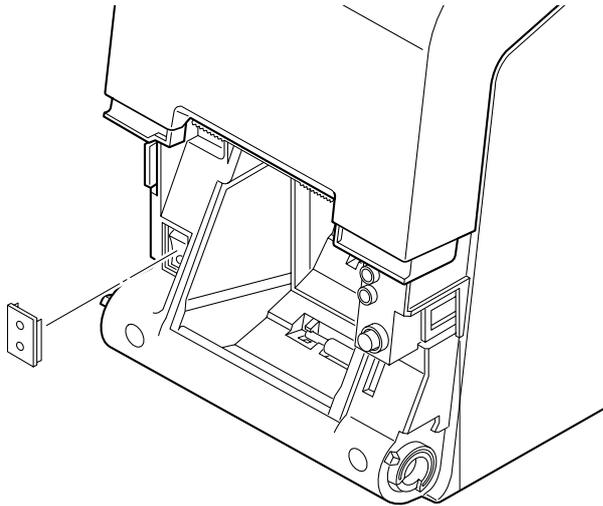


Figure 2-12 Installing the power button cover

** *WARNING:***

*Should an emergency arise when the power button is installed, immediately disconnect the AC cable of the AC adapter from the power outlet. Continued use under these conditions could result in fire or shock hazard.*

**Confidential**

## Chapter 3

# Compatibility

---

This Chapter describes features that are different between the TM-U230 and TM-U210 Series printers.

### **Internal Buzzer**

The TM-U230 have the internal buzzer and changing the DIP Switch 2-8 setting enables/disables the internal buzzer.

| Switch No. | On                       | Off                     | Default |
|------------|--------------------------|-------------------------|---------|
| 2-8        | Internal buzzer Disabled | Internal buzzer Enabled | Off     |

Internal buzzer noise level:       Approx. 75dB  
(Environment temperature(Ta)=25°C, measured at 100mm from the paper exit)

When the internal buzzer is enabled and a paper roll end or near-end is detected, the buzzer will sound and the PAPER OUT LED will be on or blinking. (The pattern of the PAPER OUT LED can be selected by DIP switch 2-5.)

### **Paper roll end settings**

- When the paper roll end sensor is disabled to stop printing and it detects a paper end  
⇒ The PAPER OUT LED will be on (or blinking) but the printer will not be offline.
- When the paper roll end sensor is enabled to stop printing and it detects a paper end  
⇒ Both the PAPER OUT LED and the ERROR LED will be on (or blinking) and the printer will be offline.

Refer to the Figure 3-1 for detailed specification of the internal buzzer operation by DIP switch and the LED indication.

**Confidential**

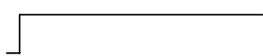
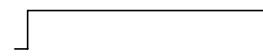
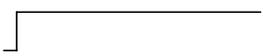
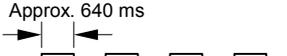
| Condition        | DIP Switch 2-5<br>(PAPER OUT LED) | DIP Switch 2-8<br>(Internal buzzer)  | Blinking pattern of PAPER OUT LED and<br>buzzer pattern  |
|------------------|-----------------------------------|--|--|
| Paper end        | Off<br>(LED is On)                | Off<br>(Enabled)   | LED is On<br>                               |
|                  |                                   |  | Buzzer sounds continuously<br>              |
|                  |                                   | On<br>(Disabled)   | LED is On<br>                               |
|                  |                                   |  | No buzzer sound<br>                        |
|                  | On<br>(Blinking)                  | Off<br>(Enabled)   | LED blinking pattern<br>Approx. 640 ms<br> |
|                  |                                   |  | Buzzer sound pattern<br>Approx. 640 ms<br> |
| On<br>(Disabled) |                                   | LED blinking pattern<br>Approx. 640 ms<br> |  |
|                  |                                   | No buzzer sound<br>                        |  |

Figure 3-1 PAPER OUT LED and internal buzzer operation

Replacing the paper roll stops the buzzer sound and turns off the PAPER OUT LED. Also pressing the FEED button stops the buzzer sound and turns off the PAPER OUT LED. Be sure that the PAPER OUT LED goes off when the buzzer sounds is stopped.

For details of the status of the LEDs when a paper end is detected, see the following table:

| Stop printing disabled/enabled | Sensor                                 | Status of panel LEDs and printer  |   |   |
|--------------------------------|--|---|---|---|
|                                |  | Normal  | Paper end detected (the first time)   | After pressing the FEED button  |
| Disabled                       | Paper roll near-end sensor (ESC c 4 0) | POWER LED: On<br>ERROR LED: Off<br>PAPER OUT LED: Off<br>Printer status: Online | POWER LED: On<br>ERROR LED: Off<br>PAPER OUT LED: On (blinking)<br>Printer status: Online | POWER LED: On<br>ERROR LED: Off<br>PAPER OUT LED: Off<br>Printer status: Online |
| Enabled                        | Paper roll near-end sensor (ESC c 4 1) | POWER LED: On<br>ERROR LED: Off<br>PAPER OUT LED: Off<br>Printer status: Online | POWER LED: On<br>ERROR LED: On<br>PAPER OUT LED: On (blinking)<br>Printer status: Offline | POWER LED: On<br>ERROR LED: On<br>PAPER OUT LED: Off<br>Printer status: Offline |
|                                | Paper roll end sensor                  |   |   |   |

See Appendix B for more details.

TM-U230 has **ESC(A)** command, which can control the internal buzzer. With this command, TM-U230 can keep the internal buzzer at the specified interval or beeps when the specified event (paper near end, cover open, paper end, stop printing, recoverable error or unrecoverable error) occurred.

 **Note:**

- When the internal buzzer is disabled by **ESC(A)** command, the PAPER OUT LED does not light or blink, because the internal buzzer corresponds to the PAPER OUT LED.
- The PAPER OUT LED blinks correspondingly when the internal buzzer is set to beep if paper end is detected.
- **ESC(A)** command setting is canceled when the power is turned off.
- Refer to the **ESC(A)** command description in TM-U230 series specification for more details.

The printer status can be checked by commands such as **GS a**.

**Receive Buffer**

The selectable receive buffer size differs depending on the setting of DIP switch 1-2.

| Printer        | DIP switch | On       | Off                                      | Default |
|----------------|------------|----------|--|---------|
| TM-U230        | 1-2        | 1K bytes | 16K bytes                                | Off     |
| TM-U210 series | 1-2        | 40 bytes | ANK: 1K bytes<br>Multilingual: 512 bytes | Off     |

## Confidential

For the TM-U210 series printers, when DIP switch 1-2 is off, the following commands cannot be used; however the TM-U230 can use them.

| Printer | Name   |
|---------|--|
| HT      | Horizontal tab   |
| ESC %   | Select/cancel user-defined character set                                   |
| ESC &   | Define user-defined characters   |
| ESC ?   | Cancel user-defined characters   |
| ESC D   | Set horizontal tab positions   |
| FS 2    | Define user-defined Kanji characters (only for Multilingual specification) |
| FS ?    | Cancel user-defined Kanji characters (only for Multilingual specification) |

Receive buffer full conditions are different.

| Printer        | Receive buffer-full conditions  |
|----------------|---|
| TM-U230        | When the remaining memory size becomes 128 bytes, the printer will be BUSY and when it returns to 256 bytes, the BUSY condition will be canceled. |
| TM-U210 series | When the remaining memory size becomes 16 bytes, the printer will be BUSY and when it returns to 26 bytes, the BUSY condition will be canceled.   |

### **Mounted Mechanism**

| Printer        | Mounted Mechanism  |
|----------------|--|
| TM-U230        | Autocutter and near-end sensor are standard equipment<br>Has no paper roll take-up device  |
| TM-U210 series | Near-end sensor is an option<br>Available with or without an autocutter<br>Available with or without a paper roll take-up device |

### **Page 254, 255 (Space Page)**

There is difference in a memory mapping.

| Printer        | Memory Mapping |            |                     |
|----------------|----------------|------------|---------------------|
| TM-U230        | Page 254       | 7 × 9 font | First address ECBA0 |
|                |                | 9 × 9 font | First address ED5A0 |
|                | Page 255       | 7 × 9 font | First address EE1A0 |
|                |                | 9 × 9 font | First address EEBA0 |
| TM-U210 series | Page 254       | 7 × 9 font | First address 8CBA0 |
|                |                | 9 × 9 font | First address 8D5A0 |
|                | Page 255       | 7 × 9 font | First address 8E1A0 |
|                |                | 9 × 9 font | First address 8EBA0 |

Chapter 4

**Programming Samples**

**Saving Space for Receipt Printing**


TM-U230 has **GS V function C**, which can save space for receipt printing. Executes a paper cut automatically when the current position reaches the autocutter position.

The details of this function are described below, comparing **GS V function C** with **GS V function B**.

- ❑ **GS V function C**      Executes a partial cut (one point left uncut)
- ❑ **GS V function B**      Feeds paper for cutting position + [ $n \times 0.176$  mm {1/144"}] and executes a partial cut (one point left uncut)


**GS V (Function B)**

1. The application will start printing Receipt 1. (There is space at the top when executing **GS V function B**.)

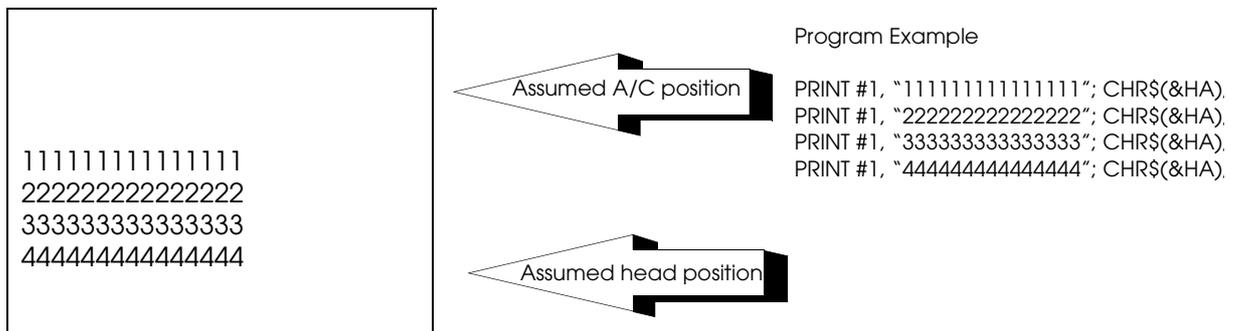

# Confidential

2. After printing Receipt 1, the application executes **GS V function B**. The printer feeds paper so that the printing on Receipt 1 exceeds the autocutter position and cuts the paper. For the next printing, there will be space between the positions of the autocutter and the print head.

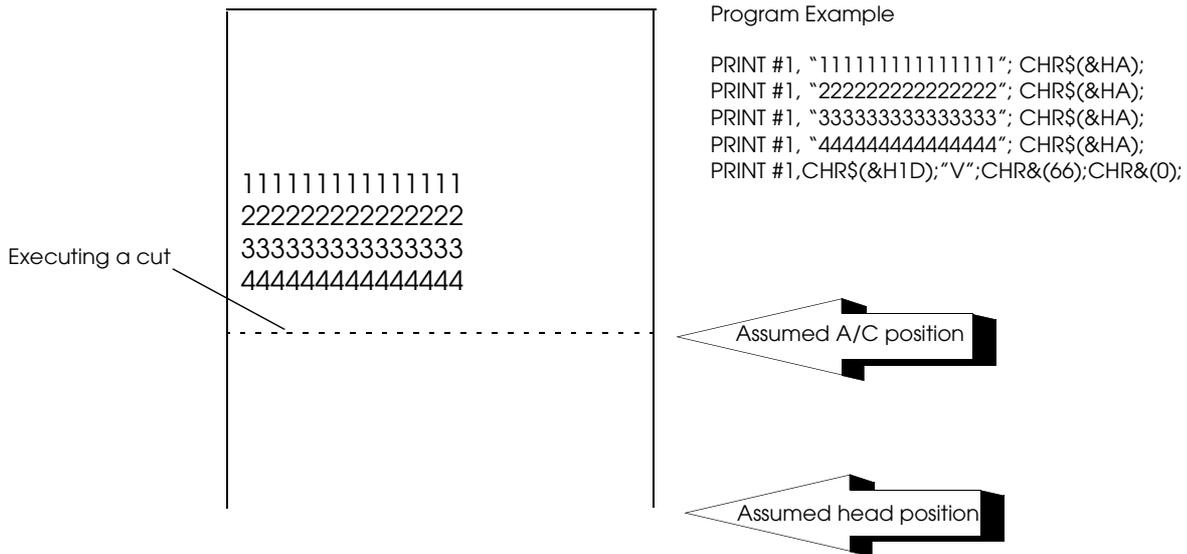


Program Example

```
PRINT #1, "11111111111111"; CHR$(&HA);  
PRINT #1, "22222222222222"; CHR$(&HA);  
PRINT #1, "33333333333333"; CHR$(&HA);  
PRINT #1, "44444444444444"; CHR$(&HA);  
PRINT #1,CHR$(&H1D);"V";CHR$(66);CHR$(0);
```

## GS V (Function C)


1. The application will start printing Receipt 1. (There is space at the top when executing **GS V function B**.)

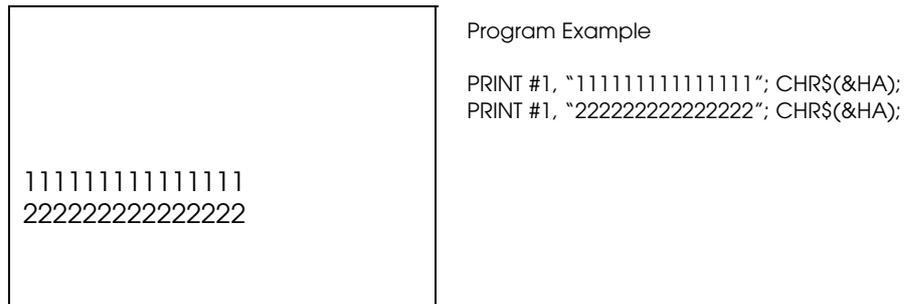

Program Example

```
PRINT #1, "11111111111111"; CHR$(&HA);  
PRINT #1, "22222222222222"; CHR$(&HA);
```


2. After printing the last line of Receipt 1, the application executes **GS V function C**.

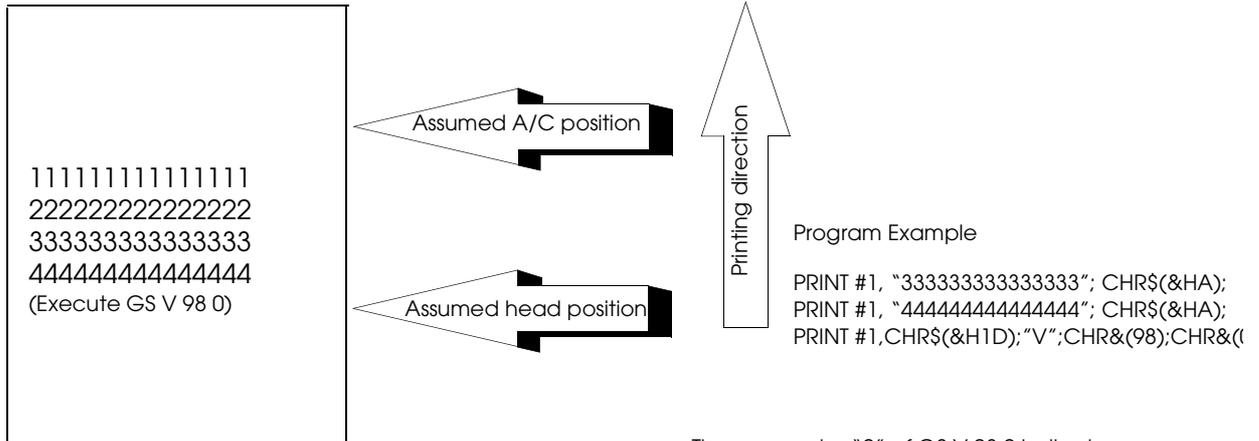

The parameter "0" of GS V 98 0 indicates paper feed amount executed right before the paper cut.

When the printer processes **GS V function C**, feeds paper for 4 mm to secure space for the cutting range.

3. The application starts printing Receipt 2.

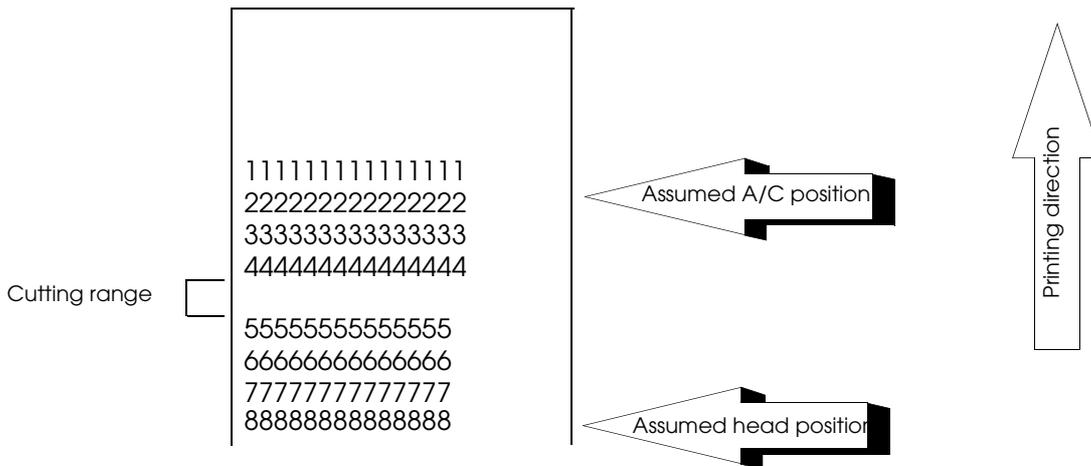


Program Example


```
PRINT #1, "5555555555555555"; CHR$(&HA);  
PRINT #1, "6666666666666666"; CHR$(&HA);  
PRINT #1, "7777777777777777"; CHR$(&HA);  
PRINT #1, "8888888888888888"; CHR$(&HA);
```

# Confidential


- When the cutting range of Receipt 1 reaches the autocutter position while printing Receipt 2, the printer cuts the paper.

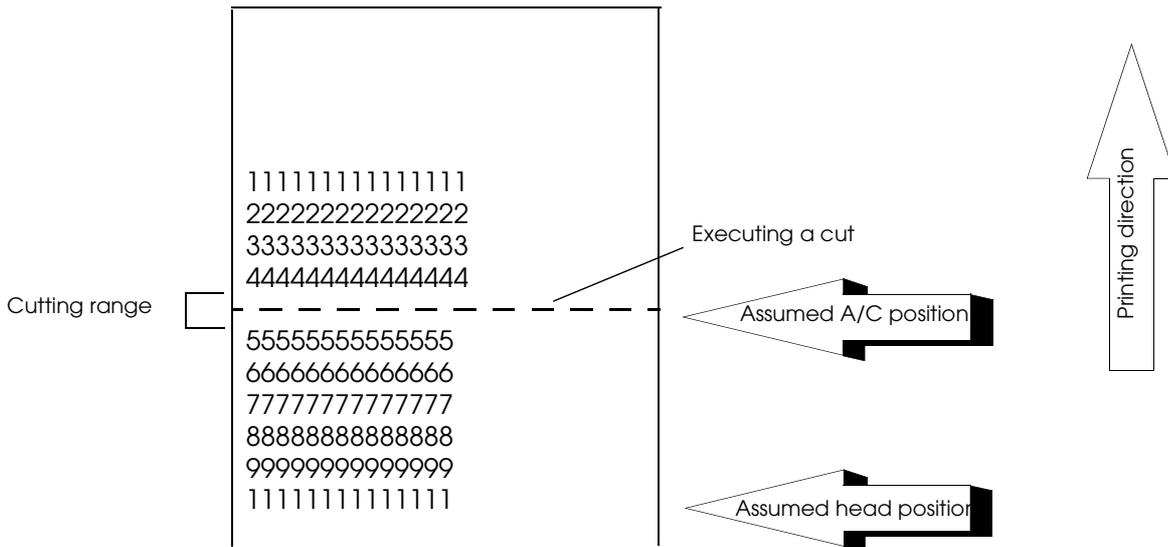


- When printing the last line of Receipt 2, the application executes **GS V function C**.

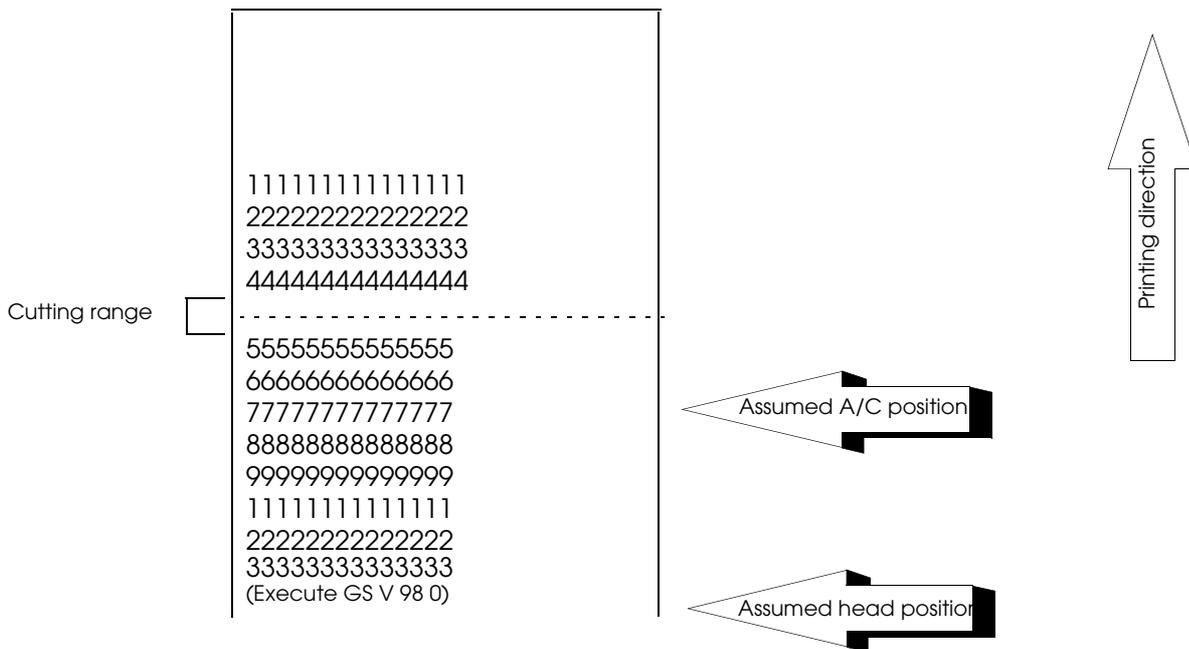

- 6. The application starts printing Receipt 3. When the cutting range of Receipt 2 reaches the autocutter position while printing Receipt 3, the printer cuts the paper.

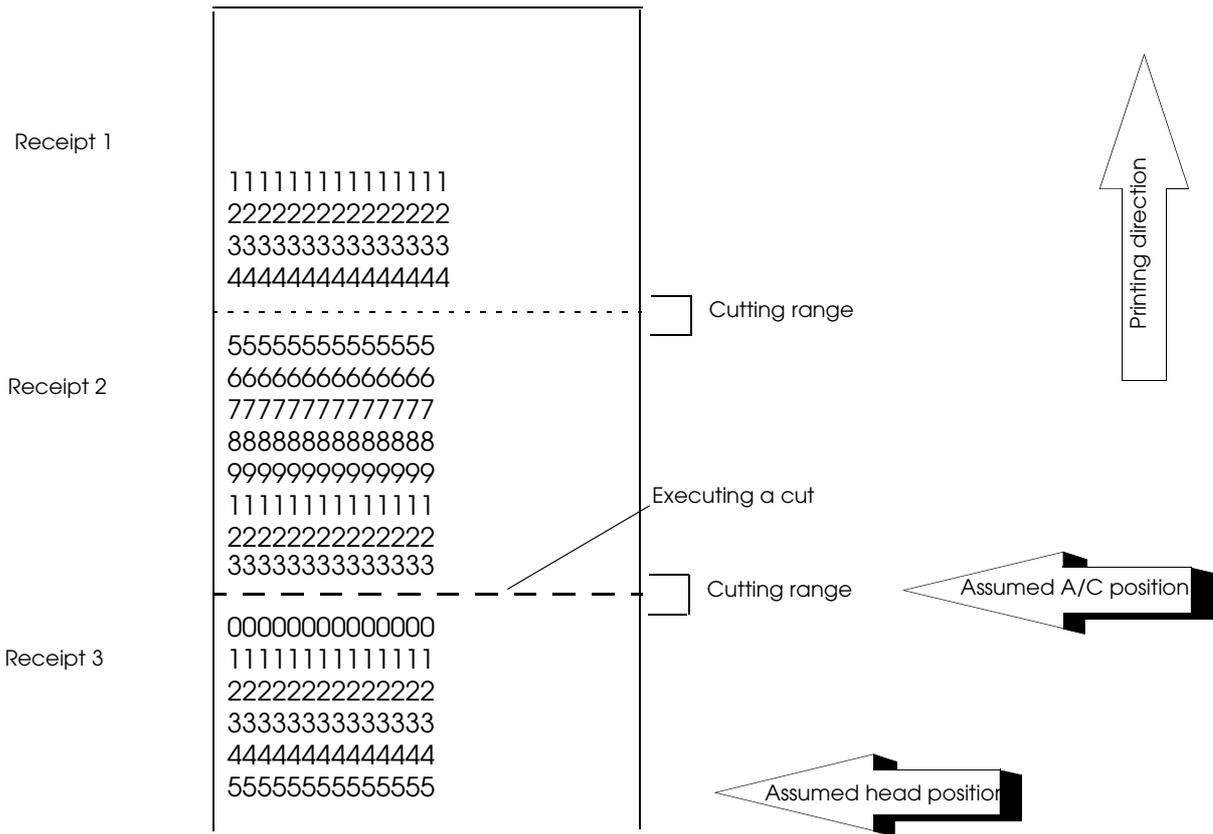

When you remove the assumed Receipt 2, you will have the result shown below. There will be no space at top and bottom of the paper, which saves paper.

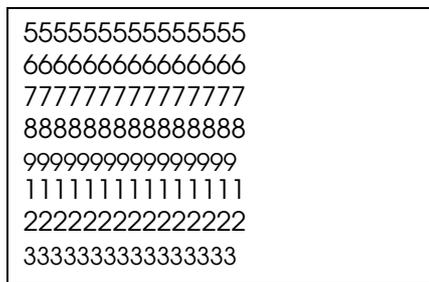

**Notes on Using GS V Function C**

When using **GS V function C**, there is a possibility of paper not being ejected (or not being cut), depending on usage.

## **Confidential**

Here is an example when executing the following steps.

1. Print receipt A
2. Execute **GS V 98 0**
3. Print receipt B
4. Execute **GS V 98 0**
5. Print receipt C
6. Execute **GS V 98 0**

If the cutting ranges designated in step 4 and 5 have not reached the autocutter position, Receipt B and C will not be cut. Even if they have reached the autocutter position and have been cut, the receipts do not reach the paper exit. With this condition, if the next printing is not performed, Receipts B and C will not be ejected. Therefore, be sure to take the following into consideration. Executing paper feed after a certain time has passed or executing a cut with **GS V 66 0** for each receipt.

See Figure A-2 Printing area for the relationship between the cutting position and the print head position.

***The usage of DirectIO in OPOS***

This Chapter describes the programming samples of DirectIO in OPOS.

Executes a paper cut automatically when the current position reaches the autocutter position.  
Executes a paper cut after feeding for  $4 + pData * 0.176$  [mm]. The value of the *pData* is 0 in the following example. (the available range of *pData* is 0 - 255)

This function is canceled when the FEED button is pressed or a command that results printer reset is executed.

Command: PTR\_DI\_DELAYED\_CUT Execute the delayed cut  
pData : Specify feed lines to the autocutter position  
pString : Not used

```
Dim RC As Long
Dim pString As Long
Dim pData As String
pString = PTR_DI_DUMMY
pData = 0
```

.....Printing process.....

```
RC = Coptr1.DirectIO(PTR_DI_DELAYED_CUT ,pData,pString)
```

# Confidential

## Control of The Buzzer

TM-U230 has **ESC(A** command, which can control the internal buzzer. **ESC(A** command is supported by the Firmware version 1.02 and above. You can confirm the Firmware version by the following procedure.

<Starting the self test>

1. Hold on the FEED button and turn on the printer with the paper roll cover opened.
2. Printer then prints the current printer status(Control ROM version, DIP switch settings) on a roll paper.

This chapter describes the programming samples of DirectIO in OPOS.

```
Dim RC As Long
Dim pString As Long
Dim pData As String
pData = PTR_DI_DUMMY
pString = Chr(&H1B)+ "=" + Chr(&H01)+Chr(&H1B)+"(" + "A" + Chr(&H5) + Chr(&H0)
+ Chr(&H61) + Chr(&H64) + Chr(&H5) + Chr(&H0A) + Chr(&H0A) `Stores the data
to be sent by DirectIO
```

.....Printing process.....

```
RC = Coptr1.DirectIO(PTR_DI_OUTPUT_NORMAL,
    pData,
    pString)`send the command data (ESC=1 and ESC (A 5 0 61 64 5 A A)
```

Chr(&H1B) + "=" + Chr(&H01) included at the start of the output data is the command for selecting the printer. If the printer and customer display are connected by hydraulic connection, it is necessary to branch the transmission to the printer and customer display by commands.

ESC=1: Printer

ESC=2: Display

Be sure to consider the BinaryConversion property when transmit the data over 80h. Chr(&H1B)+ "(" + "A" + Chr(&H5) + Chr(&H0) + Chr(&H61) + Chr(&H64) + Chr(&H5) + Chr(&H0A) + Chr(&H0A) is the printer command that controls the internal buzzer. The internal buzzer beeps five times at intervals of one second. Format of the **ESC(A** command is as follows.

(Format)            ASCII ESC ( A pL pH fn n c t1 t2

Hex                1B 28 41 05 00 61 64 c t1 t2

c: specifies the number of times for beeps

t1: specifies the length of time to be ON

t2: specifies the length of time to be OFF

Refer to the TM-U230 series specification for more details of **ESC(A** command.  
Refer to OPOS manuals for the programming using OPOS.

The following explanations are the details about programming samples using Control-A font in EPSON Advanced Windows Driver.

Edit the TMCTRLA.INI as follows so that the buzzer control command **ESC(A** is assigned to "A"(code41) of control-A font.

(TM-U230)  
41=1B284105006164050A0A

"41=1B284105006164050A0A" in the description above assigns the buzzer control command **ESC(A** to "A"(code41) of control-A font. This data specifies the internal buzzer to beep five times at intervals of one second.

Save the TMCTRLA.INI under the following system folder.

Windows 95/98        : \windows\system  
Windows NT            : \winnt\system32\spool\Prpcocs\W32x86

Then describe as follows in your program.

```
Printer.DeviceName = "EPSON TM-U230 Receipt"  
Printer.font.Name = " FontA"  
Printer.Print "TM-U230"  
Printer.Print "Buzzer Test"
```

## **Confidential**

```
Printer.font.Name = "ControlA"  
Printer.Print "A"  
Printer.EndDoc
```

This specifies the driver to transmit the buzzer control command **ESC(A** defined by Control-A font to the printer subsequently to the print data "TM-U230" and "Buzzer Test".

Refer to the TM-U230 series specification for more details of **ESC(A** command.  
Refer to the manuals included in EPSON Advanced Windows Driver for more details of Control-A function.

*Appendix A***Specifications****Printing Specifications**

| Item                    | Specification  |
|-------------------------|--|
| Printing method         | Serial impact dot-matrix   |
| Head wire configuration | 9-pin serial configuration   |
| Printing direction      | Bi-directional printing (logical seeking)  |
| Printing speed          | Approx. 3.5 lps (40 column, 16 cpi)  |
|                         | Approx. 6.4 lps (16 column, 16 cpi) (excludes data transfer and processing time) |
| Character per line      | See table A-1  |
| Character per inch      | See table A-1  |
| Two-color printing      | Black and red colors selectable  |

**Character Specifications**

| Item                    | Specification  |
|-------------------------|--|
| Character types         | Alphanumerics (95 characters)<br>Graphics (128 × 8 character tables)<br>International characters (37 characters) |
| Character configuration | 7 × 9, 9 × 9   |
| Character size          | See table A-1  |

Table A-1 Character per line, character per inch, character size

| Character configuration<br>W × H | Character configuration<br>Character types | Character dimensions<br>W × H(mm) | Dot spacing between characters | Characters per line | Characters per 25.4 mm |
|----------------------------------|--|-----------------------------------|--------------------------------|---------------------|------------------------|
| 7 × 9 (default)                  | ANK  | 1.2 × 3.1                         | 3 Half-dot                     | 40                  | 16                     |
|                                  | Graphics                                   | 1.7 × 3.1                         | 0                              | 40                  | 16                     |
| 9 × 9                            | ANK  | 1.6 × 3.1                         | 3 Half-dot                     | 33                  | 13.3                   |
|                                  | Graphics                                   | 2.0 × 3.1                         | 0                              | 33                  | 13.3                   |
| 7 × 9                            | ANK  | 1.2 × 3.1                         | 2 Half-dot                     | 42                  | 17.8                   |
|                                  | Graphics                                   | 1.6 × 3.1                         | 0                              | 42                  | 17.8                   |
| 9 × 9                            | ANK  | 1.6 × 3.1                         | 2 Half-dot                     | 35                  | 14.5                   |
|                                  | Graphics                                   | 1.9 × 3.1                         | 0                              | 35                  | 14.5                   |

(cpi: characters per 25.4 mm (characters per inch))

# Confidential

(cpl: characters per line)

(lps: lines per second)



**Note:**

The dot spacing between characters for 3-half dot and 2 half-dot can be set by changing the DIP switch setting.

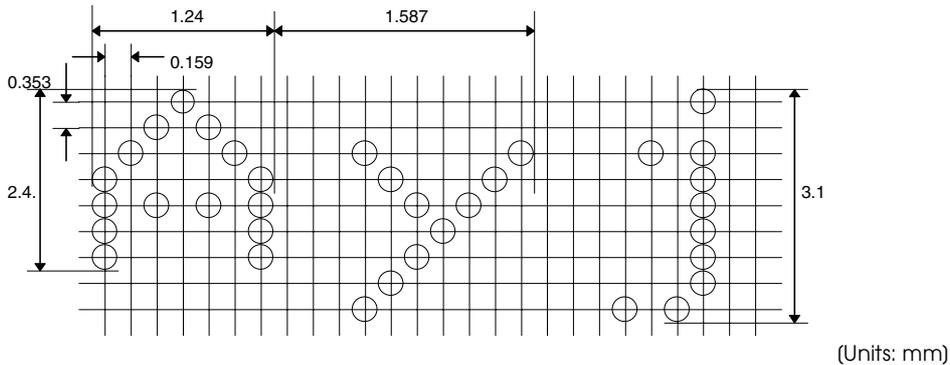


Figure A-1 7 × 9 font

## Paper Specifications

| Item                | Specification   |  |
|---------------------|---|--|
| Paper feed method   | Friction feed   |  |
| Paper feed interval | Initial setting: approximately 0.176 mm {1/6"}<br>Can be set in units of approximately 0.176 mm {1/144"} by a command |  |
| Paper feed speed    | Approximately 4.17 inches/second (25 lps) (continuous printing)<br>(lps: lines per second)                            |  |
| Paper dimensions    | Paper roll  | Width: 76 ± 0.5 {3" ± 0.02"}   |
|                     |   | Maximum diameter: 83 mm  |
|                     |   | Core: when there is no near end sensor, always be sure to use a paper roll that is not glued to the core   |
|                     |   | Normal paper:<br>Paper thickness: 1 sheet 0.06 to 0.085 mm<br>Mass: 52.3 to 64 g/m <sup>2</sup> {14 to 17lb} (45 to 55 kg/1000 sheets/<br>1091×788 mm) |

## Autocutter Specifications

Partial cut is executed by command.

Partial cut: cutting with one point left uncut

## Printing Area

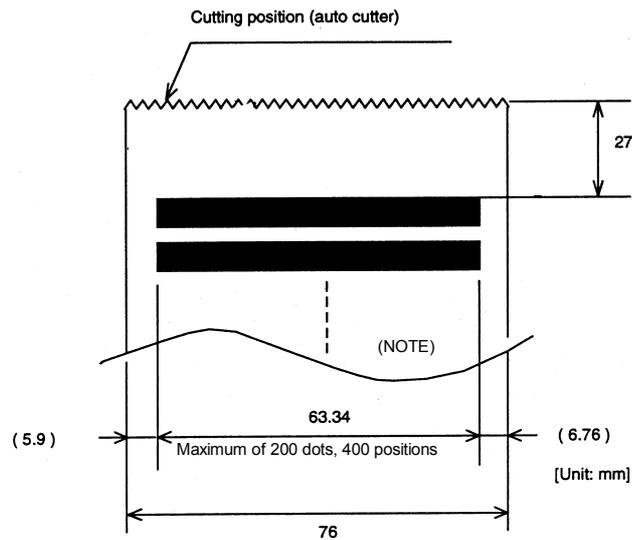


Figure A-2 Printing area



### Note:

The values shown for the printing area are the values calculated (between dot centers) according to the wire diameter (0.29 mm {0.0011"}).

## Electrical Specifications

- ❑ Power supply operations: AC adapter PS-180
- ❑ Printer power consumption: operating: 38 W avg., standby: 3W avg.

## Environmental Specifications

- ❑ Temperature
  - During operation:  
0 to 50°C {41° to 122°F} (At 34°C {93°F} or higher, there are humidity restrictions)
  - During storage: -10 to 50°C {14° to 122°F} (excludes paper and ribbon)

# Confidential

## □ Humidity

- During operation: 10 to 90% (no condensation)  
During storage: 10 to 90% (no condensation; excludes paper and ribbon)

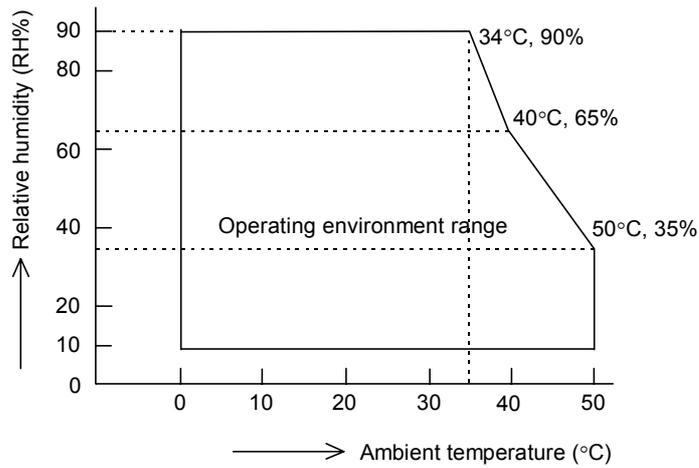


Figure A-3 Ambient temperature (°C)

**External Appearance**

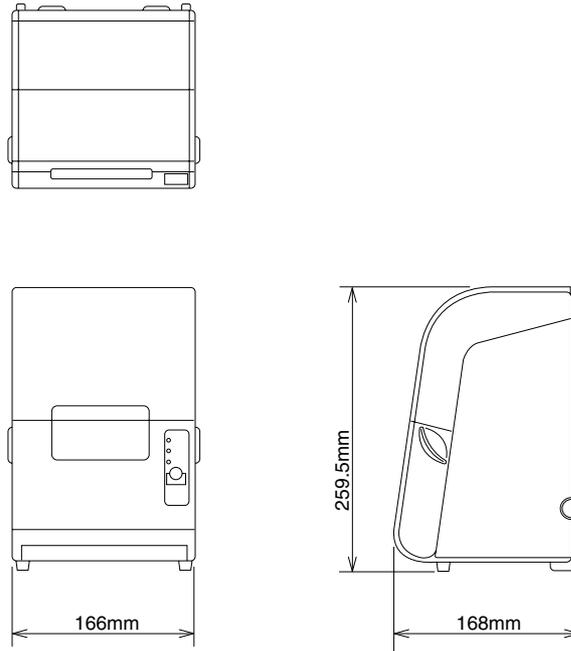


Figure A-4 Without the power supply cover

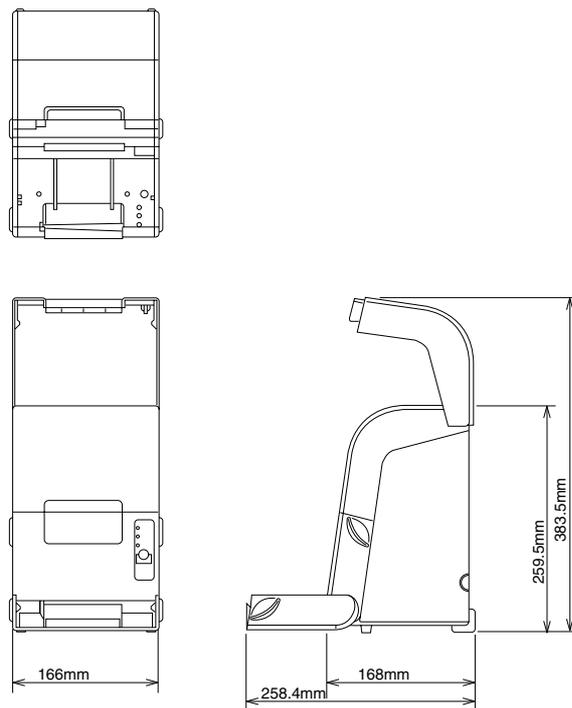


Figure A-5 When the cover is opened

**Confidential**

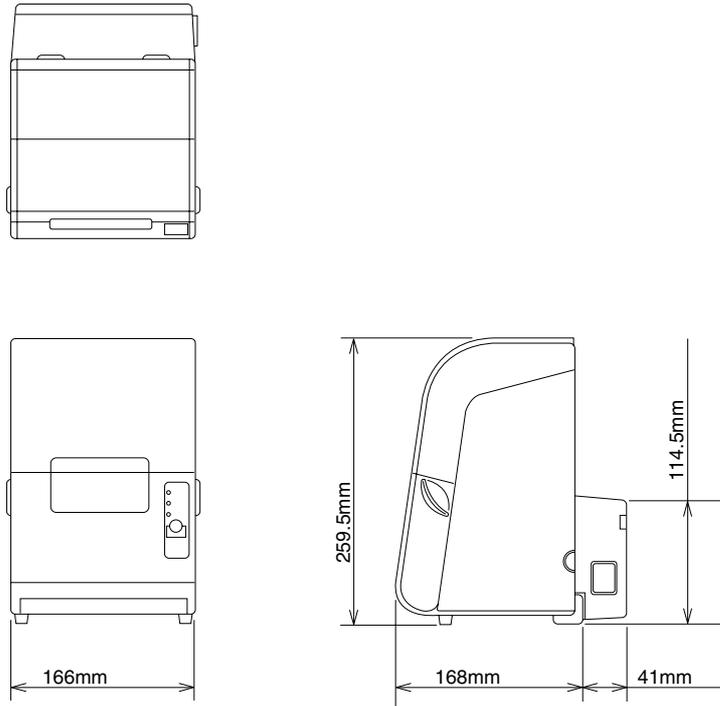


Figure A-6 When placed on the desk with the power supply box


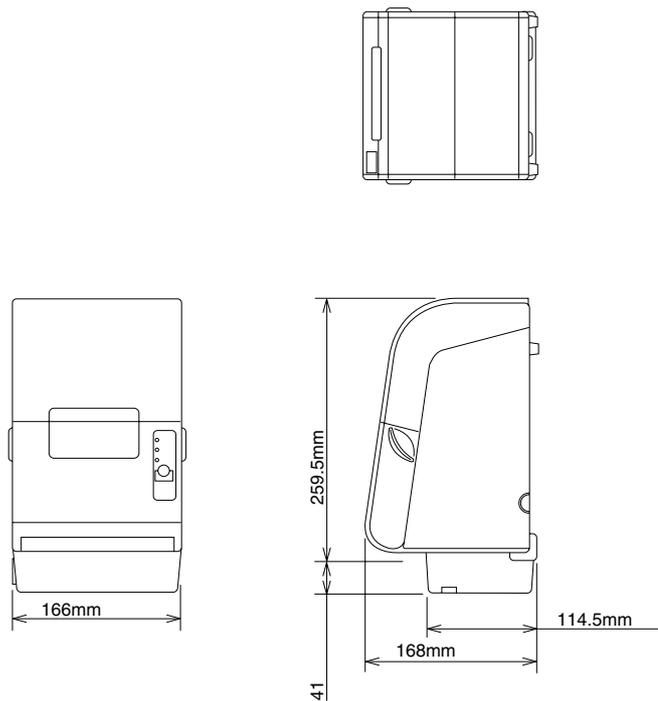


Figure A-7 When hanging on the wall with the power supply box

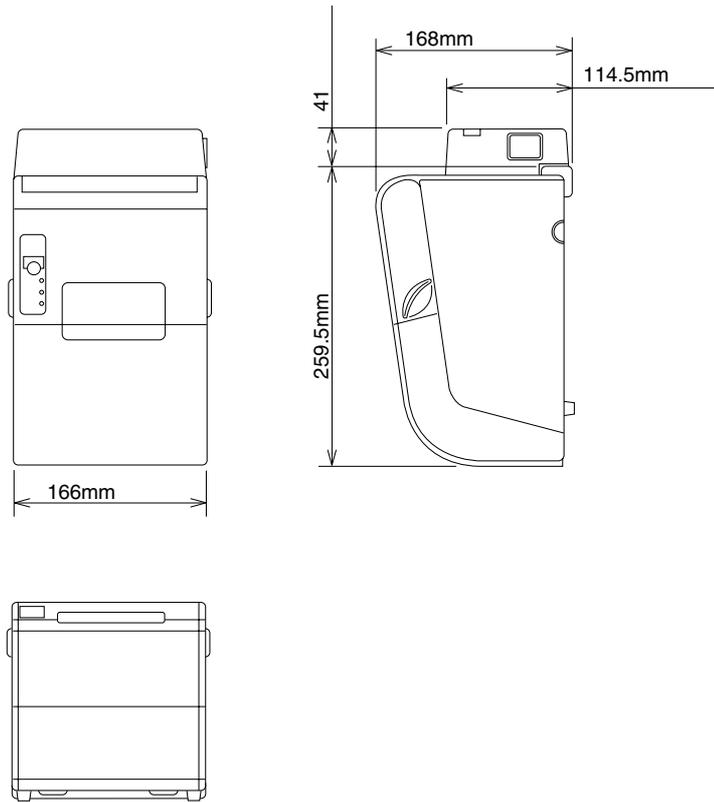

*Figure A-8 When placed horizontally with the power supply box*



# Confidential

## Drawer Kick-out Connector

The signal specified by the **ESC p** command is output to this connector. The host can check the status of input signal by the following commands.

- **DLE EOT**
- **GS r**
- **GS a (ASB)**

## Drawer Kick-out Specifications
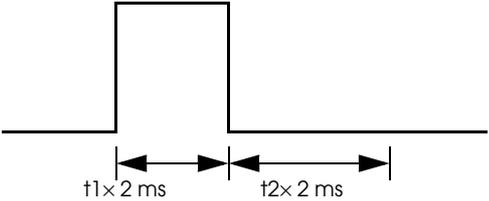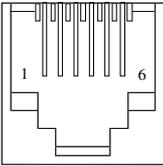
| Item                     |                                    | Specifications   |
|--------------------------|------------------------------------|--|
| Pin assignment           |                                    | See "Drawer kick-out connector pin assignment" table   |
| Model                    | Printer side                       | Molex 52018-6615 (or equivalent)   |
|                          | User side                          | 6-position 6-contact (RJ12 telephone jack)   |
| Drawer kick drive signal | Output voltage                     | Approx. 24 V   |
|                          | Output current                     | 1A or less   |
|                          | Output waveform                    |  <p>Outputs the waveforms in the figure "Drawer circuitry". (The <b>ESC p</b> command specifies ON time <b>t1</b> and OFF time <b>t2</b>.)</p> |
| Drawer open/close signal | Input signal level (connector pin) | "L"= 0 V<br>"H"= 2A`5 V  |
| Connector appearance     |                                    |    |

## Limitations


- ❑ The resistance of the drawer kick-out solenoid must not be less than that specified (24 Ω). Otherwise, an overcurrent could damage the solenoid.
- ❑ Drawer kick-out cable must be shielded.

- ❑ Two driver transistors cannot be driven simultaneously.
- ❑ Do not drive the drawer continuously.
- ❑ Be sure to use the printer power supply (conector pin 4) for the drawer power source.
- ❑ Do not connect a telephone line to the drawer kick-out connector.

**Pin Assignment**

| Pin No. | Signal name                   | Direction |
|---------|-------------------------------|-----------|
| 1       | Frame GND                     | --        |
| 2       | Drawer kick drive signal 1    | Output    |
| 3       | Drawer kick open/close signal | Input     |
| 4       | + 24V                         | --        |
| 5       | Drawer kick drive signal 2    | Output    |
| 6       | Signal GND                    | --        |

**Drawer Circuitry**

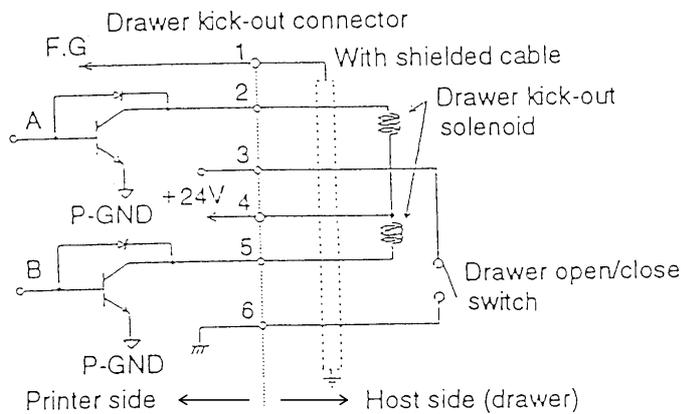

**Confidential**

**Appendix B:**

The table below shows the status when the parameter **t2** of **GS z 0** is 0 (default) or the internal buzzer is not configured by **ESC(A** command. When **t2 = 0**, **DLE ENQ 0** can be used to return to the online status. (The PAPER OUT LED will be off.)

When **t2 ≠ 0**, the printer recovers from the offline status automatically after a defined time is passed and the PAPER OUT LED will be off automatically.

When selecting the paper near end sensor enabled to stop printing with **ESC c 4**

| Status  | Paper Roll Status                                      | LED Status |       |                  | Communication status | Comments  |
|---|--|------------|-------|------------------|----------------------|---|
|   |  | POWER      | ERROR | PAPER OUT        |                      |   |
|  | Status (A)<br>Normal operation (with sufficient paper) | On         | Off   | Off              | Online               |   |
|   | Status (B)<br>Paper near end sensor                    | On         | On    | On (blinking) *1 | Offline              | *1 Refer to the DIP switch setting section on page 1-4 for the PAPER OUT LED and the internal buzzer.   |
|   | Status (C)<br>Pressing the FEED button in status (B)   | On         | On    | Off              | Offline              | Pressing the FEED button can turn off the PAPER OUT LED (and stop the buzzer sound). After pressing the FEED button, only the ERROR LED is on. Be sure to replace the paper roll. |
|   | Status (D)<br>After replacing paper roll               | On         | On    | On (blinking) *1 | Offline              | *1 Refer to the DIP switch setting section on page 1-4 for the PAPER OUT LED and the internal buzzer.   |
|   | Status (E)<br>Pressing FEED button in Status (D)       | On         | Off   | Off              | Online               |   |

When selecting the paper near end sensor disabled to stop printing with **ESC c 4**

| Status   | Paper Roll Status                                      | LED Status |       |                  | Communication status | Comments  |
|--|--|------------|-------|------------------|----------------------|---|
|  |  | POWER      | ERROR | PAPER OUT        |                      |   |
|  | Status (A)<br>Normal operation (with sufficient paper) | On         | Off   | Off              | Online               |   |
|  | Status (B)<br>Paper near-end sensor                    | On         | Off   | On (blinking) *1 | Online               | *1 Refer to the DIP switch setting section on page 1-4 for the PAPER OUT LED and the internal buzzer.   |
|  | Status (C)<br>Pressing the FEED button in status (B)   | On         | Off   | Off              | Online               | Pressing the FEED button can turn off the PAPER OUT LED (and stop the buzzer sound). After pressing the FEED button, only the ERROR LED is on. Be sure to replace the paper roll. |
|  | Status (D)<br>Paper-end sensor                         | On         | On    | On (blinking) *1 | Offline              | *1 Refer to the DIP switch setting section on page 1-4 for the PAPER OUT LED and the internal buzzer.   |
|  | Status (E)<br>Pressing the FEED button in status (D)   | On         | On    | Off              | Offline              | Pressing the FEED button can turn off the PAPER OUT LED (and stop a buzzer sound). After pressing the FEED button, only the ERROR LED is on. Be sure to replace the paper roll.   |
|  | Status (F)<br>After replacing paper roll               | On         | On    | On (blinking) *1 | Offline              | *1 Refer to the DIP switch setting section on page 1-4 for the PAPER OUT LED and the internal buzzer.   |
|  | Status (G)<br>Pressing the FEED button in status (F)   | On         | Off   | Off              | Online               |   |

Comparison table

| Specifications           | TM-U230   | TM-U210B           | TM-U300B                                       | Note, view point from application   |
|--------------------------|---|--------------------|--|---|
| Receive buffer           | 16K / 1K  | 1K / 40 Byte       | 1K / 40 Byte<br>512Byte/40Byte (300BM/U300BPM) | buffer. Caution is required when handling the transmission data.  |
| BUSY timing              | To be busy when buffer capacity reaches 128 bytes remain      | <-- 16 Byte        | <-- 10 Byte                                    | The BUSY timing differs in TM-U230 and TM-U300B.  |
|                          | To be released busy when buffer capacity becomes free 256byte | <-- 26 Byte        | <-- 20 Byte                                    |   |
| Buzzer                   | O<br>(Can be controlled by the buzzer control command ESC(A)) | X                  | X  |   |
| N.E sensor               | O<br>(as Standard)  | O<br>(as Option)   | O<br>(as Standard)                             | TM-U230 is equipped with N.E. sensor as standard. Caution is required when using ESC v, GS r, GS a and DEL ENQ. |
| Cover open sensor        | O   | X                  | O  | TM-U230 is equipped with cover open sensor as standard. Caution is required when using GS a and DEL ENQ.        |
| Pressure sensitive paper | X   | O                  | O  |   |
| D.K out put pulse width  | shortest range 100ms  | shortest range 2ms | shortest range 2ms                             | The DK-pulse specification of the drawer you are using should be confirmed.                                     |

## Appendix C

### Command comparison

| Command | Function                                  | TM-U300B | TM-U210B | TM-U230 | Remarks  |
|---------|---|----------|----------|---------|--|
| HT      | Horizontal tab                            | Yes      | Yes (*1) | Yes     | (*1) It is effective only when the receive buffer is set to 40 bytes by DipSW                      |
| LF      | Print and line feed                       | Yes      | Yes      | Yes     |  |
| CR      | Print and carriage                        | Yes      | Yes      | Yes     |  |
| DLE EOT | Real-time status transaction              | No       | Yes      | Yes     |  |
| DLE ENQ | Real-time request to printer              | No       | Yes      | Yes     |  |
| ESC SP  | Set right-side character spacing          | Yes      | Yes      | Yes     |  |
| ESC !   | Select print mode                         | Yes      | Yes      | Yes     |  |
| ESC %   | Select /cancel user-defined character set | Yes      | Yes(*1)  | Yes     | (*1) It is effective only when the receive buffer is set to 40 bytes by DipSW                      |
| ESC &   | Define user-defined characters            | Yes      | Yes(*1)  | Yes     | (*1) It is effective only when the receive buffer is set to 40 bytes by DipSW                      |
| ESC(A   | Control the beeper tones                  | No       | No       | Yes     | Newly added for internal buzzer control. Supported in the TM-U230 Firmware version 1.02 and above. |
| ESC *   | Select bit-image mode                     | Yes      | Yes      | Yes     |  |
| ESC -   | Turn underline mode on / off              | No       | Yes      | Yes     |  |
| ESC 2   | Select default line spacing               | Yes      | Yes      | Yes     |  |
| ESC 3   | Set line spacing                          | Yes      | Yes      | Yes     |  |
| ESC <   | Return home                               | Yes      | Yes      | Yes     |  |
| ESC =   | Select peripheral device                  | No       | Yes      | Yes     |  |
| ESC ?   | Cancel user-defined characters            | No       | Yes(*1)  | Yes     | (*1) It is effective only when the receive buffer is set to 40 bytes by DipSW                      |
| ESC @   | Initialize printer                        | Yes      | Yes      | Yes     |  |
| ESC D   | Set horizontal tab positions              | Yes      | Yes(*1)  | Yes     | (*1) It is effective only when the receive buffer is set to 40 bytes by DipSW                      |
| ESC E   | Turn emphasized mode on / off             | No       | Yes      | Yes     |  |
| ESC G   | Turn double-strike mode on / off          | No       | Yes      | Yes     |  |
| ESC J   | Print and feed paper                      | Yes      | Yes      | Yes     |  |
| ESC K   | Print and reserve feed                    | No       | Yes      | Yes     |  |

## Appendix C

### Command comparison

| Command | Function  | TM-U300B        | TM-U210B       | TM-U230         | Remarks  |
|---------|---|-----------------|----------------|-----------------|--|
| ESC R   | Select an international character set             | <b>Yes(*5)</b>  | <b>Yes(*5)</b> | <b>Yes(*6)</b>  | (*5) Supporting international character set, USA, France, Germany, U.K, Denmark I ,Sweden, Italy, Spain, Japan, Norway, Denmark II<br>(*6) Supporting international character set, USA, France, Germany, U.K, Denmark I ,Sweden, Italy, Spain, Japan, Norway, Denmark II, Spain II, Latin America, Korea |
| ESC U   | Turn unidirectional printing mode on / off        | <b>Yes</b>      | <b>Yes</b>     | <b>Yes</b>      |  |
| ESC a   | Select justification                              | <b>No</b>       | <b>Yes</b>     | <b>Yes</b>      |  |
| ESC c 3 | Select paper sensor(s) to output paper-end signal | <b>Yes (*3)</b> | <b>Yes</b>     | <b>Yes</b>      | (*3) It is effective only for Parallel interface model   |
| ESC c 4 | Select paper sensor(s) to stop printing           | <b>Yes</b>      | <b>Yes</b>     | <b>Yes</b>      |  |
| ESC c 5 | Enable / disable panel buttons                    | <b>Yes</b>      | <b>Yes</b>     | <b>Yes</b>      |  |
| ESC d   | Print and feed <i>n</i> lines                     | <b>Yes</b>      | <b>Yes</b>     | <b>Yes</b>      |  |
| ESC e   | Print and reserve feed <i>n</i> lines             | <b>No</b>       | <b>Yes</b>     | <b>Yes</b>      |  |
| ESC i   | Execute partial-cut(one point left uncut)         | <b>Yes</b>      | <b>No</b>      | <b>No</b>       |  |
| ESC m   | Execute partial-cut(two points left uncut)        | <b>Yes</b>      | <b>No</b>      | <b>No</b>       |  |
| ESC p   | Generate pulse                                    | <b>Yes</b>      | <b>Yes</b>     | <b>Yes</b>      | the shortest pulse range 100ms in case TM-U230<br>the shortest pulse range 2ms in case TM-U300B/U210B  |
| ESC r   | Select print color                                | <b>Yes</b>      | <b>Yes</b>     | <b>Yes</b>      |  |
| ESC t   | Select character code table                       | <b>Yes</b>      | <b>Yes</b>     | <b>Yes</b>      |  |
| ESC u   | Transmit peripheral device status                 | <b>Yes(*4)</b>  | <b>No</b>      | <b>No</b>       | (*4) It is effective only for Serial interface model   |
| ESC v   | Transmit printer status                           | <b>Yes(*4)</b>  | <b>No</b>      | <b>No</b>       | (*4) It is effective only for Serial interface model   |
| ESC {   | Turn upside-down printing mode on / off           | <b>Yes</b>      | <b>Yes</b>     | <b>Yes</b>      |  |
| GS ( A  | Execute test print                                | <b>No</b>       | <b>Yes</b>     | <b>Yes</b>      |  |
| GS E    | Set head energizing time                          | <b>Yes</b>      | <b>No</b>      | <b>No</b>       |  |
| GS I    | Transmit printer ID                               | <b>No</b>       | <b>Yes</b>     | <b>Yes</b>      |  |
| GS V    | Select cut mode and cut paper                     | <b>No</b>       | <b>Yes</b>     | <b>Yes (*2)</b> | (*2) Newly added GS V 98 for paper saving.   |
| GS a    | Enable / disable Automatic Status Back (ASB)      | <b>No</b>       | <b>Yes</b>     | <b>Yes</b>      |  |
| GS r    | Transmit status                                   | <b>No</b>       | <b>Yes</b>     | <b>Yes</b>      |  |
| GS z 0  | Set on-line recovery wait time                    | <b>No</b>       | <b>Yes</b>     | <b>Yes</b>      |  |

## Appendix C

### Opos function properties comparison

| Name                | Function  | TM-U300B      | TM-U210B      | TM-U230       | Remarks   |
|---------------------|---|---------------|---------------|---------------|---|
| CapConcurrentJrnRec | Property to determine if concurrent printing on the journal and receipt stations is possible.                 | FALSE         | FALSE         | FALSE         |   |
| CapConcurrentJrnSlp | Property to determine if concurrent printing on the journal and slip station is possible.                     | FALSE         | FALSE         | FALSE         |   |
| CapConcurrentRecSlp | Property to determine if concurrent printing on the receipt and slip stations is possible.                    | FALSE         | FALSE         | FALSE         |   |
| CapCoverSensor      | Property to determine if the printer's cover is open.   | FALSE         | FALSE         | TRUE          |   |
| CapTransaction      | Property to determine if the printer transaction are supported.   | TRUE          | TRUE          | TRUE          |   |
| CapCharacterSet     | Holds the default Character set capability.   | PTR_CCS_ASCII | PTR_CCS_ASCII | PTR_CCS_ASCII |   |
| CapPowerReporting   | Property to determine if the power states are supported   | Note(*1)      | Note(*2)      | Note(*3)      | (*1) If serial interface model, the state is OPOS_PR_STANDARD<br>If parallel interface model, the state is OPOS_PR_NOTE<br>(*2) If serial or USB interface model, the state is OPOS_PR_STANDARD<br>If parallel interface model, the state is OPOS_PR_NO<br>(*3) If serial or USB interface model, the state is OPOS_PR_STANDARD<br>If parallel or EtherNet interface model, the state is OPOS_PR_NO |
| CapRec2Color        | Property to determine if 2 color printing functions are available on the receipt station.                     | TRUE          | TRUE          | TRUE          |   |
| CapRecBarCode       | Property to determine if bar code printing functions are available on the receipt station.                    | FALSE         | FALSE         | FALSE         |   |
| CapRecBold          | Property to determine if bold printing functions are available on the receipt station.                        | FALSE         | TRUE          | TRUE          |   |
| CapRecDhigh         | Property to determine if double high printing functions are available on the receipt station.                 | TRUE          | TRUE          | TRUE          |   |
| CapRecDwide         | Property to determine if double wide printing functions are available on the receipt station.                 | TRUE          | TRUE          | TRUE          |   |
| CapRecDwideDhigh    | Property to determine if double wide and double high printing functions are available on the receipt station. | TRUE          | TRUE          | TRUE          |   |
| CapRecEmptySensor   | Property to determine if there is a paper out sensor on the receipt station.                                  | FALSE         | TRUE          | TRUE          |   |
| CapRecItalic        | Property to determine if italic printing functions are available on the receipt station.                      | FALSE         | FALSE         | FALSE         |   |

## Appendix C

### Opos function properties comparison

| Name                | Function   | TM-U300B    | TM-U210B    | TM-U230     | Remarks  |
|---------------------|--|-------------|-------------|-------------|--|
| CapRecLeft90        | Property to determine if 90 degree left printing functions are present on the receipt station.       | FALSE       | FALSE       | FALSE       |  |
| CapRecNearEndSensor | Property to determine if there is a near end sensor on the receipt station.                          | FALSE       | Note(*4)    | <b>TRUE</b> | (*4) The paper near end sensor is option. If sensor is present, it should be set as installed on the device specific setting of OPOS-setup utility |
| CapRecPapercut      | Property to determine if there is paper cutting functions available on the receipt station.          | <b>TRUE</b> | <b>TRUE</b> | <b>TRUE</b> |  |
| CapRecPresent       | Property to determine if the receipt printing station is present.                                    | <b>TRUE</b> | <b>TRUE</b> | <b>TRUE</b> |  |
| CapRecRight90       | Property to determine if 90 degree right printing functions are available on the receipt station.    | FALSE       | FALSE       | FALSE       |  |
| CapRecRotate180     | Property to determine if 180 degree rotated printing functions are available on the receipt station. | <b>TRUE</b> | <b>TRUE</b> | <b>TRUE</b> |  |
| CapRecStamp         | Property to determine if stamp printing is possible on the receipt station.                          | FALSE       | FALSE       | FALSE       |  |
| CapRecUnderline     | Property to determine if underline printing functions are available on the receipt station.          | <b>TRUE</b> | <b>TRUE</b> | <b>TRUE</b> |  |
| CapRecBitmap        | Property to determine if bitmap printing functions are available on the receipt station.             | <b>TRUE</b> | <b>TRUE</b> | <b>TRUE</b> |  |

## Appendix C

### Opos Direct-IO usage comparison

| Command | Meaning                            | TM-U300B   | TM-U210B   | TM-U230         | Remarks  |
|---------|------------------------------------|------------|------------|-----------------|--|
| DLE ENQ | Real time status requests          | No         | <b>Yes</b> | <b>Yes</b>      | Use command data as parameter in DirectIO                      |
| ESC %   | Download character set load/cancel | <b>Yes</b> | <b>Yes</b> | <b>Yes</b>      | Use command data as parameter in DirectIO                      |
| ESC &   | Download character definition      | <b>Yes</b> | <b>Yes</b> | <b>Yes</b>      | Use the defined Method for DirectIO                            |
| ESC <   | Return home                        | <b>Yes</b> | <b>Yes</b> | <b>Yes</b>      | Use command data as parameter in DirectIO                      |
| ESC ?   | Download character destruction     | No         | <b>Yes</b> | <b>Yes</b>      | Use command data as parameter in DirectIO                      |
| ESC D   | Set the horizontal tab positions   | No         | <b>Yes</b> | <b>Yes</b>      | Use command data as parameter in DirectIO                      |
| ESC c 5 | Panel switch enable/disable        | <b>Yes</b> | <b>Yes</b> | <b>Yes</b>      | Use command data as parameter in DirectIO                      |
| ESC !   | Select print mode(s)               | <b>Yes</b> | No         | No              | Use command data as parameter in DirectIO                      |
| ESC K   | Print and reverse feed paper.      | No         | <b>Yes</b> | <b>Yes</b>      | Use command data as parameter in DirectIO                      |
| ESC e   | Print and reverse feed n lines     | No         | <b>Yes</b> | <b>Yes</b>      | Use command data as parameter in DirectIO                      |
| GS V    | Select cut mode and cut paper      | No         | No         | <b>Yes (*1)</b> | (*1)<br>Use the defined Method, only supported for GS V 98 use |

**Confidential**

**Confidential**

**EPSON**

**SEIKO EPSON CORPORATION**

Printed in Japan