



COMMERCIAL LOUDSPEAKER OWNERS MANUAL

OM-70, rev.1.0

C O N T E N T S

I N T R O D U C T I O N 1

B R E A K I N P E R I O D 1

F E A T U R E S 2

R E M O V A B L E C O N N E C T O R 3

W I R I N G D I A G R A M S 4

V O L T A G E S E L E C T O R 5

S T R A I N R E L I E F 5

S A F E T Y C O M P L I A N C E 6


S P E C I F I C A T I O N S 7

I N S T A L L A T I O N 8

W A R R A N T Y 9

INTRODUCTION




ongratulations on your purchase of an RBH loudspeaker system! Your speakers are the result of many years of research and development dedicated to producing high quality products for home audio and audio/video systems.

This manual contains features, installation procedures and specifications for Commercial 70 Volt loudspeaker system. We recommend that you thoroughly read through the material contained in this manual before connecting your loudspeakers. This will ensure that you have an understanding of how to install the speakers for optimum performance.

BREAK IN PERIOD



lan on giving your speakers 10-15 hours of playing time to adequately break in. As the speakers break in the driver suspension will loosen up. The result will be an increase in low frequency response, improved definition, clarity and detail.

F E A T U R E S



BH Commercial loudspeakers consist of two models, the A-615-70 and the MC-615-70. Both models incorporate metal enclosures to reinforce bass frequencies allowing a deeper and more controlled bass response. Both models also utilize an acoustic suspension design and offer operation in either 8 Ohm or 70 volt modes.

A powerful magnet, extended voice coil and bumped back plate give the bass/midrange drivers high excursion capability. This ensures accurate dynamic reproduction. The MC-615-70 uses a proprietary aluminum woofer and tweeter. The special aluminum cone material combines stiffness, low mass and self damping properties in a manner that allows virtually uncolored presentation of program material. Both tweeters feature Ferro Fluid™ liquid cooling to allow greater power handling.


Steep acoustic slope crossovers are used to integrate drivers. The use of steep crossover slopes allows high power handling, minimizes driver interaction anomalies, and maximizes the clarity with which each driver is able to produce its respective frequency band. Sophisticated computer modeling techniques are used extensively in the RBH loudspeaker design process.

A switch connected to the tweeter allows you to custom tailor the sound to your tastes. This switch is located next to the woofer on the front baffle of the speaker and has three positions: +3dB, 0, -3dB. The +3 position increases output of the tweeter, the -3 position decreases the output of the tweeter relative to the woofer. The 0 position is the factory setting and generally provides the most natural response from the speaker.

The use of a 70 volt transformer allows many speakers to be used together by running a connecting wire from one speaker to the next, without concern for the impedance seen by the amplifier. A 70 volt amplifier must be used to accomplish this. Please refer to the following pages for instruction and wiring diagrams to properly install a 70 volt system.

THE REMOVABLE CONNECTOR

This connector detaches from the main housing of the speaker for ease in connecting the speaker wire. The bare wire must be inserted and securely fastened by tightening the screws. The connector has 4 terminals as shown in the diagram below.

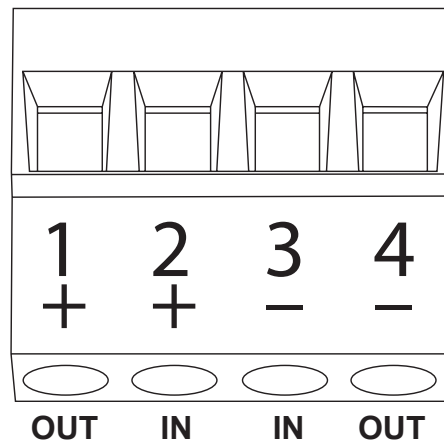


Positions 2 and 3 are inputs from either the amplifier or a previous speaker. They are the same inputs used for 8 Ohm operation. Positions 1 and 4 are outputs to succeeding speakers in 70 volt operation. We suggest carefully reading the WIRING DIAGRAM section of this manual to determine the best wiring scheme for your particular installation.

This removable connector will accept a maximum wire gauge of 14 AWG and a minimum wire gauge of 18 AWG. Please refer to the NEC (National Electrical Code) for further information regarding the permissible wire size.

WIRING DIAGRAMS


Parallel Connection

Connect the speaker wire going to succeeding speakers to positions 2 and 3. If needing to service system, this will allow the removable connector to be removed from the speaker with all other speakers in the line continuing to play and operate normally. This diagram is shown here:

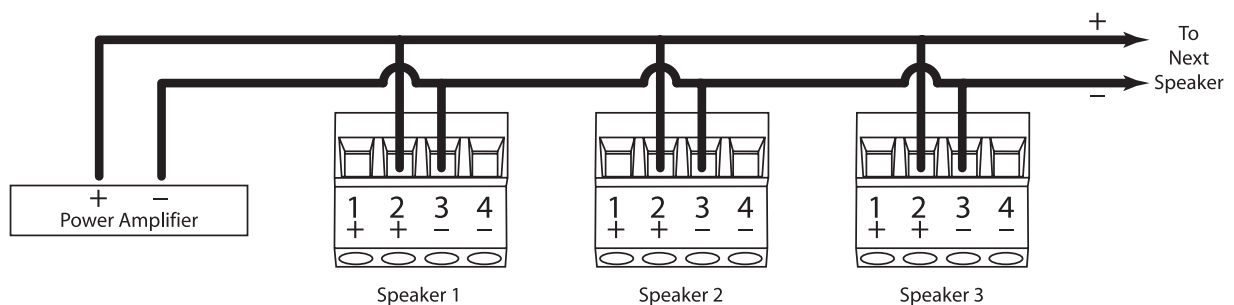

Loop Thru


Positions 1 and 4 are internally connected to positions 2 and 3 respectively. This allows connections to succeeding speakers using positions 1 and 4. If needing to service the system, removing the removable connector from one speaker will cause all succeeding speakers to stop playing. This diagram is shown here:

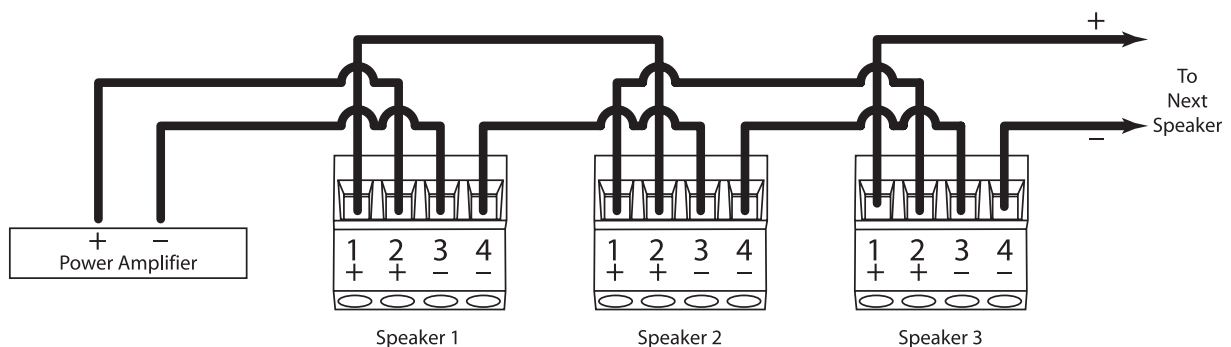

VOLTAGE SELECTOR



As previously mentioned, the A-615-70 and MC-615-70 can be used in a 70 volt system or as a standard 8 Ohm in-ceiling loudspeaker. The voltage selector knob allows you to properly set the speaker to 8 Ohm operation or to choose from 2, 4, 8, 16 and 32 Watt taps in 70 volt operation.

In 70 volt operation, be sure to appropriately set the selector according to the power output of the amplifier being used and the number of speakers being installed. In 8 Ohm operation, be sure to set the selector to the 8 Ohm setting. A picture of the voltage selector (set to 8 Ohms) is shown below.

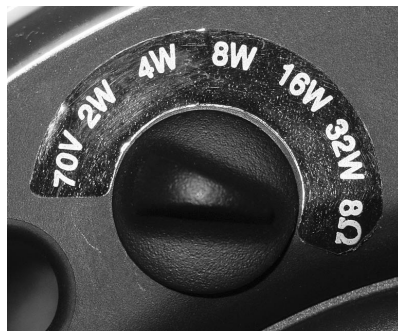

STRAIN RELIEF


The pictures below depict the proper way to insert and tighten down the wire in the strain relief fitting.

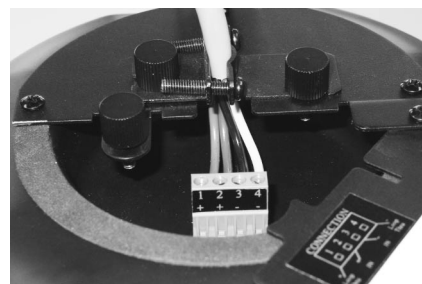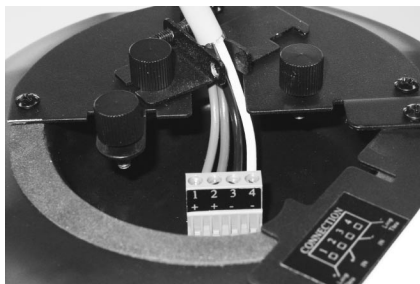


SAFETY COMPLIANCE



UL LOGO

omplies with the requirements of UL-2043 fire tests for heat and visible smoke and visible smoke release for discrete products and the accessories installed in air handling spaces, NFPA-70 National Electric Code 2002, Article 300-22 (C), and NFPA-90A installation of air conditioning and ventilation systems, Section 2-3.10.1 (a), Exception 3. Listed UL1480 Speakers for Professional/Commercial use.

CE LOGO

hese products are in compliance with the EMC Directive 89/336/EEC and Article 10 (1) of the directive. In compliance with Technical Regulations EN55013-1 and EN50082-1.

SPECIFICATIONS

8 Ohm Operation

	A615-70	MC615-70
Frequency Response:	55Hz - 20kHz	50 Hz - 20kHz
Sensitivity:	90 dB 1 watt/1 meter	88 dB 1 watt/1 meter
Recommended Amplifier Power:	20 - 80 Watts	20 - 120 Watts
Maximum Power Handling:	50 Watts	50 Watts
Drive Units:	1 1" silk dome tweeter 1 6.5" polypropylene woofer	1 1" aluminum dome tweeter 1 6.5" aluminum cone woofer
Crossover Frequency:	3000 Hz	3000 Hz
Filter Slope:	12 dB/octave	12 dB/octave
Impedance:	8 Ohms	8 Ohms
Finished Dimensions:	10.25" Diameter 9.5" Depth	10.25" Diameter 9.5" Depth
Cutout Dimensions:	8.75" Diameter	8.75" Diameter
Weight:	8 lbs.	8 lbs.

70 Volt Operation

	A615-70	MC615-70
70 Volt Taps:	2, 4, 8, 16, 32 Watts	2, 4, 8, 16, 32 Watts

It is the policy of RBH Sound to continuously incorporate improvements into products.
All specifications are subject to change without notice.

I N S T A L L A T I O N

IMPORTANT:

This product must be installed in accordance with your local area's building codes and regulations. This may require use of an additional support bracket, depending on the installation. In this case, use the MBR-70 described below.


SEISMIC TAB:

For proper installation, the seismic tab **MUST** be secured to a secondary support in the event of failure of the primary support structure.

MBR-70: (sold separately)

The MBR-70 consists of a round bracket and two rails designed to be used with suspension ceilings. The rails will fit either 24" or 600mm tiles. They are designed to rest on top of the tile without the "V" end of the rail grabbing the grid struts. In the event that the tile falls, the "V" end of the rail will grab the strut holding the speaker in place. The MBR-70 is not required for installation when the speaker is being installed in drywall or other rigid material. When installing in these surfaces, use attached swivel mounts and hole locating template included in the box with each loudspeaker.

For suspension ceiling installation instructions, refer to the installation manual included with the MBR-70.

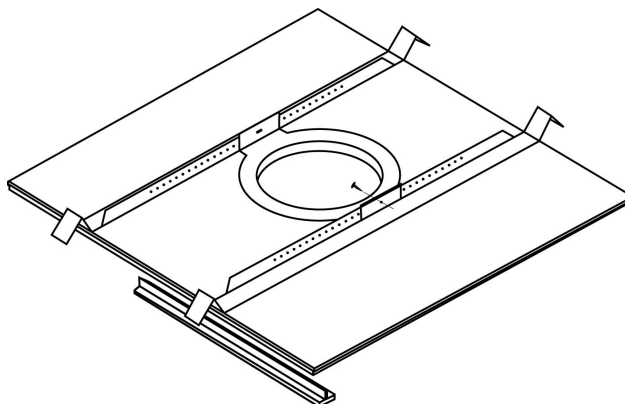

W A R R A N T Y

Your RBH Sound Commercial loudspeaker is covered by a limited warranty against defects in materials and workmanship for a period of 25 years from the original date of purchase. This warranty is provided by the authorized RBH Sound dealer where the loudspeaker was purchased. Warranty repair will be performed only when your purchase receipt is presented as proof of ownership and date of purchase. Defective parts will be repaired or replaced without charge by your dealer's store or the location designated by your dealer that is authorized to service RBH products. Charges for unauthorized service and transportation cost are not reimbursable under this warranty. This warranty becomes void if the product has been damaged by alteration, misuse or neglect. The warrantor assumes no liability for property damage or any other incidental or consequential damage whatsoever which may result from the failure of this product. Any and all warranties of merchantability and fitness implied by law are limited to the duration of this express warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

RBH Sound, Inc.

976 N. Marshall Way • Bldg. 2, #4 • Layton, Utah • USA • 84041
800.543.2205 • 801.543.2200 • FAX 801.543.3300 • www.rbhsound.com

Copyright © 2003, RBH Sound, Inc. All Rights Reserved

REDEFINING THE WAY YOU EXPERIENCE SOUND