


Honeywell

**HW4000 Portable Generator
Owner's Manual**

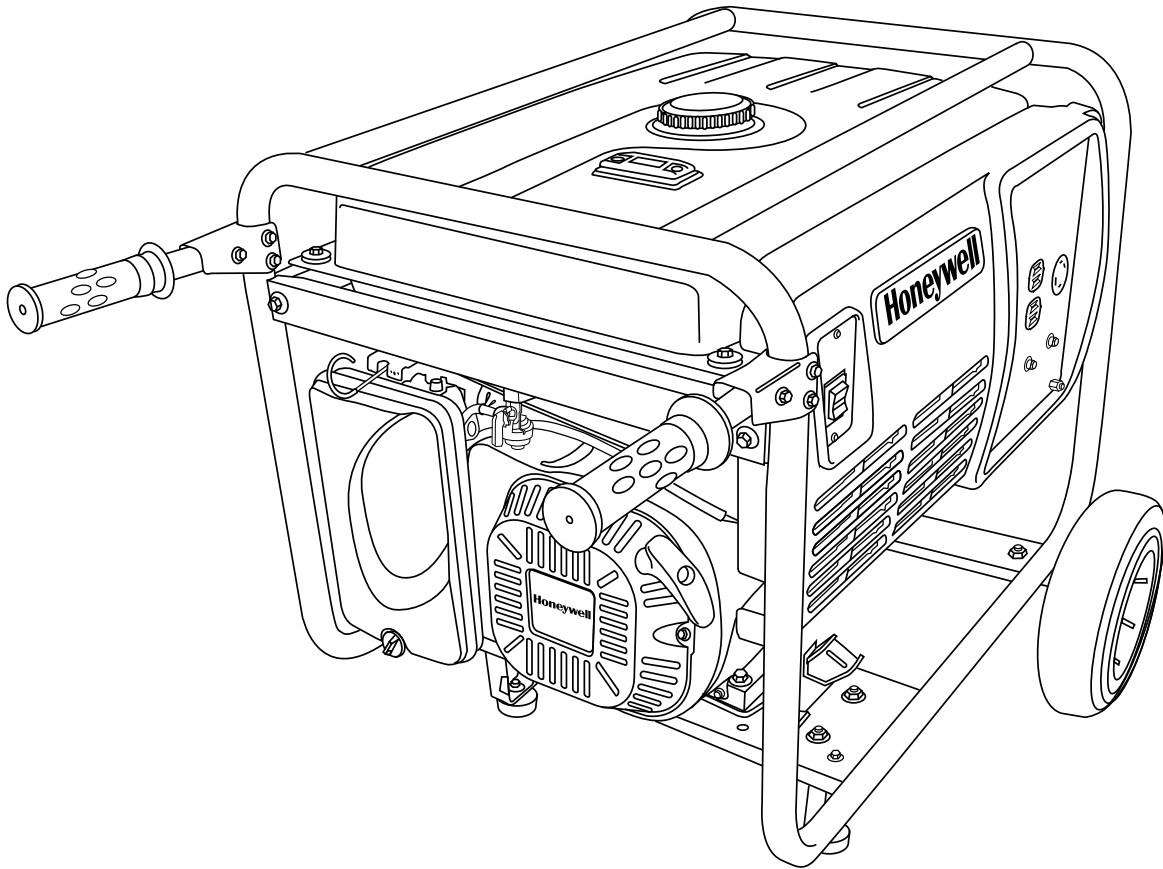

Portable Gasoline Generator

Read and Save These Instructions


For product inquiries or support, please visit www.honeywellgenerators.com
or call toll-free at 1-888-494-3571.

Congratulations on owning a Honeywell portable generator

WARNING	
	This manual contains important instructions for operating this generator. For your safety, and the safety of others, be sure to read this manual thoroughly before operating the generator. Failure to properly follow all instructions and precautions can cause you and others to be seriously hurt or killed.

Please use spaces provided below to write down important information about your generator. You may be asked to provide this information should you require product service or support.

Identification information specific to your generator (model number and serial number) can be found on generator's nameplate.

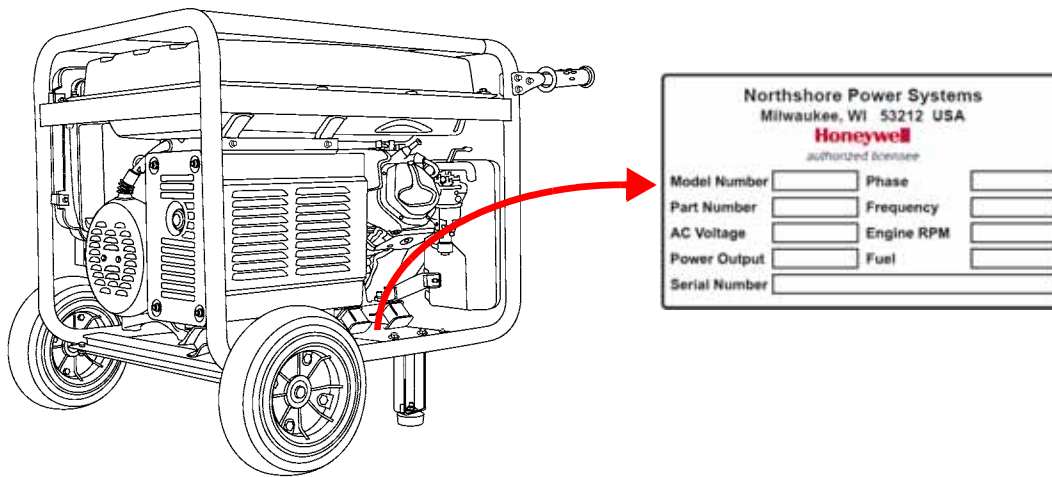

Date of Purchase:

Store/Dealer Purchased From:

Generator Model Number:

Generator Serial Number:

PRODUCT REGISTRATION



To register your product, please complete the information below and mail to the mailing address at the end of form, or register online at www.honeywellgenerators.com

1 – PERSONAL INFORMATION

FIRST NAME

INITIAL LAST NAME

--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

- CHECK HERE TO RECEIVE PRODUCT REMINDERS AND OFFERS VIA EMAIL
- CHECK HERE TO RECEIVE INFORMATION FROM OTHER COMPANIES VIA EMAIL, UNDERSTANDING YOUR EMAIL ADDRESS MAY BE SHARED OR COMBINED WITH INFORMATION FROM OTHER SOURCES

2 – PRODUCT INFORMATION

DATE OF PURCHASE

/ /

MM DD YYYY

MODEL NUMBER*: _____

SERIAL NUMBER*: _____

*Found on nameplate of generator

PURCHASE LOCATION:

IN-STORE

ONLINE

STORE

NAME _____

PURCHASE PRICE

\$_____ .00

FEATURES INFLUENCING PRODUCT PURCHASE

- | | |
|---|---|
| <input type="checkbox"/> BRAND REPUTATION | <input type="checkbox"/> EASE OF USE |
| <input type="checkbox"/> PORTABILITY | <input type="checkbox"/> SIZE/WEIGHT |
| <input type="checkbox"/> POWER RATING | <input type="checkbox"/> STYLE/APPEARANCE |
| <input type="checkbox"/> PRICE | <input type="checkbox"/> WARRANTY |

HOW DID YOU BECOME AWARE OF THIS PRODUCT?

- | | |
|-----------------------------------|---|
| <input type="checkbox"/> IN-STORE | <input type="checkbox"/> RADIO/TV |
| <input type="checkbox"/> INTERNET | <input type="checkbox"/> STORE CIRCULAR |
| <input type="checkbox"/> PRINT | <input type="checkbox"/> WORD OF MOUTH |

OTHER BRANDS CONSIDERED WHEN SHOPPING FOR THIS PRODUCT:

PRIMARY USE FOR PRODUCT:

- TOOL POWER
- RECREATION POWER
- EMERGENCY POWER

PRIMARY LOCATION FOR PRODUCT USE:

- HOME
- WORK

TYPE OF WORK, IF PRODUCT BEING USED FOR PROFESSION:

WHAT OTHER TYPE OF POWER EQUIPMENT ARE INTERESTED IN PURCHASING IN THE FUTURE?

WHO DECIDED TO PURCHASE THIS PRODUCT?

3 – DEMOGRAPHIC INFORMATION

GENDER:

- MALE
- FEMALE

MARITAL STATUS:

- MARRIED
- SINGLE

DATE OF BIRTH:

 / /
 MM DD YYYY

INCLUDING YOUR SELF, HOW MANY PEOPLE LIVE IN YOUR HOUSEHOLD?

NUMBER OF CHILDREN UNDER 18 LIVING IN YOUR HOUSEHOLD:

PRIMARY RESIDENCE:

- OWN
- RENT

EDUCATION

- SOME HIGH SCHOOL
- HIGH SCHOOL DIPLOMA
- COLLEGE DEGREE
- GRADUATE DEGREE

HOUSEHOLD INCOME

- | | |
|--|--|
| <input type="checkbox"/> LESS THAN \$15,000 | <input type="checkbox"/> \$100,000 - \$124,999 |
| <input type="checkbox"/> \$15,000 - \$29,999 | <input type="checkbox"/> \$125,000 - \$149,000 |
| <input type="checkbox"/> \$30,000 - \$49,999 | <input type="checkbox"/> \$150,000 - \$174,999 |
| <input type="checkbox"/> \$50,000 - \$79,999 | <input type="checkbox"/> \$175,000 - \$199,999 |
| <input type="checkbox"/> \$80,000 - \$99,999 | <input type="checkbox"/> \$200,000 OR OVER |

PRIMARY METHOD OF PURCHASING HOUSEHOLD ITEMS:

- IN-STORE
- ONLINE
- TV
- MAIL ORDER

TYPES OF CREDIT CARDS HELD BY HOUSEHOLD MEMBERS:

- VISA/MASTER CARD
- DISCOVER
- AMERICAN EXPRESS
- GAS/RETAIL
- OTHER
- NONE

HOUSEHOLD INTERESTS:

- HOME IMPROVEMENT
- AUTOMOTIVE WORK
- CAMPING
- OTHER:

THANK YOU FOR REGISTERING YOUR PRODUCT. THE INFORMATION YOU PROVIDED MAY BE USED FOR MARKETING PURPOSES IN ORDER TO OFFER YOU VARIOUS PRODUCT INFORMATION AND OFFERS.

CHECK HERE IF YOU DO NOT WISH TO BE CONTACTED ABOUT SPECIAL OFFERS.

PLEASE RETURN THIS FORM TO THE FOLLOWING ADDRESS:

Northshore Power Systems, LLC
 4425 N Port Washington Road
 Suite 105
 Milwaukee WI 53212-1082

PLEASE MAIL THIS FORM IN A SEALED ENVELOPE. DO NOT STAPLE.

CONTENTS

IMPORTANT SAFETY RULES.....	1
Safety Messages	1
Location of Important Labels	3
GETTING STARTED	5
Unpacking Guidelines	5
Record Generator Information	6
Assembly	7
Grounding the Generator	10
Using Generator for Backup Power	11
COMPONENTS	13
OPERATION	15
Preparing for Operation	15
Generator Location	15
Starting Generator	15
Stopping Generator	16
High Altitude Operation	16
Powering Appliances	16
MAINTENANCE	19
Maintenance Schedule	19
Engine Oil	20
Adding Fuel	22
Air Filter Maintenance	23
Cleaning Fuel Sediment Cup	24
Spark Plug Service	24
Cleaning Spark Arrestor Screen	25
Transporting Generator	26
Storing Generator	26
TROUBLESHOOTING	29
SPECIFICATIONS	31
WARRANTIES	33
NORTHSHORE POWER SYSTEMS EMISSIONS CONTROL WARRANTY	33
NORTHSHORE POWER SYSTEMS LIMITED WARRANTY	35
INDEX	37
HW4000 MAINTENANCE PARTS	39

THIS PAGE INTENTIONALLY LEFT BLANK

SAVE THESE INSTRUCTIONS

IMPORTANT SAFETY RULES

⚠ WARNING



ANYONE using or servicing generator must read, understand, and follow all safety and operation instructions provided in product manual. Failure to closely follow these instructions can result in circumstances leading to death, serious injury, and property damage.





(i) NOTE:

Since there are many variations in the circumstances surrounding the installation, operation, and maintenance of this generator unit, we cannot possibly anticipate or provide advice or safety messages to cover every situation.

Safety Messages

Signal Words

Safety messages are provided throughout this manual to help prevent personal injury and equipment damage. All safety messages are introduced by a signal word indicating the hazard level.

	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury to the operator or to bystanders.
	Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury to the operator or to bystanders.
	Indicates a potentially hazardous situation which, if not avoided, may result in moderate or minor injury to the operator or to bystanders.
	Indicates a situation which, if not avoided, may result in damage to generator components.

Hazard Symbols and Meanings

In addition to the signal words described above, the following symbols may be used to draw your attention to specific types of hazards.



Explosion



Toxic fumes



Fire



Chemical burn



Electrical shock



Hot surface

⚠ DANGER

Using a generator indoors **CAN KILL YOU IN MINUTES**. Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.




NEVER use inside a home or garage, **EVEN IF** doors and windows are open.



Only use **OUTSIDE** and far away from windows, doors, and vents.


Electric Shock Hazards


⚠ WARNING	
	Generator produces powerful voltage that can cause death or great physical harm.
<ul style="list-style-type: none"> • When using generator for backup power, notify utility company. Use approved transfer equipment to isolate generator from electric utility. • NEVER connect to a building's electrical system unless a transfer switch has been installed by a qualified electrician. • NEVER touch bare wires or receptacles. • NEVER use generator with electrical cords that are worn, frayed, bare, or otherwise damaged. • NEVER operate generator in rain or snow, or when the generator is set on wet surface. 	

Generator Damage Hazards

NOTICE	
Improper treatment or misuse of generator can cause permanent damage.	
<ul style="list-style-type: none"> • NEVER tamper with governed speed. Generator supplies correct rated frequency and voltage when running at governed speed. • NEVER modify generator in any way. • Damage to generator caused by misuse or modification is not covered under Warranty. 	


Fire and Burn Hazards

⚠ WARNING	
	Fuel and its vapors are extremely flammable and explosive under certain conditions.
<ul style="list-style-type: none"> • Refuel generator only outdoors, in a well-ventilated area. • NEVER enclose the generator in any structure. • Keep generator at least 3 feet (1 meter) away from buildings and other equipment during operation. • NEVER fill fuel tank while the engine is running. Turn generator OFF and allow to cool before filling with fuel. • NEVER smoke or allow flames or sparks near the generator or where gasoline is stored. • NEVER overfill the fuel tank (there should be no fuel in the filler neck). After refueling, make sure the tank cap is closed properly and securely. • Be careful not to spill fuel when refueling. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, be sure the area is dry before starting the engine. • Avoid repeated or prolonged contact with skin or breathing of vapor. 	

⚠ WARNING	
	The muffler becomes very hot during operation and remains hot for a while after stopping the engine.
<ul style="list-style-type: none"> • NEVER touch hot surfaces and avoid hot gases. • Let engine cool before storing the generator indoors. 	

Location of Important Labels

Your generator is packaged with several labels which provide important safety and maintenance information. Samples of these labels are provided below. Should any of these labels become illegible or damaged, contact Customer Hotline at 1-888-494-3571 to request replacements.

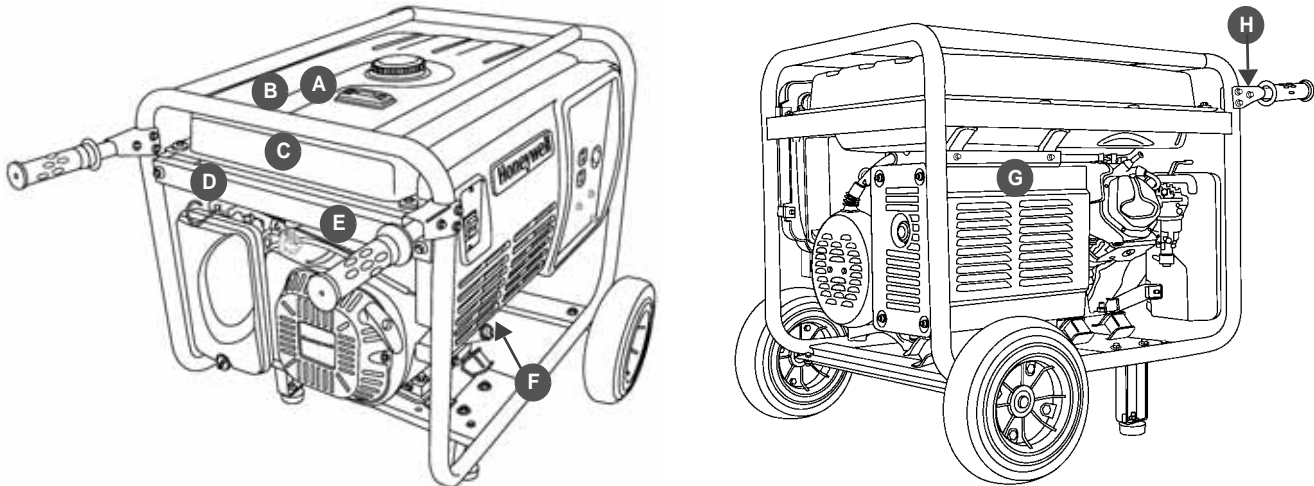


	PRODUCT LABEL	PART NUMBER
A		100884A
B		100886A
C		100887A
D		100883A
E		100879A
F		100882A
G		100885A
H		100881A


THIS PAGE INTENTIONALLY LEFT BLANK

GETTING STARTED

Use the information in this section to get your generator ready for operation.

⚠ WARNING	
	ANYONE using the generator must read, understand, and follow all safety and operation instructions provided in the product manual. Failure to closely follow these instructions can result in circumstances leading to death, serious injury, and property damage.

Unpacking Guidelines


⚠ CAUTION	
	Generator is heavy! Lifting generator can cause back or other bodily injury. NEVER lift generator without assistance.

1. Set carton on a rigid, flat surface.
2. Remove all contents, except generator unit.
3. Open carton completely by using a utility knife to cut each corner (from top to bottom).

Package Checklist

Verify that all of the following items are included in the generator package:

- HW4000 Portable Generator
- Wheel Kit (including handle assembly and assembly hardware)
- 1 L Engine Oil
- Paper Funnel
- Smart Start Instruction Card

⚠ WARNING	
	The Smart Start instruction card is NOT intended to replace information provided in this Owner's Manual. Be sure to thoroughly read and understand all information provided in Owner's Manual before operating generator. Failure to properly follow all instructions and precautions can cause you and others to be seriously hurt or killed.

- Owner's Manual

Inspect for Damage

Carefully inspect generator for any damage that may have occurred during shipment. If loss or damage is noted after delivery, separate damaged materials and call Customer Hotline at 1-888-494-3571.

Record Generator Information

It is recommended that you take a moment to write down the identification information specific to your generator in the spaces provided on the inside cover of this Owner's Manual. You can find this information on generator's name plate, located on rear side of generator (see illustration below).

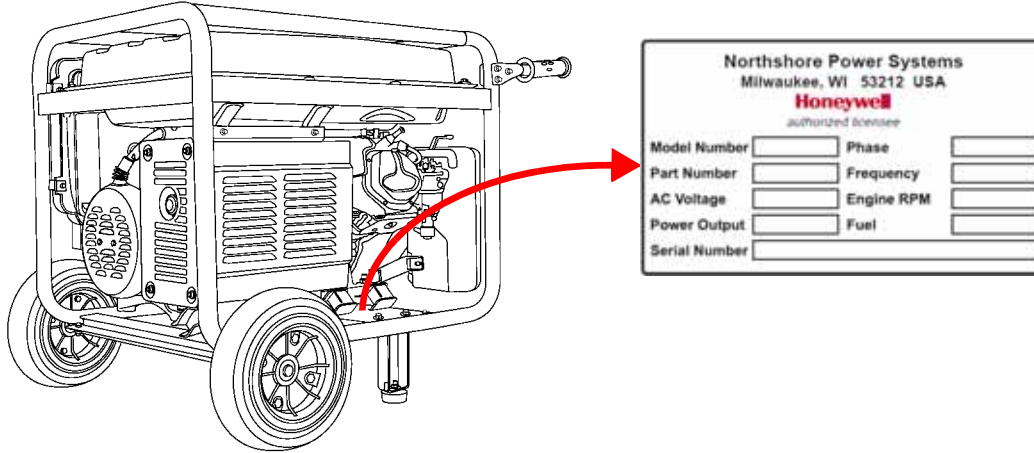




FIGURE 1: Generator Name Plate Location

Assembly

⚠ CAUTION	
	Generator must be empty of engine oil and fuel. Drain engine oil and fuel, if necessary.
	Generator is heavy! Lifting generator can cause back or other bodily injury. NEVER lift generator without assistance.

Wheel Kit

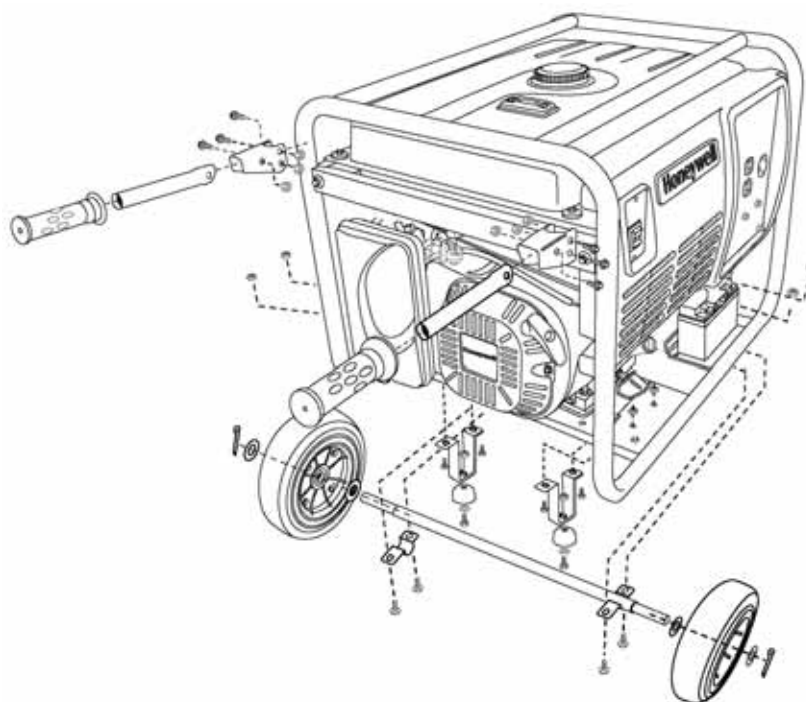


FIGURE 2: Wheel Assembly Components

NOTE:

In order to install support legs and wheel assembly, you will need to either tilt generator on its side or elevate generator by placing solid wood pieces underneath unit.

NOTICE




- NEVER USE wheel kit on-road.
- Wheel kit is intended to be used specifically with this generator. NEVER use wheel kit for any other purpose.

Step 1: Install Support Legs

To install support legs, you will need:

- 25 mm full-thread hex bolts (2)
- 5/16" washers (2)
- 13 mm flange serrated nuts (6)
- 16 mm full-thread hex bolts (4)
- Socket Wrench with 10 mm Socket*

* Not included

⚠ CAUTION	
 	Generator must be empty of engine oil and fuel. Drain engine oil and fuel, if necessary.
	Generator is heavy! Lifting generator can cause back or other bodily injury. NEVER lift generator without assistance.

1. Be sure generator is set on flat, level surface.
2. Stand at side of generator **opposite** recoil starter handle. Grip frame; carefully pull up and push to tilt generator backward.

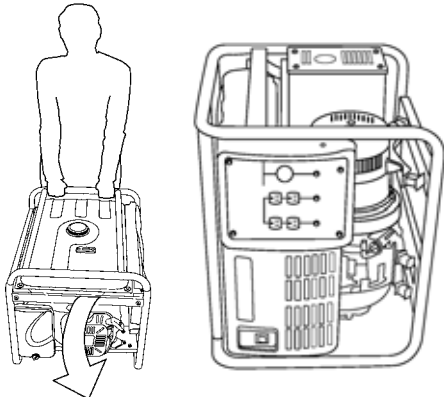


FIGURE 3: Tip onto Generator Recoil Side

3. Gently set generator onto recoil side.
4. Place 5/16" washer in center of each rubber stopper.

5. Attach a rubber stopper to bottom of each support leg using a 25 mm full-thread hex bolt and 13 mm flange serrated nut; tighten until securely seated.



FIGURE 4: Rubber Stopper Attachment to Support Leg

6. Attach each support leg to pre-drilled holes on bottom of generator frame, using 16 mm full-thread hex bolts and 13 mm flange serrated nuts; tighten until securely seated.

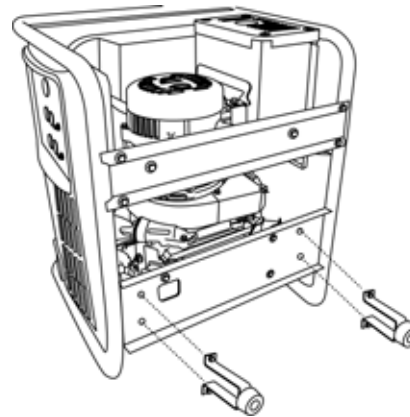


FIGURE 5: Support Leg Attachment to Generator

Step 2: Install Wheel Axle and Wheels

To install wheel assembly, you will need:

- Socket wrench with 10 mm socket*
- Needlenose Pliers*
- Wheel Axle (1)
- 16 mm full-thread hex bolts (4)
- 13 mm flange serrated nuts (4)
- Axle Bracket† (1)
- Wheels (2)
- 9/16" Washers (4)
- Cotter Pins (2)

* Not included.

† Two brackets are needed to install wheel axle. One bracket comes already attached to wheel axle; other bracket is included in wheel kit hardware bag.

1. Install wheel axle brackets to frame using 16 mm full-thread hex bolts and 13 mm flange serrated nuts.
 - 1A. Install pre-attached bracket to frame first.
 - 1B. Install other bracket (included in hardware bag) to frame.

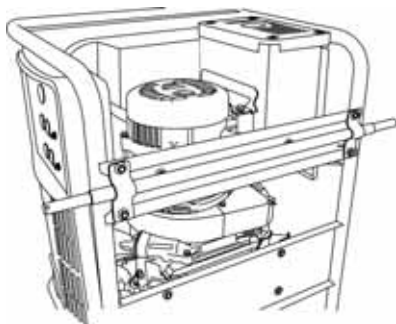


FIGURE 6: Wheel Axle Attached to Generator

On each end of axle:

2. Slide 9/16" washer onto axle.
3. Slide and push wheel onto axle until it fits snug against washer.

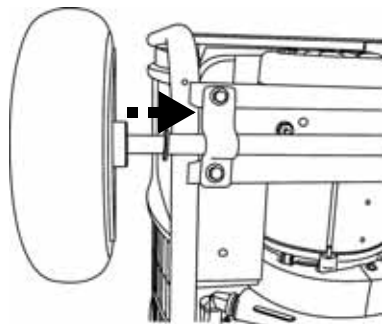


FIGURE 7: Slide Wheel onto Wheel Axle

4. Slide second 9/16" washer onto axle.
5. Slide cotter pin into pre-drilled hole until fully seated.
6. Using needlenose pliers, bend each end of cotter pin in opposing directions to secure wheel to axle.

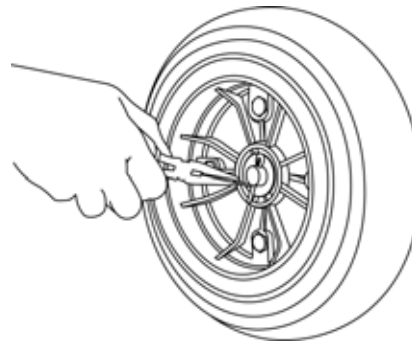


FIGURE 8: Cotter Pin Installation

7. Return generator in upright position (so that wheels and leg supports are touching ground).

Step 3: Install Handle Assembly

To install handle assembly, you will need:

- Handle Brackets (2)
- Handle Bars (2)
- Rubber Handle Grips (2)
- 40 mm Washer Style Hex Bolts (6)
- 10 mm flange serrated nuts (6)
- Socket wrench with 8mm socket*

* Not included

1. Hold handle bracket over pre-drilled holes on frame as shown in Figure 9.

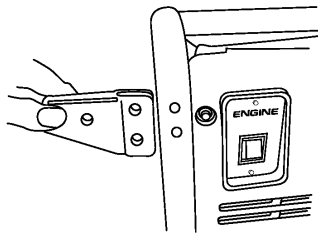


FIGURE 9: Handle Bracket to Frame

2. Attach bracket to frame using 40 mm washer style hex bolts and 10 mm flange serrated nuts; tighten until securely seated.
3. Slide handle bar through center of each bracket and line up bolt holes.

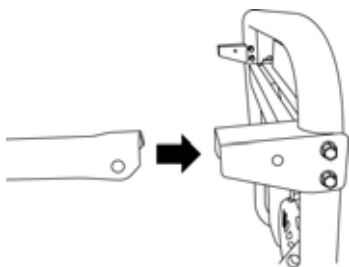


FIGURE 10: Insert Handle Bar to Bracket

4. Attach handle to each bracket using 40 mm washer style hex bolt and 10 mm flange serrated nut; tighten until securely seated.

NOTE:

Handle should stick straight out after tightening bolts and nuts. If handle seems to hang down, tighten bolts and nuts further.

5. Slide rubber handle grip onto each handle bar and push to achieve snug fit.

Once properly installed, the handles can be collapsed, if desired.

CAUTION	
	Hands and fingers can be pinched from collapsible handles.
<ul style="list-style-type: none"> • Keep hands and fingers clear from hinges when collapsing generator handles. 	

- **To collapse handles**, push firmly down on handle until it rests vertically against generator frame.
- **To return handles to horizontal position**, pull up on handle.

Grounding the Generator

WARNING	
	Generator must be grounded to prevent electrical shock from faulty appliances.
<ul style="list-style-type: none"> • Before using generator, consult a qualified electrician, electrical inspector, or local agency having jurisdiction for local codes or ordinances that apply to the intended use of generator. 	

Before using generator, a ground wire must be connected to the ground terminal (Figure 11).

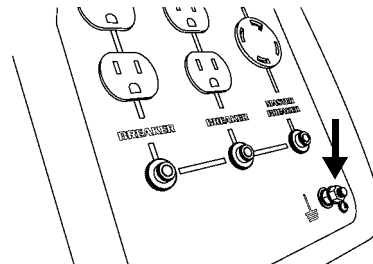


FIGURE 11: Ground Terminal

NOTE:



The system ground is not connected to AC neutral wire. If using a receptacle tester, it will not show same ground circuit condition as for a home receptacle.

Special Requirements

There may be Federal or State Occupational Safety and Health Administration (OSHA) regulations, local codes, or ordinances that apply to the intended use of generator. Please consult a qualified electrician, electrical inspector, or the local agency having jurisdiction.

- In some areas, generators are required to be registered with local utility companies.
- If generator is used at a construction site, there may be additional regulations which must be observed.

Using Generator for Backup Power

⚠ DANGER	
<p>Before connecting to building's electrical system, consult your local utility company or a qualified electrician. Improper connections to a building's electrical system can be deadly.</p>	
	<p>Electrical current from generator to feedback into utility lines. Such feedback may electrocute utility company workers or others who contact utility lines during a power outage.</p>
	<p>Electrical current can feedback into generator. When utility power is restored, generator may explode, burn, or cause fires in building's electrical system.</p>

If you will be using generator for backup power, generator must be connected to building's electrical system through a transfer switch installed by a licensed electrician.

What is a transfer switch?

A transfer switch is a device that allows switching from utility power to emergency generator power. Transfer switch is either a manual switch, an automatic switch or a combination of manual and automatic. During a power outage, transfer switch isolates emergency circuits from utility line, allowing for efficient operation of generator without back-feeding onto utility.

THIS PAGE INTENTIONALLY LEFT BLANK

COMPONENTS

Use information provided in this section to become familiar with your generator's components.



The information below is provided for reference only. Refer to *Operation* section (page 15) for instructions on operating generator.

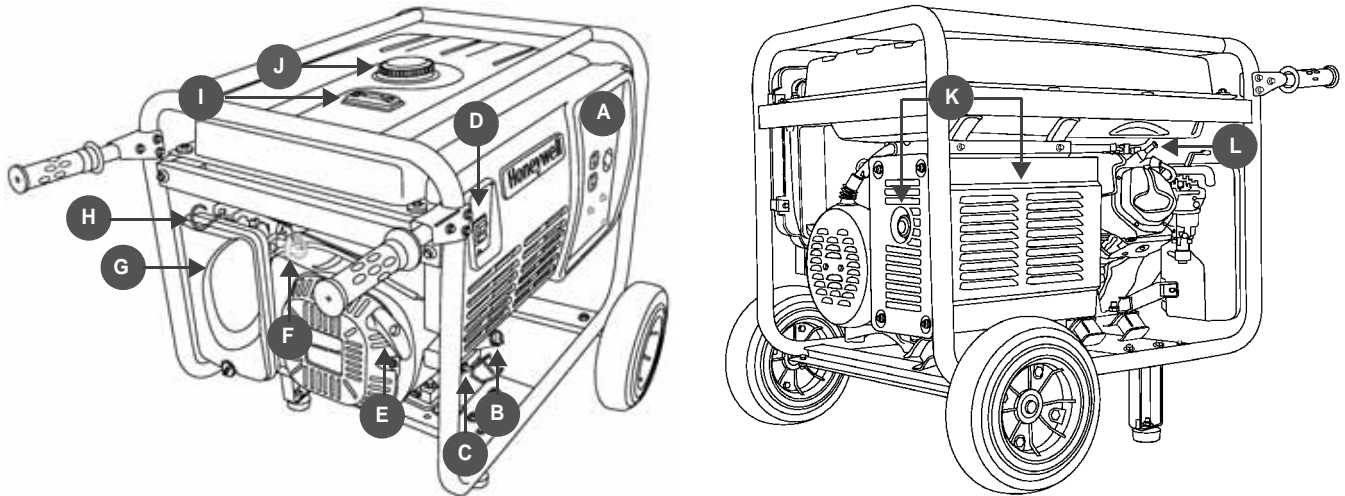


FIGURE 12: HW4000 Portable Generator


A—Power Control Center Household Outlets

120V 20 Amp Duplex outlets to connect 120V appliances to generator for power.

Generator Cord/ Transfer Switch


120V 20 Amp Twist-Lok outlet can be used to:

- Power 240V appliances using appropriate (L14-20) power cord (not included).
- Connect a transfer switch to building's main electrical system for backup power (see page 11).

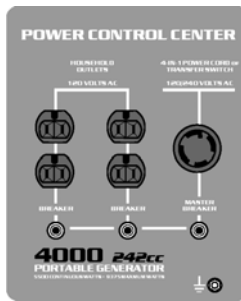

Breakers

Protects circuits from damage caused by overload or short-circuit by stopping flow of electricity between generator and appliance. Master circuit breaker controls power to all outlets. If there is no power at outlets, see *Troubleshooting* section.



Ground Terminal

Connects generator to ground wire for grounding protection.



Generator must be grounded to prevent electrical shock from faulty appliances. See page 10.

B—Engine Oil Fill Cap/Dipstick

Seals off engine oil fill hole and provides indicator for engine oil level.

C—Engine Oil Plug

When loosened, allows engine oil to drain from generator.

D—Engine Control Switch

Control used to run and stop the engine. Engine switch has two positions:

- **RUN**—Prepares engine for starting
- **STOP**—Stops generator engine

E—Recoil Starter Grip Handle

Starts engine.

F—Fuel Valve

Controls flow of fuel from fuel tank to carburetor.

G—Air Cleaner Assembly

Removes dust from engine intake air.

H—Choke Control

Controls choke valve. Choke control must be pulled out to ON position when starting a cold engine.

I—Fuel Gauge

Indicates level of fuel currently in fuel tank.

J—Fuel Tank Cap

Provides a secure seal on fuel tank.

K—Muffler Equipped with Spark Arrester

Provides outlet for engine exhaust. Prevents sparks and other combustible materials from escaping generator.



Muffler reaches temperatures that can cause serious burns if touched. NEVER touch hot surfaces.




L—Spark Plug Cap (Wire)

Delivers volts to spark plug. When spark plug needs service, cap must be removed.

THIS PAGE INTENTIONALLY LEFT BLANK



OPERATION

Preparing for Operation

 DANGER	
Using a generator indoors CAN KILL YOU IN MINUTES. Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.	
	
NEVER use inside a home or garage, EVEN IF doors and windows are open.	Only use OUTSIDE and far away from windows, doors, and vents.

Before starting generator, complete the following preparation tasks:

- Be sure generator is placed outdoors in a well ventilated area.** See “Generator Location”.
- Consult a licensed electrician or utility company if you will be using your generator for backup power.** The generator must be connected to building’s electrical system via a transfer switch. See “Using Generator for Backup Power” on page 11.



 DANGER	
	Before connecting to a building’s electrical system, consult utility company or qualified electrician. <ul style="list-style-type: none">• Connecting to a building’s electrical system without using a transfer switch can cause electrical current from generator to feed back into utility lines, resulting in death or serious injury to utility company workers or others who contact utility lines during a power outage.



- Check/add engine oil**— See “Engine Oil” on page 20. For initial start-up, follow instructions on oil container provided with generator.
- Check/add fuel***—See “Adding Fuel” on page 22.
- Be sure ground terminal is properly connected to earth ground**—See “Grounding the Generator” on page 10.
- Check extension cords**—be sure cords are:
 - In good condition.
 - Rated for outdoor use and match amp and voltage ratings of generator outlet.
 - Equipped with proper plugs that contain grounding blades.



* You must add fuel before using the generator for the first time. See “Adding Fuel” on page 22.

Generator Location



When deciding on the location to place your generator, keep in mind the following safety rules:

 DANGER	
	Depressed areas such as construction foundations, pools, or any low-lying areas, can cause carbon monoxide to accumulate. Inhalation of carbon monoxide can kill you in minutes. <ul style="list-style-type: none">• NEVER use generator inside homes, garages, crawl spaces, sheds, or similar enclosed spaces. Use generator only outdoors and far away from windows, doors, and vents.

 WARNING	
	If generator is placed on an uneven or flexible surface, generator could tilt or overturn, causing fuel to spill from gas tank. Spilled fuel could ignite. <ul style="list-style-type: none">• Place generator on firm, level surface and avoid loose sand or snow. If generator is tilted or overturned, fuel spillage may result. Also, if generator is overturned or sinks into a soft surface, sand, dirt, or water may enter generator.

 WARNING	
	NEVER operate generator in rain or snow, or when the generator is set on wet surface.

Starting Generator

 WARNING	
	Before starting generator, be sure to thoroughly read all information provided in this Owner’s Manual.

NOTICE	
It is very important to maintain proper level of engine oil to keep engine in good running condition. <ul style="list-style-type: none">• Check engine oil level prior to each use.	
Starting generator with appliances connected can cause permanent damage to appliances. <ul style="list-style-type: none">• NEVER start generator with electrical appliances plugged in and turned on.	

To start generator:

1. Be sure generator is placed outside, in well-ventilated area.

Stopping Generator

- Turn fuel valve to ON position.

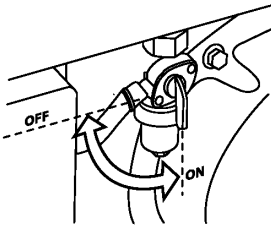


FIGURE 13: Fuel Valve Lever — ON/OFF position

- Pull choke control to ON position.

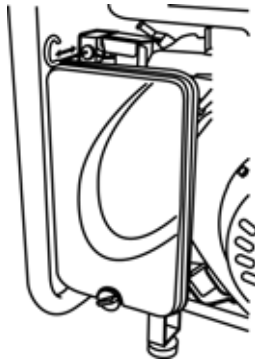


FIGURE 14: Choke Rod

- Press engine control switch to RUN position.



FIGURE 15: Engine Control Switch

- Grip recoil starter handle and pull slowly until you feel slight resistance.

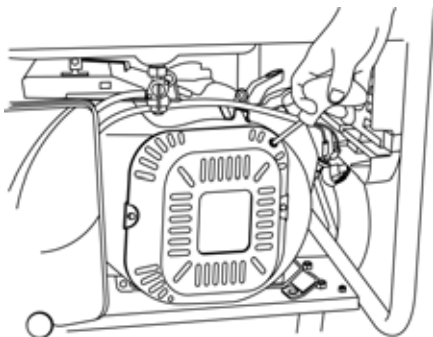


FIGURE 16: Recoil Starter Handle

- Apply a swift, single pull to start engine. Carefully return recoil starter handle to original position.

- As engine warms up, and RPM stabilizes, gradually push in choke control to OFF position.

NOTICE

To prevent damage to generator, do not allow starter grip to snap back against engine.

Stopping Generator

In an emergency:

Press and hold engine control switch to STOP position until engine stops.

In normal use:

- Turn OFF any connected appliances and unplug any connected power cords.
- Allow generator to run for 2-3 minutes.
- Press engine control switch to STOP position.
- Turn fuel valve to OFF position.

High Altitude Operation

At high altitudes, standard carburetor air-fuel mixture will be excessively rich. Performance will decrease and fuel consumption will increase.

High altitude performance can be improved by installing a smaller diameter main fuel jet in the carburetor and then readjusting the pilot screw. If you always operate the engine at altitudes higher than 5000 feet (1500 meters) above sea level, have an authorized generator dealer perform this carburetor modification.

Even with suitable carburetor jetting, engine horsepower will decrease approximately 3.5% for each 1000 foot (300 meter) increase in altitude. The effect of altitude on horsepower will be greater than this if no carburetor modification is made.

NOTICE

If engine jetted for high altitude is used at lower altitude, lean air fuel mixture will reduce performance and may over-heat and seriously damage the engine.

Powering Appliances

NOTE:


In this manual, the term “appliance” refers to any electrical device that can be connected to generator for power.

Rules for Powering Appliances

NOTICE

NEVER start generator with electrical appliances plugged in and turned on.

⚠ WARNING

 Faulty appliances and power cords can result in electrical shock.

- Before attempting to power an appliance, be sure generator has been properly grounded, and that appliance and power cord are in good working order.

- **Plan carefully:** Before using generator to power appliances, take time to add power rating (watts) of each appliance and verify that total wattage does not exceed rated output of generator. Power rating information can usually be found on an appliance's product label, or stamped inside or on back of appliance. See Table 1 for a listing of average appliance wattage requirements.
- **NEVER overload:** Circuit breakers will stop flow of electricity between generator and appliance if generator is overloaded. This will be indicated by a "tripped" breaker. If this happens, power off and disconnect appliance(s), wait a few minutes, and then push to reset circuit breaker.
- **Pay attention to appliance operation:** If appliance begins to operate abnormally, becomes sluggish, or stops suddenly, turn it OFF immediately. Disconnect appliance and determine whether problem is appliance, or if rated load capacity of generator has been exceeded.
- **Use suitable extension cords:** If using an extension cord to connect appliance to generator, use only UL-listed, three-prong extension cords. Be sure extension cord is proper size (wire-gauge) to handle electric load that will be plugged into it.

⚠ CAUTION

Do not run power cords under carpet, rugs, or other materials where heat might build up or cord damage may go unnoticed.

Appliance Wattage Information

Use table below as a guide to determine how much power you will need to run appliances using generator.

⚠ CAUTION

The values provided in following table are estimates only.

- ALWAYS verify actual wattage requirements for appliance you will be powering. Check labels inside or on the back of appliance, refer to appliance operating manuals, or contact appliance manufacturer.

Appliance	Typical Running Watts
Air Conditioner*	
• Central	3500

TABLE 1. Typical Appliance Running Wattages

Appliance	Typical Running Watts
• Window	500-1440
Aquarium	50-1210
Clock radio	10
Coffee maker	900-1200
Washing machine	350-500
Electric dryer	1800-5000
Iron	1000-1800
Dishwasher*	1200-2400 (using drying feature greatly increases energy consumption)
Dehumidifier*	785
Electric blanket (Single/Double)	60 / 100
Fans*	
• Ceiling	65-175
• Window	55-250
Furnace*	750
Hair dryer	1200-1875
Heater (portable)	750-1500
Microwave oven	750-1100
Personal computer	
• CPU - awake / asleep	120 / 30 or less
• Monitor - awake / asleep	150 / 30 or less
• Laptop	50
Radio (stereo)	70-400
Refrigerator* (frost-free, 16 cubic feet)	725
Sump pump*	
• 1/2 hp	2150
• 1/3 hp	2300
Television (color)	
• 19"	65-110
• 27"	113
• 36"	133
• 53"-61" Projection	170
• Flat screen	120
Toaster	800-1400

TABLE 1. Typical Appliance Running Wattages

Powering Appliances

Appliance	Typical Running Watts
Toaster oven	1225
VCR/DVD	17-21 / 20-25
Vacuum cleaner*	1000-1440
Water heater (40 gal)	4500-5500
Water pump* (deep well)	250-1100

TABLE 1. Typical Appliance Running Wattages

* Allow up to three times normal running watts for starting or cycling compressor of this appliance.

NOTICE

Starting appliances that have motors requires more power. Examples of motorized appliances include refrigerators, water pumps, and furnace blowers. Be sure that power rating of appliance does not exceed that of generator.


MAINTENANCE

Maintenance Schedule


Periodic maintenance and adjustment is necessary to keep generator in good operating condition. Perform service and inspection at intervals shown in *Generator Maintenance Schedule* (Table 2).

⚠ DANGER

Using a generator indoors **CAN KILL YOU IN MINUTES**. Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.



NEVER use inside a home or garage, EVEN IF doors and windows are open.



Only use **OUTSIDE** and far away from windows, doors, and vents.

- Shut off engine before performing any maintenance. If engine must be run, be sure area is well ventilated.

⚠ WARNING

Accidental starting of generator can cause severe injury or death. Before performing maintenance, disconnect spark plug cap from spark plug.

⚠ WARNING

Improper maintenance, or failure to correct a problem before operation, can cause a malfunction in which you can be seriously hurt or killed. Always follow inspection and maintenance recommendations and schedules in this owner's manual.

NOTICE

The maintenance schedule applies to normal operating conditions. If you operate generator under severe conditions, such as sustained high-load or high-temperature, or use it in unusually wet or dusty conditions, consult your servicing dealer for recommendations applicable to your individual needs and use.

MAINTENANCE TASK	FREQUENCY*				
	Before each use	First month or 20 hours of use	Every 3 months or 50 hours of use	Every 6 months or 100 hours of use	Every year or 200 hours of use
Check engine oil level	X				
Inspect for/clean debris	X				
Check air cleaner	X				
Clean air cleaner			X†		
Change engine oil		X		X	
Clean fuel sediment cup				X	
Check/clean spark plug				X	
Clean spark arrestor				X	
Check/adjust valve clearance					X‡
Clean fuel tank and strainer					X‡
Check fuel line	Every 2 years (replace if necessary)‡				

TABLE 2. Generator Maintenance Schedule

- * Perform at every indicated month or operating hour interval, whichever comes first.
- † Clean more often when using generator in dusty areas.
- ‡ It is recommended that this maintenance task be performed by a service dealer.

Engine Oil

NOTICE

Engine oil is a major factor affecting engine performance and service life. Non-detergent and 2-stroke engine oils will damage engine and are not recommended.

- Be sure to use engine oils specified under “Engine Oil Recommendations.”

It is very important to maintain proper level of engine oil to keep engine in good running condition.

- Check engine oil level prior to each use. Refill engine oil if oil level is too low.

Engine Oil Recommendations

Use 4-stroke oil, or equivalent high detergent, premium quality motor oil certified to meet or exceed U.S. automobile manufacturer's requirements for API Performance Class SL, SJ, or better.

SAE 10W-30 is recommended for general temperature use. Refer to Figure 17 for information on other viscosities that may be used. Other viscosities shown in chart may be used when average temperature in your area is within indicated range.

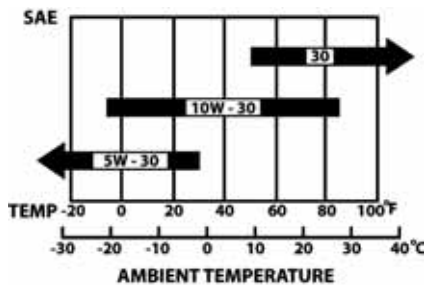


FIGURE 17: Recommended Oil Viscosity

Checking Engine Oil Level

To check engine oil level:

1. Stop generator if engine is running.
2. Be sure generator is set on flat, level surface.
3. Remove oil fill cap and wipe off dipstick end with clean cloth.
4. Insert oil fill cap to oil fill hole but do not screw in (Figure 18).
5. Pull out to read current oil level indicated on dipstick end.



FIGURE 18: Engine Oil Level

Oil level should be at “H” or somewhere between the “L” and “H”.




FIGURE 19: Engine Oil Level

- If oil level is at “L” or below, add recommended oil (see “Adding Engine Oil”). Do not overfill.
 - If oil level is at “H” or somewhere between the “L” and “H”, reinstall oil fill cap and fully tighten.
6. Reinstall oil fill cap and fully tighten.

Low Oil Protection

When engine oil level approaches an unsafe level, the low oil protection feature prevents equipment damage by automatically shutting down engine.

When engine shuts down due to low oil level:

- The engine start switch will remain in RUN position.
- You will not be able to start engine until you add required amount of engine oil.

Adding Engine Oil

NOTE:

For initial start-up, follow instructions provided on engine oil bottle provided with generator.

1. Stop generator if engine is running.
2. Be sure generator is set on flat, level surface.
3. Remove oil fill cap.

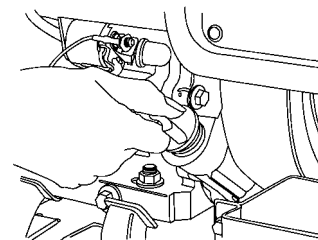


FIGURE 20: Oil Fill Cap Removal


4. Slowly pour oil into oil fill hole.
5. Check oil level.
6. Replace oil fill cap and fully tighten.

Changing Engine Oil

⚠ WARNING	
Frequent or prolonged contact with engine oil may cause skin cancer.	
<ul style="list-style-type: none"> Immediately after handling engine oil, thoroughly wash hands and any areas of skin exposed to engine oil, with soap and water. 	

⚠ WARNING	
To change engine oil, you will need:	
<ul style="list-style-type: none"> <input type="checkbox"/> Socket wrench with 12 mm socket <input type="checkbox"/> Oil drain pan or other container suitable for holding engine oil <input type="checkbox"/> Clean cloth <input type="checkbox"/> Unused engine oil (SAE type indicated in Figure 17) 	

1. Be sure generator is placed on flat, level surface.
2. Start engine and run until warm.
3. Stop engine.

⚠ WARNING	
	<p>Crankcase pressure can cause hot engine oil to spray out of engine fill hole. Hot engine oil can cause severe burns.</p>
<ul style="list-style-type: none"> ALWAYS stop engine before removing oil fill cap. 	

4. Place oil pan, or other container suitable for holding engine oil, underneath generator.

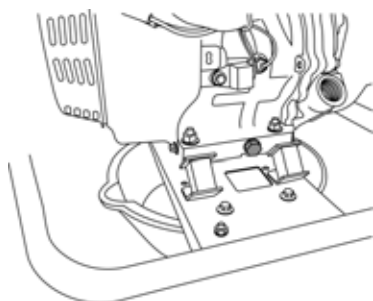


FIGURE 21: Oil Drain Bolt

5. Keep oil fill cap on initially to avoid having oil spray out too fast.

6. Using a socket wrench with 12 mm socket, loosen drain plug bolt; remove drain bolt and sealing washer.

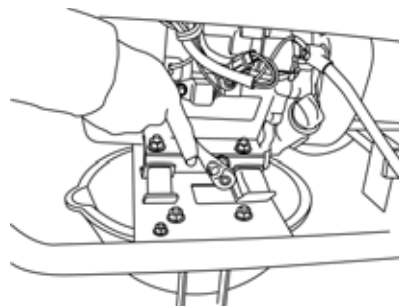


FIGURE 22: Loosen Oil Drain Bolt

7. Allow oil to drain into oil pan or container.
8. Slowly unscrew and remove oil fill cap.

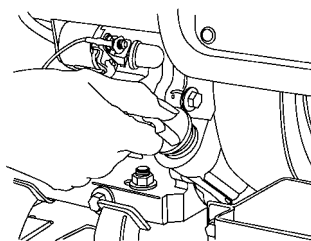


FIGURE 23: Remove Oil Fill Cap

9. Allow oil to completely drain into oil pan or container.

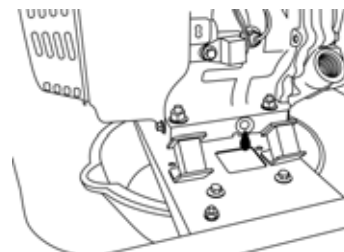


FIGURE 24: Oil Draining from Generator

10. Using clean cloth, wipe around oil fill and drain plug areas to clean any dirt and debris.
11. Reinstall sealing washer and drain plug bolt.
12. Pour new (unused) engine oil into oil fill hole. (See Figure 17 for recommended oil type). Do not overfill.
13. Check oil level.

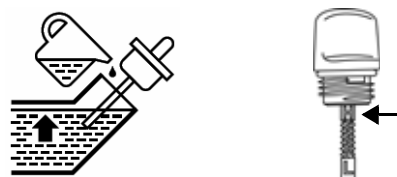


FIGURE 25: Engine Oil Dipstick—Oil Level Indicator

Adding Fuel




14. Reinstall oil fill cap and tighten until fully seated.

NOTE:

Dispose of used motor oil according to guidelines established by your local or state government.

Adding Fuel

Before each use, check fuel gauge on fuel tank.
If fuel level is low, refill tank with recommended fuel.
NEVER OVERFILL.

 DANGER	
	Fuel and fuel vapors are extremely flammable and explosive under certain conditions.
	<ul style="list-style-type: none">• Refuel generator only outdoors, in a well-ventilated area.• NEVER fill fuel tank while engine is running. Turn generator OFF and allow to cool before filling with fuel.• NEVER smoke or allow flames or sparks near generator or where gasoline is stored.• NEVER overfill fuel tank (no fuel should be in filler neck). After refueling, be sure fuel tank cap is closed properly and securely.• Be careful not to spill fuel when refueling. Spilled fuel or fuel vapor may ignite. If any fuel is spilled, be sure area is dry before starting engine.• Avoid repeated or prolonged contact with skin or breathing of vapor.

General Fuel Information

Check fuel gauge located on the top of generator near fuel tank and refill tank if fuel level is low. Refuel carefully to avoid spilling fuel. Do not fill above the shoulder of fuel strainer. Use unleaded gasoline with a pump octane rating of 87 or higher.

Never use stale or contaminated gasoline. Avoid getting dirt or water in the fuel tank. Always keep fuel strainer in place while refueling.

Oxygenated Fuels

At certain times of the year, some U.S. locations may have only oxygenated fuel available. Oxygenated fuel is blended with alcohol or ether additives to increase octane quality, enhance combustion, and reduce exhaust emissions.

Some areas of the United States use oxygenated fuels to help meet clean air standards.

Before using an oxygenated fuel:

- Be sure pump octane rating is 87 or higher.

- Try to confirm contents of fuel.

Some states (and provinces in Canada) require this information to be posted on the fuel pump. If you notice undesirable operating symptoms, switch to a conventional unleaded gasoline.

NOTICE

Oxygenated fuels can damage paint and plastic. Be careful not to spill fuel when filling fuel tank. Damage caused by spilled fuel is not covered under warranty.

TABLE 3. Oxygenated Fuel Types

Ethanol (ethyl or grain alcohol)	Gasoline containing more than 10% ethanol by volume may cause starting or performance problems. Gasoline containing ethanol may be marketed under the name "Gasohol".
Methanol (methyl or wood alcohol)	Gasoline containing methanol must contain co-solvents and corrosion inhibitors to protect fuel system. Gasoline containing more than 5% methanol by volume may cause starting and/or performance problems and may damage metal, rubber and plastic parts of fuel system.
MTBE (methyl tertiary butyl ether)	You can use gasoline containing up to 15% MTBE by volume.

Fuel Recommendations

NOTICE

To avoid damage to engine, never use stale or contaminated gasoline or oil/gasoline mixture. Avoid getting dirt or water in fuel tank.

Use fresh gasoline with a pump octane rating of 87 or higher.

To add fuel to generator:

1. Stop generator if engine is running. Allow to completely cool.
2. Be sure generator is set on flat, level surface.
3. Remove fuel tank cap.

- Slowly pour gasoline into fuel tank. Be careful not to overfill.

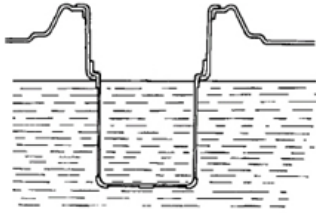


FIGURE 26: Fuel Level

- Reinstall fuel tank cap and fully tighten.

NOTE:

Occasional, light spark knock, "pinging", or rattling noise is normal while operating under heavy loads. If spark knock, pinging, or rattling occurs at a steady engine speed, under normal load, drain fuel (page 27) and refill with fresh gasoline. If noise persists, see an authorized generator dealer.

NOTICE

Running engine with persistent spark knock or pinging can cause engine damage. Warranty does not cover parts damaged by misuse.

Air Filter Maintenance

NOTICE

A dirty air filter will restrict air flow to carburetor, which may cause poor engine performance or damage. Never run the generator without air cleaner assembly properly attached.

Clean air cleaner filter every 50 hours of generator operation. If operating generator in extremely dusty areas, clean air filter more frequently.

WARNING



Gasoline and flammable solvents can cause fire or explosion. NEVER use gasoline or flammable solvent to clean air cleaner element.

- Use only household soap and water to clean air cleaner element.

To clean air filter, you will need:

- Household soap and water
- Clean, dry cloth
- Clean engine oil

- Stop engine if it is running.

- Remove air cleaner cover.



FIGURE 27: Air Cleaner Cover

- 2A. Turn thumbscrew counterclockwise to loosen and remove.
- 2B. Push upward at bottom of cover to release plastic tabs.



FIGURE 28: Air Cleaner Cover—Release Tabs

- Pull out foam air filter.

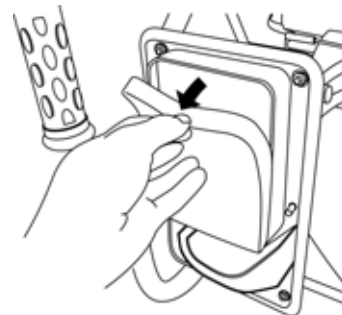


FIGURE 29: Air Filter Removal

- Wash air filter in a solution of household soap and warm water.
- Rinse air filter thoroughly.
- Using a clean, absorbent cloth, squeeze air cleaner element dry, being careful not to twist or tear the filter.

Cleaning Fuel Sediment Cup

- Soak air filter in clean engine oil and squeeze out excess oil.

CAUTION

Frequent or prolonged contact with engine oil may cause skin cancer.

- Thoroughly wash hands and any areas of skin exposed to used oil with soap and water.

NOTE:

Engine will smoke during initial start-up if too much oil is left in filter.

- Reinstall air filter.
- Reinstall air cleaner cover and tighten thumbscrew.

Cleaning Fuel Sediment Cup

The sediment cup prevents any dirt or water that may be in the fuel tank from entering the carburetor.

Clean fuel sediment cup at the intervals specified in Table 2.

To clean fuel sediment cup, you will need:

- Socket wrench with 10 mm socket
- Household soap and water
- Clean, dry cloth

To clean fuel sediment cup:

- Stop engine if it is running.
- Be sure generator is set on flat, level surface.
- Turn fuel valve to OFF position.
- Using a socket wrench with 10 mm socket, remove fuel sediment cup assembly (sediment cup, o-ring, and fuel screen).

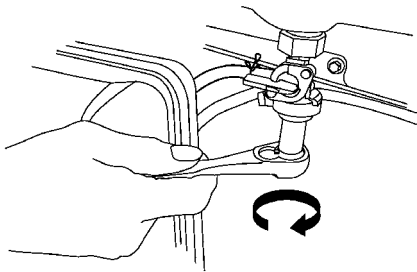


FIGURE 30: Fuel Sediment Cup Assembly Removal

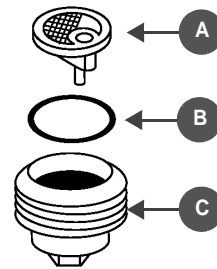


FIGURE 31: Fuel Sediment Cup Assembly Pieces

- Clean fuel screen (A), o-ring (B), and sediment cup (C), with soap and water.
- Wipe pieces clean with clean, dry cloth.
- Reinstall sediment cup, o-ring, and fuel filter.
- Turn fuel valve to ON position and check for leaks.

Spark Plug Service

To ensure proper engine operation, spark plug must be properly gapped and free of deposits.

WARNING



If engine has been running, muffler will reach temperatures that could cause severe burns. Do not touch.

Recommended Spark Plug Replacement: 100842A *

Bosch	W20EPR
Champion	RN9YC
Denso	WR7DC

TABLE 4. Spark Plug Equivalents to 100842A

To service spark plug, you will need:

- Clean cloth
- 13/16" Spark plug socket wrench
- New spark plug (if existing spark plug is excessively worn or damaged)
- Wire brush
- Wire feeler gauge (for setting spark plug gap to correct size)

- Stop engine if it is running.
- Be sure generator is set on flat, level surface.

* See *Maintenance Parts* at end of this manual.

3. Remove spark plug cap.

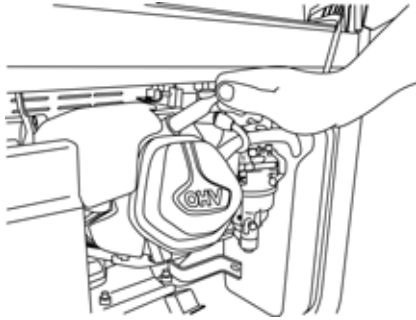


FIGURE 32: Spark Plug Cap Removal

4. Clean any dirt from around spark plug base.
5. Carefully pull off spark plug cap.
6. Using a 13/16" spark plug socket wrench, loosen and remove spark plug.



FIGURE 33: Spark Plug Removal

7. Inspect spark plug.
 - If spark plug is damaged or excessively worn, or if insulator is cracked or chipped use a new spark plug.
 - If spark plug is in good condition, reuse existing spark plug.
8. If reusing spark plug, clean spark plug with wire brush.
9. Measure spark plug gap with wire feeler gauge. Gap should be: (0.028-0.031 in) (0.70-0.80 mm).

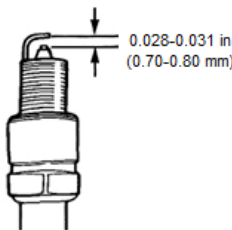


FIGURE 34: Correct Spark Plug Gap

10. If necessary, adjust gap by carefully bending side electrode.

11. Inspect spark plug washer and verify it is in good condition.
12. Reinstall spark plug by hand to prevent cross-threading.
13. After spark plug is seated, tighten with spark plug wrench to compress washer.
 - If installing a new spark plug, tighten 1/2 turn after the spark plug seats to compress the washer.
 - If reinstalling a used spark plug, tighten 1/8 - 1/4 turn after the spark plug seats to compress the washer.

NOTICE

Spark plug must be securely tightened. An improperly tightened spark plug can become very hot and could damage engine. Never use spark plugs that have an improper heat range. Use only recommended spark plugs or equivalent.

Cleaning Spark Arrestor Screen

WARNING

Muffler reaches temperatures that can cause serious burns if touched. NEVER touch hot surfaces.

Generator muffler is equipped with spark arrestor screen, which must be cleaned according to maintenance schedule (Table 2) to ensure prevention of sparks escaping generator.

To clean spark arrestor screen, you will need:

- Socket wrench with 8 mm socket
- Phillips head screwdriver
- Wire brush

1. Stop generator if engine is running. Allow to completely cool.
2. Be sure generator is set on flat, level surface.
3. Using a socket wrench with 8 mm socket, remove spark arrestor enclosure panel bolts.

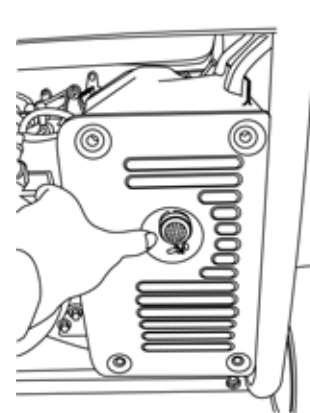


FIGURE 35: Remove Spark Arrestor Enclosure Panel

- Pull off enclosure panel.

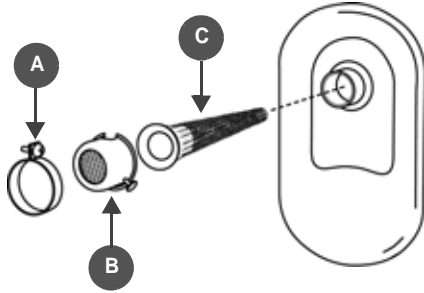


FIGURE 36: Spark Arrestor Assembly

- Using a screwdriver, loosen and remove screw holding spark arrestor clamp (A).
- Slide off spark arrestor clamp.
- Using a screwdriver, loosen and remove retaining screw on park arrestor screen cap (B); pull off cap.
- Pull out spark arrestor screen (C).
- Inspect spark arrestor screen.
 - If screen is damaged or excessively worn, replace with new screen.
 - If screen is in good condition, clean using wire brush and then reinstall.
- Reinstall remaining spark arrestor components.
 - Spark arrestor cap
 - Retaining screw
 - Clamp and screw
 - Spark arrestor enclosure panel

Transporting Generator

⚠ WARNING	
	Hot engine or exhaust system can cause serious burns or fires. Cool generator completely before transporting or storing.

When transporting the generator:

- Press engine control switch to OFF position.
- Turn fuel valve lever to OFF position.
- Keep generator level to prevent fuel spillage.

NOTICE	
To avoid damage to generator, take care not to drop or strike generator when transporting. Do not place heavy objects on generator.	

Storing Generator

NOTICE	
Follow service procedures for preparing generator for storage. Inadequate or improper care of generator can result in damage to generator components and will void limited warranty.	

Before storing generator for extended period of time:

- Be sure storage area is free of excessive humidity and dust.
- Refer to Table 5 for recommended preparation procedures.

Storage Time	Recommended Preparation
Less than 1 month	No preparation required.
1 to 2 months	Fill fuel tank with fresh gasoline and add gasoline conditioner*.
2 months to 1 year or more	See procedure below.

TABLE 5. Recommended Service Procedures Based on Storage Time

* Use gasoline conditioners formulated to extend storage life. Contact authorized generator dealer for conditioner recommendations.

To prepare generator for long-term storage:

⚠ DANGER	
	Fuel and its vapors are extremely flammable and explosive under certain conditions.
	<ul style="list-style-type: none"> Refuel generator only outdoors, in well-ventilated area. NEVER fill fuel tank while the engine is running. Shut engine OFF and allow to cool before filling with fuel. NEVER smoke or allow flames or sparks near generator or where gasoline is stored.

- Drain fuel into suitable container (see page 27).
- Change engine oil (see page 21).
- Remove spark plug. Add a tablespoon of clean engine oil into spark plug hole.
- Place rag over spark plug hole and pull recoil starter handle slowly to turn engine and distribute oil. Reinstall spark plug.

At this point, the piston is coming up on its compression stroke and both intake and exhaust valves are closed. Storing engine in this position will help to protect it from internal corrosion.

Draining Fuel

1. Turn fuel lever to OFF position.
2. Run engine until it stops due to lack of fuel.
3. Place suitable container underneath drain hole to catch fuel.
4. Loosen bolt (underneath fuel sediment cup).

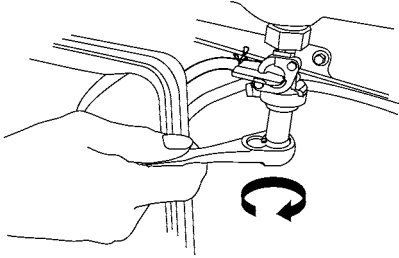


FIGURE 37: Loosen Bolt to Drain Fuel

5. Turn fuel lever to ON position.

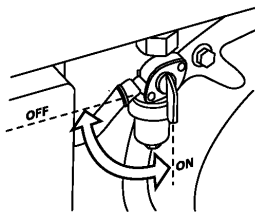


FIGURE 38: Fuel Valve Lever — ON/OFF position

6. Allow fuel to drain into container.
7. To ensure all fuel is drained, carefully tip generator by pulling up on frame at side opposite of recoil starter handle.

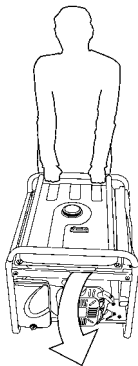


FIGURE 39: Tip Generator to Completely Drain Fuel

8. Allow fuel to completely drain into container.
9. When ready to put generator back into operation, refill with fresh fuel (see page 22).

THIS PAGE INTENTIONALLY LEFT BLANK

TROUBLESHOOTING

⚠ WARNING



ANYONE using or servicing generator must read, understand, and follow all safety and operation instructions provided in the product manual. Failure to closely follow these instructions can result in circumstances leading to death, serious injury, and property damage.

⚠ DANGER

Using a generator indoors CAN KILL YOU IN MINUTES.

Generator exhaust contains carbon monoxide. This is a poison you cannot see or smell.



NEVER use inside a home or garage, EVEN IF doors and windows are open.



Only use OUTSIDE and far away from windows, doors, and vents.

📖 NOTE:

For all customer service inquiries, call 1-888-494-3571 or visit www.honeywellgenerators.com.

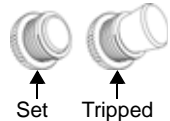
PROBLEM	PROBABLE CAUSE	SOLUTION
Engine will not start or starts and runs rough.	<ol style="list-style-type: none"> ❶ No fuel. ❷ Stale fuel. ❸ No engine oil. ❹ Spark plug wire (cap) disconnected. ❺ Faulty/bad spark plug. ❻ Fuel not reaching carburetor. ❼ Dirty air cleaner. ❽ Dirty spark arrestor screen. 	<ol style="list-style-type: none"> ❶ Add fuel (page 22). ❷ Drain fuel tank; fill with fresh fuel (page 27). ❸ Add engine oil (page 20). ❹ Install spark plug cap over spark plug. ❺ Check/replace spark plug (page 24). ❻ Clean fuel sediment cup (page 24). ❼ Clean or replace air cleaner (page 23). ❽ Clean spark arrestor screen (page 25)
Engine suddenly stops.	<ol style="list-style-type: none"> ❶ No fuel. ❷ No engine oil. 	<ol style="list-style-type: none"> ❶ Add fuel (page 22). ❷ Add engine oil (page 20).
No power at AC receptacle	<ol style="list-style-type: none"> ❶ Electrical overload on generator. ❷ Poor connection or defective cord set. ❸ Connected electrical appliance/equipment is defective. 	<ol style="list-style-type: none"> ❶ Check all circuit breakers* for "tripped" position. Reduce electrical load on circuit, wait 3 minutes, and then push to reset circuit breaker. <div style="display: flex; justify-content: center; align-items: center; margin-top: 10px;">  </div> ❷ Check cord connection. Replace defective cord set. ❸ Check electrical appliance/equipment for defects. Disconnect defective appliance/equipment from the generator. Have appliance serviced by qualified repair facility.

TABLE 6. Troubleshooting — Probable Causes and Solutions

* Master circuit breaker controls power to all receptacles. Be sure to check master breaker even if you are trying to power from a duplex outlet.

THIS PAGE INTENTIONALLY LEFT BLANK

SPECIFICATIONS

GENERATOR		
Dimensions*		
	Length	27 inches (685.8 mm)
	Width	21.5 inches (546.1 mm)
	Height	21.5 inches (546.1 mm)
	Dry Weight	155 pounds (70.3 kg)
AC Output		
	Continuous (Rated) Power	4000 Watts
	Maximum Power	5000 Watts
	Surge Power	6000 Watts
	Frequency	60 Hz
	Voltage	120/240 Volts
Operating Temperature		
	Maximum	104° F (40° C)
	Minimum	-10° F (-23° C)
ENGINE		
	Speed (RPM)	3600
	Type	OHV 4-Cycle
	Displacement	242 cc
	Fuel Tank Capacity	6.5 Gallons (24.6 L)
	Engine Oil Capacity	1.1 qt (1.1 L)
	Spark Plug Type	100842A
	Spark Plug Gap	0.028-0.031 inches (0.70-0.80 millimeters)

TABLE 7. HW4000 Portable Generator Specifications

* Measurements given do not reflect dimensions with wheel kit installed to generator.

THIS PAGE INTENTIONALLY LEFT BLANK

WARRANTIES

NORTHSHORE POWER SYSTEMS EMISSIONS CONTROL WARRANTY

Honeywell Portable Generator

WARRANTY STATEMENT

US Environmental Protection Agency (EPA) requires manufacturers of small off-road engines (SORE) to warranty their products with a 2 year warranty for those components that are specified as being part of the emission control system. Northshore Power Systems, LLC (NSP), the California Air Resources Board (CARB) and the EPA offer the following explanation of the Emission Control Warranty.

In the United States and California, new small off-road engines must be designed, built, and equipped to meet stringent anti-smog standards. NSP must warrant the emission control system on your small off-road engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your small off-road engine. The emissions warranty is a defects warranty and is not related to an in-use emissions test.

Your emission control system may include parts such as the carburetor or fuel injection system, the ignition system, and the catalytic converter. Also included may be hoses, belts, connectors and other emission-related assemblies.

Where a warrantable condition exists, NSP will repair your small off-road engine at no cost to you, including diagnosis, parts, and labor.

COVERAGE

Emissions control parts on the engine are warranted for a period of two years, subject to provisions set below. If any covered part on your engine is defective, the part will be repaired or replaced by NSP.

OWNER'S RESPONSIBILITIES

You are responsible to maintain the engine as defined in your Honeywell Generator Owner's Manual. NSP recommends that you retain all records/receipts covering maintenance on your engine, but NSP cannot deny warranty claims based on the lack of receipts or for your failure to perform all scheduled maintenance. You may be denied warranty coverage if a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

You are responsible to bring your portable generator to an authorized NSP Honeywell generator dealer for repairs as soon as a problem exists. Do not return your generator to place of purchase for service. For emissions warranty service, contact your nearest dealer; a listing is available at www.honeywellgenerators.com or by calling 1-888-494-3571.

EMISSIONS CONTROL SYSTEMS PARTS

Coverage under this warranty extends only to the emissions control parts listed below.

1. Fuel metering system
 - A. Choke system
 - B. Carburetor
 - C. Fuel Pump (if equipped)
 - D. Fuel line, clamps, control valve
 - E. Fuel tank, cap and screen
 - F. Carbon Canister (if equipped)
2. Air Induction System
 - A. Air cleaner
 - B. Vent lines
 - C. Intake manifold
3. Ignition System
 - A. Spark Plug
 - B. Ignition coil
4. Exhaust System
 - A. Catalytic converter (if equipped)
 - B. Exhaust manifold
 - C. Air injection system (if equipped)
5. Miscellaneous Items used in above systems
 - A. Connectors and assemblies
 - B. Regulating valves and switches for vacuum, temperature, or position sensing (if equipped)

WARRANTY PROVISIONS

1. **Claims.** Warranty claims shall be filed in accordance with provisions of the NSP warranty and policies established with the authorized dealer network.
2. **Exclusions.** Warranty coverage shall be denied for failure of an emissions control part caused by abuse, neglect, improper maintenance as described in the Honeywell Generator Owner's Manual, use of add-on parts, modified parts, or parts that are not equivalent to original Honeywell generator parts in performance and durability.
3. **Length of Coverage.** NSP warrants to the original retail purchaser and each subsequent owner that the emissions control part shall be free from defects in materials and workmanship for a period of two years from the date the generator is delivered to the original retail customer.
4. **Repair or Replacement Cost.** Repair or Replacement Cost. Repair or replacement of any emissions control part will be performed at no charge to the owner, including diagnostic labor which leads to the determination that an emissions control part is defective, if the diagnostic work is performed at an authorized NSP Honeywell generator dealer.
5. **Consequential Coverage.** Coverage noted hereunder will extend to the failure of any engine components caused by the failure of any emissions control part still under warranty.
6. **Maintenance.** The emissions control parts are warranted only for defects during the warranty period. The warranty does not cover an emission control part that is replaced or repaired as required by the maintenance schedule defined in the Honeywell Generator Owner's Manual. Any replacement part that is equivalent in performance and durability may be used for maintenance or repairs.

QUESTIONS

If you have questions regarding your emissions warranty rights and responsibilities, you should contact the Warranty and Service department at NSP.

By phone: (414) 332-2375

Via web: www.honeywellgenerators.com

By US mail:

Northshore Power Systems, LLC
Attention: Product Warranty and Service Dept.
4425 N Port Washington Road
Suite 105
Milwaukee WI 53212-1082

NORTHSHORE POWER SYSTEMS LIMITED WARRANTY

Honeywell Portable Generator

Effective April 1, 2008

LIMITED WARRANTY

Northshore Power Systems, LLC, (NSP) will repair or replace, free of charge, to the original retail customer, in North America, any parts of the portable generator found by NSP or an authorized service center to be defective in material or workmanship. This limited warranty covers the cost of the replacement parts and labor for defects. Transportation charges are the responsibility of the customer. This limited warranty has time period conditions, operating conditions and disclaimers, limitations of remedies & exclusions as stated below. For warranty service, customer should locate an authorized Honeywell Generator Dealer from www.honeywellgenerators.com or by calling 1-888-494-3571.

LIMITED WARRANTY PERIODS

Consumer Use: 3 Years Limited. 1st year, parts and labor. 2nd & 3rd years, parts only.

Commercial Use: 1 Year Limited. No warranty for rental use.

Commencement and Definitions. The limited warranty period begins on the date of retail purchase by the original purchaser. The limited warranty is not transferable. "Consumer use" is personal use by a retail customer. "Commercial use" is any usage for income producing, business related use.

No Extension of Warranty. Repair or replacement pursuant to this limited warranty shall not renew or extend the original warranty period, and any repaired product shall be warranted for the remaining original warranty period only.

DISCLAIMERS, LIMITATIONS OF REMEDIES & EXCLUSIONS

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

DISCLAIMER OF OTHER WARRANTIES. TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAW, THIS LIMITED WARRANTY IS EXCLUSIVE AND EXPRESSLY IN LIEU OF ANY AND ALL OTHER WARRANTIES, INCLUDING, WITHOUT LIMITATION, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR ANY OTHER IMPLIED WARRANTIES THAT MAY ARISE FROM A COURSE OF DEALING OR USAGE OF TRADE. NSP HEREBY DISCLAIMS AND EXCLUDES ALL OTHER WARRANTIES. To the extent that NSP's products are consumer products under applicable federal or state law with respect to any customer, the duration of any implied warranties (including, but not limited to, implied warranties of merchantability or fitness for a particular purpose) are limited to the shortest duration permitted by applicable law or the limited warranty period provided herein, whichever is longer.

LIMITATIONS OF REMEDIES. NSP SHALL NOT BE LIABLE TO CUSTOMER, OR TO ANYONE CLAIMING UNDER

CUSTOMER, FOR ANY OTHER OBLIGATIONS OR LIABILITIES, INCLUDING, BUT NOT LIMITED TO, OBLIGATIONS OR LIABILITIES ARISING OUT OF BREACH OF CONTRACT OR WARRANTY, NEGLIGENCE OR OTHER TORT OR ANY THEORY OF STRICT LIABILITY, WITH RESPECT TO THE GENERATOR OR NSP'S ACTS OR OMISSIONS OR OTHERWISE. TO THE FULLEST EXTENT PERMITTED BY APPLICABLE LAW, NSP SHALL NOT, IN ANY EVENT, BE LIABLE FOR INCIDENTAL, COMPENSATORY, PUNITIVE, CONSEQUENTIAL, INDIRECT, SPECIAL OR OTHER DAMAGES, INCLUDING BUT NOT LIMITED TO LOSS OF USE, LOSS OF INCOME, LOSS OF TIME, LOSS OF SALES, INJURY TO PERSONAL PROPERTY, OR LIABILITY CUSTOMER INCURS WITH RESPECT TO ANY OTHER PERSON, OR ANY OTHER TYPE OR FORM OF CONSEQUENTIAL DAMAGE OR ECONOMIC LOSS.

EXCLUSIONS. In addition to the foregoing disclaimers, limitations and terms, this limited warranty shall not apply to and does not cover accessories, nor does it cover products that are in any way subjected to: (i) improper setup, installation or storage; (ii) lack of proper maintenance and service; (iii) accident, damage, abuse or misuse; (iv) abnormal operating conditions or applications; (v) repair or modification by customer or any third party without prior written consent of NSP; (vi) use under operating conditions or in applications not made known to or contemplated by NSP; or (viii) acts of God. The application of these exclusions will be determined at NSP's sole discretion.

REGISTRATION

Warranty registration with the Company is required on all products. You may send in the enclosed warranty card, or register your product on-line at www.honeywellgenerators.com.

Warranty is also available by keeping and showing your original receipt from date of purchase to an authorized Honeywell Generator Dealer.

GENERATOR SERVICE

Do not return your generator to place of purchase for service. For all customer service inquiries, call 1-888-494-3571 or visit www.honeywellgenerators.com.

Warranty inquiries can be addressed to:

Northshore Power Systems, LLC
Attention: Product Warranty and Service Dept.
4425 N Port Washington Road
Suite 105
Milwaukee WI 53212-1082

THIS PAGE INTENTIONALLY LEFT BLANK

INDEX

A

- Air Filter
 - maintenance 23
- Appliances
 - powering 16
 - rules for powering 16
 - wattage information 17
- Assembly
 - handle 10
 - wheels 9

C

- Checklist
 - generator shipment 5
- Components and Controls
 - breakers 13
 - choke control 13
 - engine switch 13
 - fuel valve 13
 - outlets
 - Household 13
 - recoil starter grip 13
 - spark plug cap 13

D

- Damage
 - inspecting for 5
- Draining Fuel 27

E

- Engine Oil
 - changing 21
- Engine Switch 13

F

- Fuel
 - adding 22
 - draining 27
 - oxygenated
 - types 22
 - recommendations 22
- Fuel Sediment Cup
 - cleaning 24
- Fuel Valve 13

G

- Generator
 - location 15
 - nameplate information 6
 - operation 15
 - outlets 13
 - safety labels 3
 - specifications 31
 - starting 15
 - stopping 16
 - storing 26
 - transporting 26

- unpacking guidelines 5
- warranty 35
- Ground 10
 - special requirements 10
 - terminal 13

H

- Handles
 - installing 10
- High Altitude
 - operation 16

M

- Maintenance 19
 - air filter 23
 - changing engine oil 21
 - cleaning spark arrestor 25
 - fuel sediment cup 24
 - parts listing 39
 - schedule 19
 - spark plug 24

O

- Operation
 - high altitude 16
 - preparing for 15
- Outlets
 - Generator Cord/Transfer Switch 13
 - Household 13

P

- Power Control Center 13
 - ground terminal 13
 - Household Outlets 13

S

- Safety
 - labels 3
- Spark Arrestor
 - cleaning 25
- Spark Plug
 - servicing 24
- Specifications 31
- Stopping Generator 16
- Storage
 - recommendations 26

T

- Transfer Switch
 - for backup power 11
 - outlet 13
- Troubleshooting 29

U

- Unpacking guidelines 5

W

- Warranty
 - emissions control 33
 - limited product 35
- Wattage
 - typical appliance 17
- Wheels
 - installing 9

HW4000 MAINTENANCE PARTS

To order maintenance parts, visit www.honeywellgenerators.com or call Customer Hotline at 1-888-494-3571.

Part Name	Part Number
Air Cleaner Assembly	100832A
Air Filter	100833A
Fuel Cap	100834A
Fuel Shut-Off Valve	100835A
Fuel Strainer	100836A
Handle Bar	100846A
Ignition Coil	100837A
Oil Fill Cap/Dipstick	100841A
Recoil Assembly	100839A
Recoil Rope and Handle	100840A
Rubber Handle Grip	100847A
Smart Start Card	100848A
Spark Arrestor	100843A
Spark Plug	100842A
Wheel	100844A
Wheel Handle Pivot Bracket	100845A

HW4000 Maintenance Parts List

For part numbers of replacement product labels, see page 3

Northshore Power Systems, LLC
4425 N. Port Washington Rd., Suite 105
Milwaukee, WI 53212-1082 USA
TEL 1-888-494-3571

www.honeywellgenerators.com

HW4000 – P/N: 100901A
March 2008
© 2008 Northshore Power Systems, LLC

The Honeywell Trademark is used under license
from Honeywell International Inc.

Honeywell International Inc. makes no representation
or warranties with respect to this product

Honeywell